

FOUREVER 4-DOOR G91626 – G91624 SERVICE MANUAL



REVISION HISTORY

NO	REVISION	DATE
00	First publication	20.06.2016
01	U4 CONTROL BOARD DUMMY TOP TRIM DISPLAY SERVICE TEST COMPONENT DRIVE STEP and U4 CONTROL BOARD SMART TOP TRIM DISPLAY SERVICE TEST COMPONENT DRIVE STEP added	13.12.2018
02	GAS FLOW CHART WAS REVISED	04.03.2019
03	ERROR CODES UPDATED	03.05.2019
04	Display Grouping Method Added	27.08.2019
05		
06		
07		

1. GENERAL SAFETY WARNINGS	5
1.1.HCA warning	6
1.2.For products with water dispenser	6
1.3.Intended use	6
1.4.Child safety	6
1.5.Compliance with the WEEE directive and disposal of the waste product	6
1.6.Packaging information	6
1.7.Disposal of the waste product	6
2.GENERAL APPEARANCE OF THE PRODUCT	7
2.1.General Dimensions of the Product	8
2.2.Opened View of Product at 90°	10
2.3.Maximum Opened View of the Product	11
3. INSTALLATION	12
3.1.Handling Instructions	12
3.2.Installation Instructions	12
3.3.Appropriate place for installation	13
3.4.Installing the plastic wedges	13
3.5.Electrical Connection	14
3.6.Floor level adjustment	14
4.PRODUCT USE	15
5.GENERAL OPERATION PRINCIPLE	15
6.GAS FLOW DIAGRAM AND PARTS	16
7.ELECTRONIC AND CONTROLLING SYSTEM	19
7.1.Component List and Operating Principles	19
7.2.Service Function Test	20
7.3.U4 Control Card Forever Display Dealer Mode Activation	30
7.4.U4 Control Card Forever Display Service Test Activation of Service Test	32
7.5.U4 Control Card Forever Display Service Test Version Number Display	33
7.6.U4 Control Card Forever Display Service Test Sensor Temperatures Display	34
7.7.U4 Control Card Forever Display Service Test Component Drive Step	36
7.8.Termination of Service Mode	38
8. ELEKTRIC CIRCUIT DIAGRAM	49
9.U4 MALFUNCTION ERROR CODES	50
9.1.E0 Freezer Air Sensor Error	51
9.2.E1 Freezer Evaporator Sensor Error	52
9.3.E2 Fridge evaporator sensor error	53
9.4.E3 Fridge Air Sensor Error	54
9.5.E4 Freezer Defrost Heater Error	55
9.6.E8 Icematic Air Sensor Error	56
9.7.E9 Icematic Motor Error	57
9.8.E13 Cyclic freezer fan error	58
9.9.E15 Speed Condenser Fan Error	59
9.10.Cooling failure due to electrical issues	60
9.11.Freezing error due to electrical issues	61
10.TROUBLESHOOTING	62

10.1.The refrigerator is not operating	62
10.2.Condensation in the fridge compartment	63
10.3.Compressor is not running	64
10.4.Refrigerator runs either frequently or for a long time	65
10.5.Temperatures are too low	66
10.6.The refrigerator operates tumultuously	67
10.7.Noise from the evaporator fan motor	68
10.8.Noise from the condenser fan motor	69
10.9.Noise from the refrigerator	70
10.10.Condensation on the inner walls of the refrigerator	71
10.11.Condensation on the outer side of the refrigerator	72
10.12.The doors cannot be closed	73
10.13.Water cannot be dispensed from the water dispenser	74
10.14.Condensation in the form of drops on the water dispenser area	75
11. MOUNTING/DEMOUNTING PROCESSES OF THE PARTS	76
11.1.Beko handle group	76
11.2.Rear cover	77
11.3.Service hatch	77
11.4.Card cover	78
11.5.Electronic Card	78
11.6.Front leg plate group and the lid	79
11.7.Rear leg plate group	79
11.8.Door shelf 70 mm	80
11.9.TPK shelf	80
11.10.Door shelf 90 mm (for gallon)	80
11.11.Sliding door shelf	81
11.12.Adjustable glass shelves	81
11.13.Aluminium adjustable glass shelf profiles	82
11.14.Fridge crisper-top glass shelf	82
11.15.Crispers	83
11.16.Chiller compartment	83
11.17.Water dispenser trigger group	84
11.18.Crisper sheathing group and water container middle rail group	85
11.19.Waterspout closer lids	86
11.20.Middle rail group and water container	87
11.21.Water valve and waterspouts	88
11.22.Water system connection	89
11.23.Crisper rails	92
11.24.Telescopic rail and rail gripper	93
11.25.Cooler rear illumination glass group	94
11.26.Cooler ceiling illumination glass	94

11.27.Fridge illumination glass and LED card	95
11.28.Filter cover group	95
11.29.Bypass cover / water filter	96
11.30.Filter head	96
11.31.Cooler evaporator cover screw plug	97
11.32.Cooler evaporator cover	97
11.33.Square fan group	98
11.34.Ioniser group	98
11.35.Carbon filter cover and carbon filter	98
11.36. Ioniser illumination cover (Ion fresh)	99
11.37.Sensor cover	99
11.38.Moving middle compartment group	100
11.39.Hab guide	100
11.40.Hand plate display group	101
11.41.Display group	102
11.42.Display Group on Door	102
11.43.Freezer and Multizone Compartment Drawers	103
11.44.Manual Ice Pack	104
11.45Automatic Freezer Group	105
11.46.Freezer and Multizone Evaporator Cover	106
11.47.Wired fan shield	106
11.48.Fan Group	107
11.49.Thermal fuse	107
11.50.Heated pipe group	108
11.51.Discharge groups	108
11.52.Middle hinge group and pin	109
11.53.The metal door puller mechanism	109
11.54.The condenser fan motor	110
11.55. Sound damper	110
11.56.Terminal cover	110
12. SERVICE EQUIPMENT	111
13. MAINTENANCE AND CLEANING	112

1. GENERAL SAFETY WARNINGS

- Children must not play with the device. Cleaning and user maintenance must not be performed by the children unless they are supervised by an adult.
- If the product is out of order, it must not be operated before being repaired by the authorised service! Risk of electric shock!
- Connect the product to a grounded socket which is being protected by a fuse conforming to the values on the Type Label. Have the grounding installation made by a qualified electrician. Our company shall not be liable for any damages which may arise if the machine is used without a proper grounding which conforms to the local regulations.
- Unplug the product if it is not in use.
- Never wash the product by spraying or pouring water on it! Risk of electric shock!
- Never touch the plug with wet hands! Do not grab the power cord to unplug the machine, always unplug it by grasping the plug.
- If the outlet is loose, never plug the appliance into the outlet.
- Never connect your refrigerator to electricity-saving electronic systems. These systems will damage the device.
- Product must be unplugged during the installation, maintenance, cleaning and repair processes.
- Installation and repair works must always be performed by Authorised Service agents. The manufacturer cannot be held liable for the damages which may arise from the operations performed by unauthorised persons.
- Do not eat the cone ice cream, ice cubes, etc. right after they are taken from the freezer compartment! This may cause frostbite in your mouth!
- Do not touch frozen food by wet hands! They may stick to your hands!
- Do not place the bottled and canned liquid beverages in the freezer compartment. They may blow!
- Never use steam and steam cleaners for cleaning and defrosting processes on your refrigerator. Steam might contact the electrical parts of your refrigerator and cause short circuit or electric shock!
- Do not use mechanical devices or methods other than those recommended by the manufacturer to expedite defrosting process.
- Never use the parts on refrigerator such as its door and drawers as a support or step. Otherwise, you may cause the product to tip over or parts of it get damaged.
- Do not damage the cooling circuit, where the refrigerant is circulating, by using cutting or pointing tools. The refrigerant that will spray out if the gas channels of the evaporator, pipe extensions or surface coatings are punctured may cause skin irritations and eye injuries.
- Do not cover or block the ventilation holes in the refrigerator with any material.
- Place the beverages with higher proofs tightly closed and vertically.
- Do not use pressurised flammable gaseous sprays near the product to avoid the risk of a potential fire or explosion.
- Do not store the flammable products or products containing flammable gases (spray, etc.) and explosive substances in the refrigerator.
- Do not place containers with liquid on top of the product. If water splashes onto an electrical part, this may cause electric shocks or risk of fire.
- Do not store the products that need a precise temperature control (vaccines, heat-sensitive medicine, scientific materials, etc.) in the refrigerator.
- If you will not operate the product for a long period of time, unplug and unload the food inside.
- If the product is equipped with blue light, do not look into it by optical appliances.
- Exposing the product to rain, snow, sun and wind is dangerous with respect to electrical safety.
- Do not overload the product. It may fall when the door is opened and may harm you or damage the product. Similar problems may occur in case of putting items on the product.
- If the product's door is equipped with a handle, do not pull by the handle when changing the place of the product. The handle may be dislocated.
- Be careful about not to let the moving parts inside the product to entrap your hands or other parts of your body.

1.1.HCA warning

- If the product has a refrigeration system containing R600a gas, make sure that the refrigeration system and piping are not damaged during usage and transportation. This gas is flammable. If the refrigeration system is damaged, keep the product away from potential fire sources that may cause it to catch fire and immediately ventilate the room where the unit is placed.

	Ignore this warning if the product is equipped with a cooling system that contains R134a.
	You can learn about the gas used in manufacturing of the product on the tag located on the inner left part.
	WARNING: Never dispose the product in fire.

1.2. For products with water dispenser

- Pressure of the supply water must not be less than 1 bar. Pressure of the supply water must not be more than 8 bars.
- Use only drinking water.

1.3. Intended use

- This product is intended for indoor use only. It is not suitable for commercial use and it must not be used out of its intended use.
- The product must only be used for the preservation of the food.
- The manufacturer shall not accept any liability due to any damage arising from misuse or handling.
- Service life of the product you purchased is 10 years. This is the course of time specified for spare parts to be available in order for the product to operate as specified.

1.4.Child safety

- Packaging materials is hazardous for the children. Keep packaging materials in a safe place out of the reach of children.
- Electrical appliances are dangerous for children. When the product is operating, keep the children away and do not allow them to play with the appliance.
- If the product has a door lock, keep the key out of the reach of children.

1.5.Compliance with the WEEE directive and disposal of the waste product

- This product does not contain the harmful and prohibited substances which are described in the "Directive for Controlling Waste Electrical and Electronic Equipment" issued by the Ministry of Environment and Urban Planning. Complies with the WEEE Directive. This product has been manufactured from high quality parts and materials which are recyclable and reusable. For this reason, do not dispose the product with domestic and other wastes at the end of its service life. Take the product to a collection point for the recycling of the electric and electronic equipment. Check with local authority in your area about these collection points. Help with preserving the environment and natural resources by delivering the used products to the recycling points. Before disposing your appliance, cut out its power cord and if there are any locks on the door, make them inoperable for children's safety.

1.6.Packaging information


- Packaging of the product was manufactured from the recyclable materials in accordance with our national legislation. Do not dispose the package waste along with the domestic or other wastes, take them to the collection points which are specified by the local authorities.

1.7.Disposal of the waste product

- This product has been manufactured from high quality parts and materials which are recyclable and reusable. For this reason, do not dispose the product with domestic and other wastes at the end of its service life. Take the product to a collection point for the

recycling of the electric and electronic equipment. Check with local authority in your area about these collection points. Help with preserving the environment and natural resources by delivering the used products to the recycling points.

2. GENERAL APPEARANCE OF THE PRODUCT

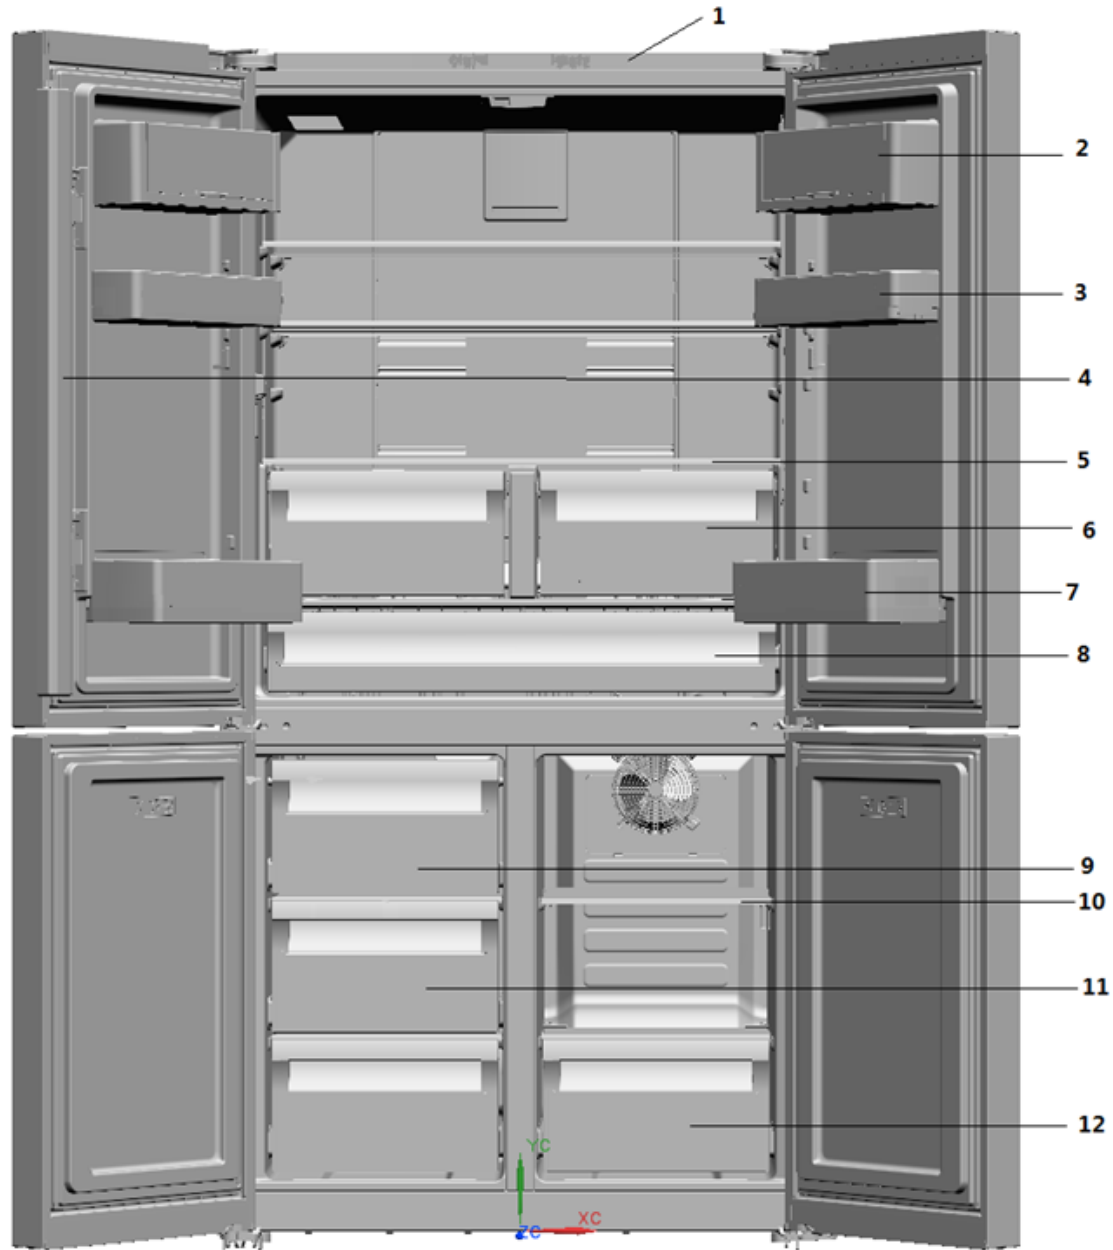



- | | |
|----------------------------------|--------------------------------------|
| 1-Display | 7-Gallon door shelf |
| 2-TPK shelf | 8-Zero degree compartment |
| 3-70mm sliding door shelf | 9-Freezer drawer |
| 4-Sliding compartment group | 10-Multizone compartment glass shelf |
| 5-Cooler compartment glass shelf | 11-Freezer compartment drawers |
| 6-Cooler compartment crispers | 12-Multizone compartment drawers |




The figure given is for schematic purposes and may not be exactly the same with the product. If the relevant parts are not available in the product, it applies to other models.

2.1. General Dimensions of the Product

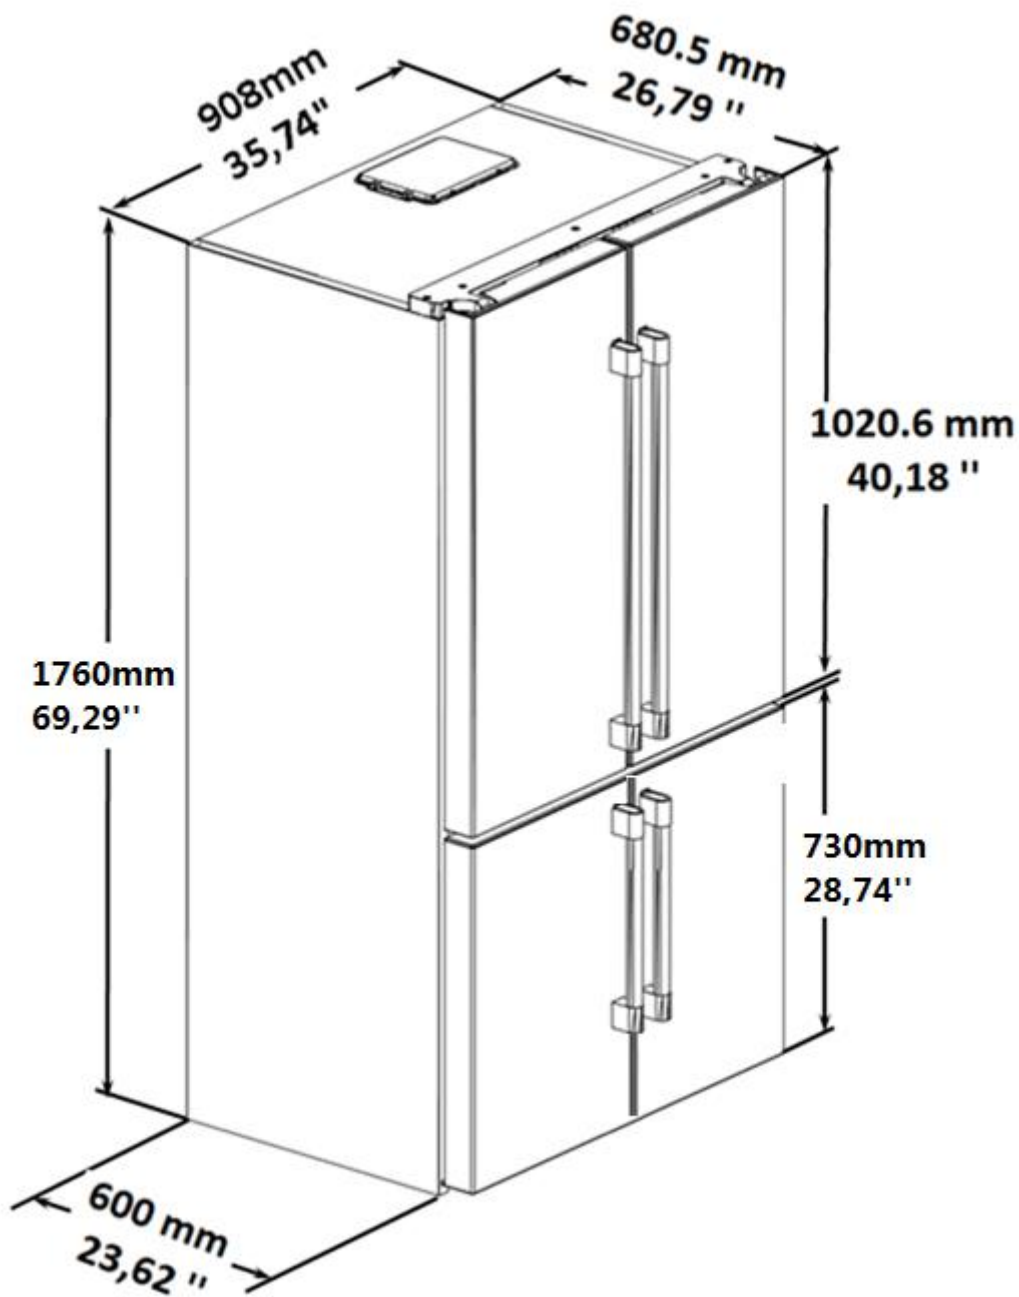


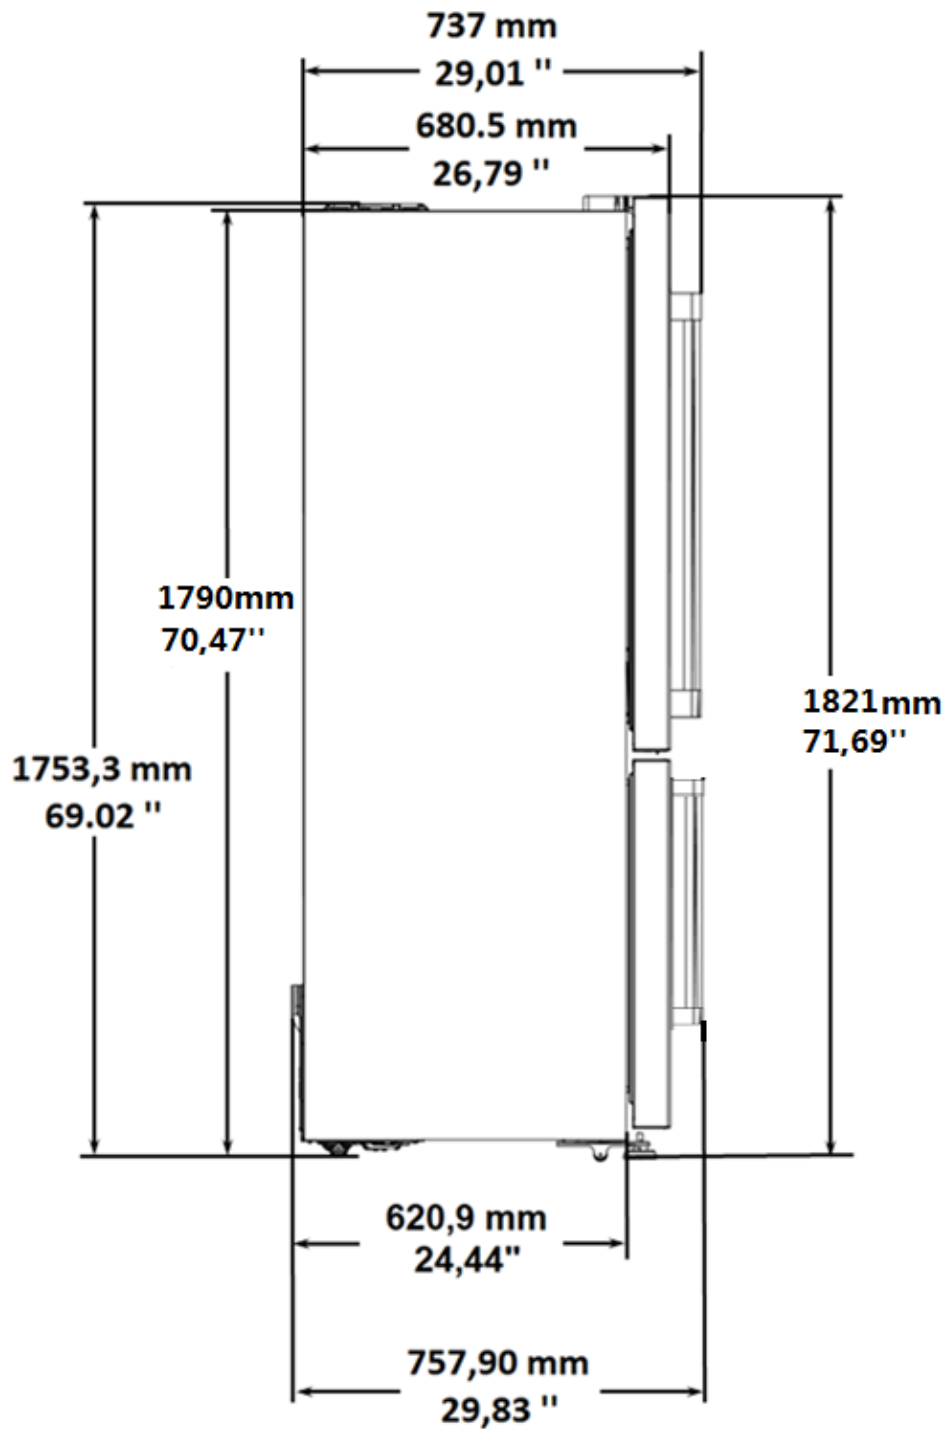

2.2. Opened View of Product at 90°

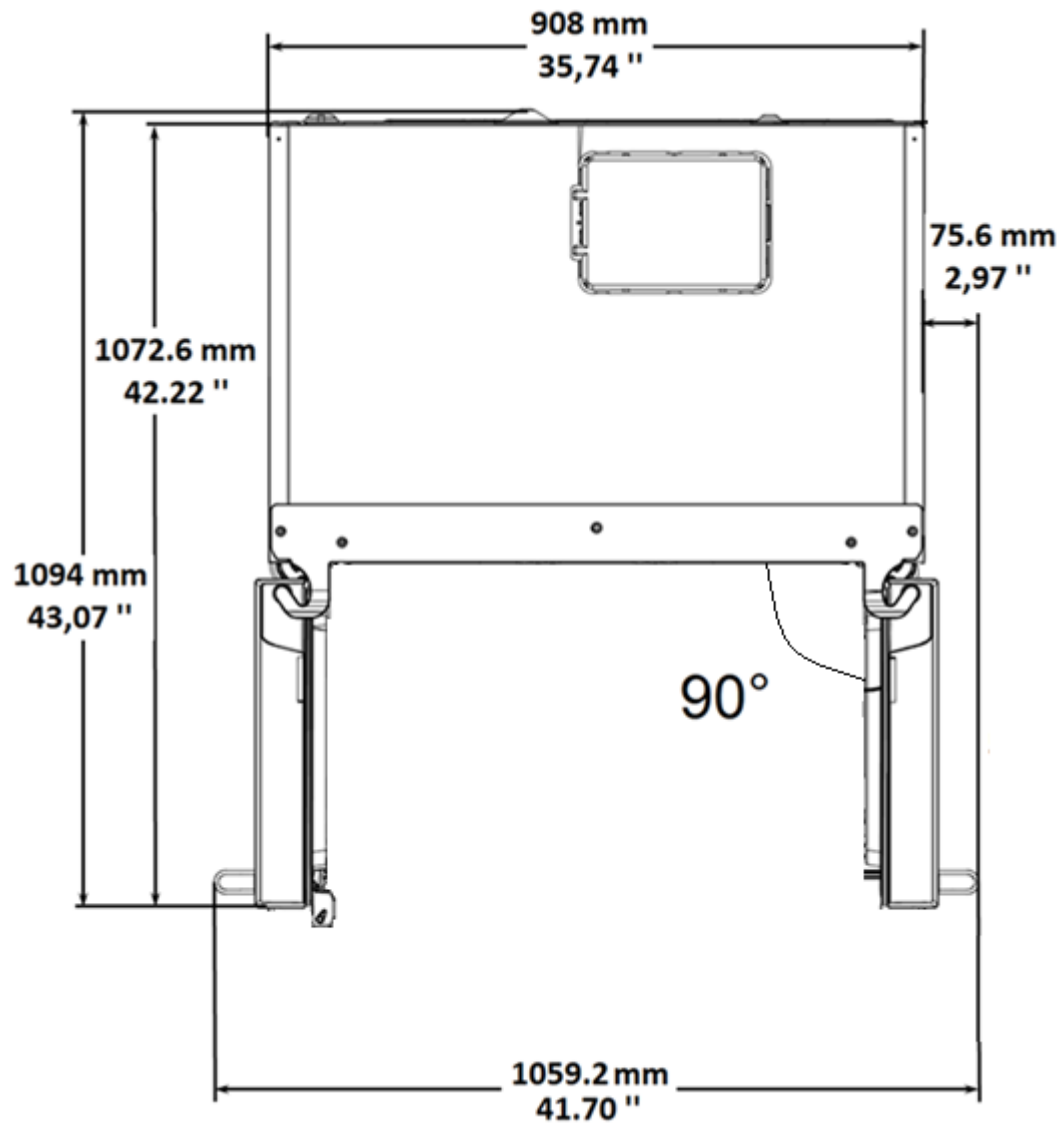

2.3. Maximum Opened View of the Product

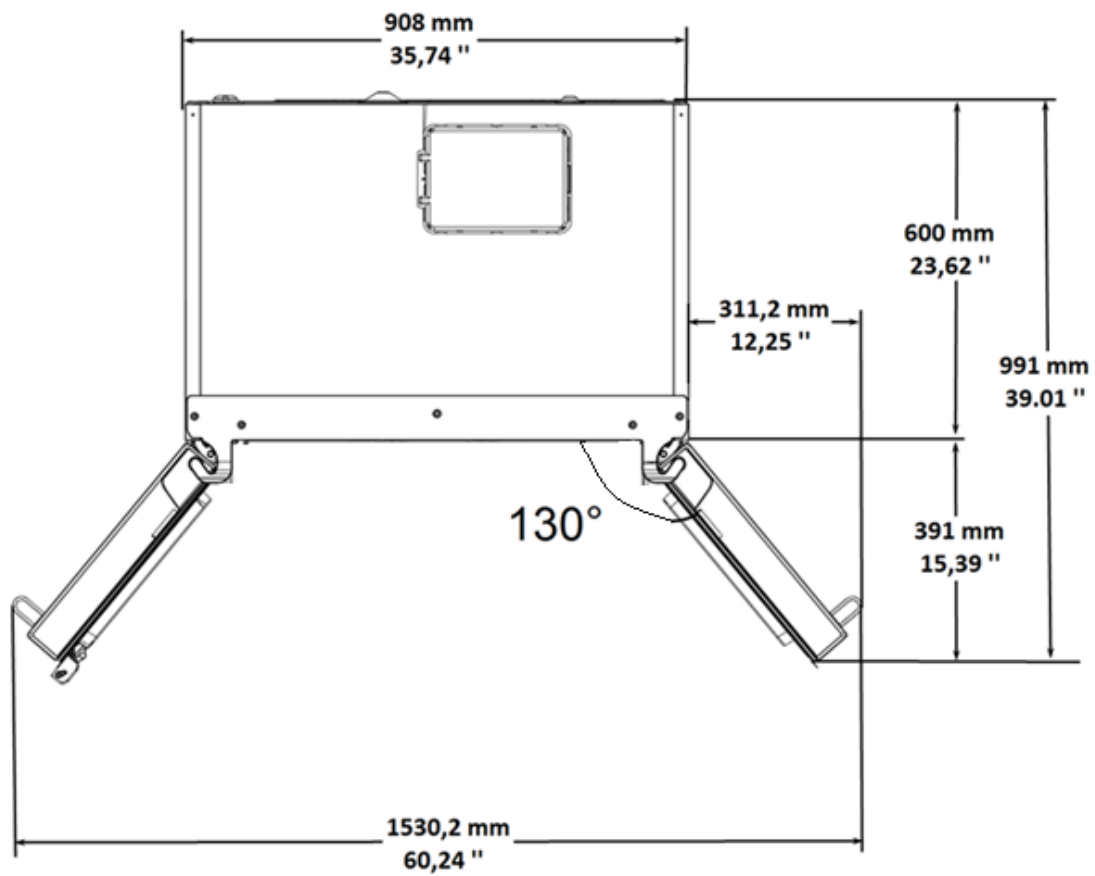

3. INSTALLATION

3.1. Handling Instructions

1. This appliance must be transported only in upright position. Shipping package must not be damaged during transportation.
2. If the appliance is to be transported in horizontal position, it must only be leaned towards right-hand side when you are facing the front of the appliance. After bringing it to upright position, it must be left for at least 4 hours without being operated in order to have it settled.
3. Failure to obey above instructions may result in damage on the appliance. In case of failure to obey these instructions, the manufacturer shall not be held responsible.
4. The appliance must be protected against rain, humidity and other atmospheric effects.
5. Pay attention not to damage your floor, the pipes, wall coverings and etc., while installing your appliance. The appliance must not be handled by pulling from the door or door handle.
6. Discharge the water in the drain tray before moving the appliance. For detailed information, see "Cleaning and Maintenance" section in the operation manual.
7. Do not sit on or climb to the appliance since the design of the appliance is not suitable for such actions. You may injure yourself or damage the appliance.

IMPORTANT! To prevent cutting or damaging the power cable, make sure that the cable is not pinched under the appliance during and after moving it.

3.2 Installation Instructions

1. Volume of the room where the product will be installed must not be less than 10 cubic meters.
2. Do not place the appliance in a cold room where the temperature is likely to fall below 10°C at nights and/or especially in winter season.

This refrigerator/deep freezer is designed to operate in ambient temperatures between 10°C and +43°C.

3. Do not place the appliance near ovens or radiators or under direct sunlight since they will cause the appliance to operate more difficultly. In case of placing the appliance near a heat source or freezer, ensure that the following minimum clearances are provided.

From ovens: 50 mm (2")
From radiators: 400 mm (12")
From freezers: 25 mm (1")
From the wall: 50 mm (2")

4. Mount the 2 plastic wedges supplied in a bag in the refrigerator onto the rear ventilation cover as illustrated in the following figure. To do this, remove the screws on it and attach the screws given in the same pouch. Plastic wedges are for the required distance between your refrigerator and the wall in order to allow the air circulation.

3.3.Appropriate place for installation



WARNING: If the door of the room where the refrigerator will be placed is too narrow to let the product to pass through, the doors of the unit must be dismantled and the appliance must be passed in a horizontal position.

- Place your product on a place that allows ease of use.
- Install the product at least 30 cm away from heat sources such as hobs, ovens, central heaters and stoves and at least 5 cm away from electrical ovens. The appliance must not be exposed to humidity and direct sunlight after installation.
- There must be appropriate air circulation around in order for the product to run efficiently. If the refrigerator will be placed around a recessed wall, make sure that there is at least 5 cm clearance between the ceiling and side walls.
- Do not place the product on materials such as carpet or rug.
- Place the refrigerator on a flat surface to avoid any swaying.



If two refrigerators are placed side by side, there must be at least a distance of 4 cm between them.

3.4.Installing the plastic wedges

Plastic wedges are used in order to maintain the clearance that will provide the air circulation between the product and the wall. Insert the 2 plastic wedges supplied with the product onto the rear ventilation cover as illustrated in the figures. In order to mount the wedges, remove the screws on the product and use the screws available in the same bag along with the wedges.



- Screws on the upper side of the rear cover are unscrewed.
- The installation is ensured by screwing the ventilation support wedges provided in the product on the as directed areas.

3.5.Electrical Connection

Connect the product to a grounded socket which is protected by a fuse conforming to the values on the Type Label. Our company shall not be liable for any damages which may arise if the machine is used without a proper grounding which conforms to the local regulations.

- The connection must be in compliance with national regulations.
- The power cable plug must be easily accessible after installation.
- Voltage and allowable fuse protection are specified in the type label adhered to the inner part of the appliance. If the current value of the fuse in your house does correspond to the values specified in its rating plate, request a licensed electrician to connect an appropriate fuse.
- The specified voltage must be equivalent to your mains voltage.
- Do not set any connection with extension cables or multiple outlets.

	WARNING: Damaged power cords must be replaced by an Authorised Service agent.
	WARNING: If the product is out of order, it must not be operated without being repaired. Risk of electric shock!

3.5.Floor level adjustment

If your refrigerator is unbalanced;

You can balance your refrigerator by turning the front legs as illustrated in the figure. The corner where the leg exists is lowered when you turn in the direction of black arrow and raised when you turn in the opposite direction. Taking help from someone to slightly lift the refrigerator will facilitate this process.



	WARNING: First disconnect the electrical connection of the product. While the legs are being adjusted, the product must not be plugged in. There is risk of electric shock!
---	--


4.PRODUCT USE


- For air circulation in the place where the refrigerator is located, necessary clearance must be allocated under, top, right and left of the unit.
- As the water inlet is at the rear side of the refrigerator for products equipped with water dispenser, make sure that the hose is not kinked or squeezed.
- If the refrigerator is equipped with an Icematic supplied from mains, area required for the mains system must be reserved.
- Plug your refrigerator always into a grounded socket. Pay attention not to damage the power cable during transportation.
- Do not place devices such as radiators, heaters and etc. close to the refrigerator.
- The place where the refrigerator will be placed must be at an appropriate distance to the place of mains connection.
- Refrigerator must not be exposed to the direct sunlight.
- Floor levelling adjustment must be made according to the area where refrigerator is placed.
- Adequate area must be allocated in order for the doors of the refrigerator to opened easily.
- Position of the refrigerator must be appropriate for servicing and maintenance.
- Do not use the refrigerator on wet floors. There is the risk of electric shock in terms of safety.

5.GENERAL OPERATION PRINCIPLE

Electronic NF refrigerator is composed of fridge and freezer compartments. It is a micro-processor controlled no-frost refrigerator. All functions and temperature controls of the refrigerator are made in line with the desire of the user thanks to the microprocessor. The software in the microprocessor controls the cooling and water system elements (compressor, fans, heaters, valves, icebox, solenoids, ice crusher motor and ioniser, etc.) of the refrigerator. Cooling of the refrigerator is provided through passing the air inside continuously over the evaporators by means of the fan and circulating it for the Freezer and the FF separately. No frosting or icing forms inside the usable areas of no-frost refrigerators as is the case with conventional refrigerators. The frosting that forms on the evaporator which is out of the usable area is melted by means of heaters automatically activated under the control of the microprocessor at certain intervals to be determined by the control algorithm. In that way the frost and the ice accumulated on the evaporator are melted without requiring the user making any operation for enabling the refrigerator to operate more efficiently.

6. GAS FLOW DIAGRAM AND WELD POINTS

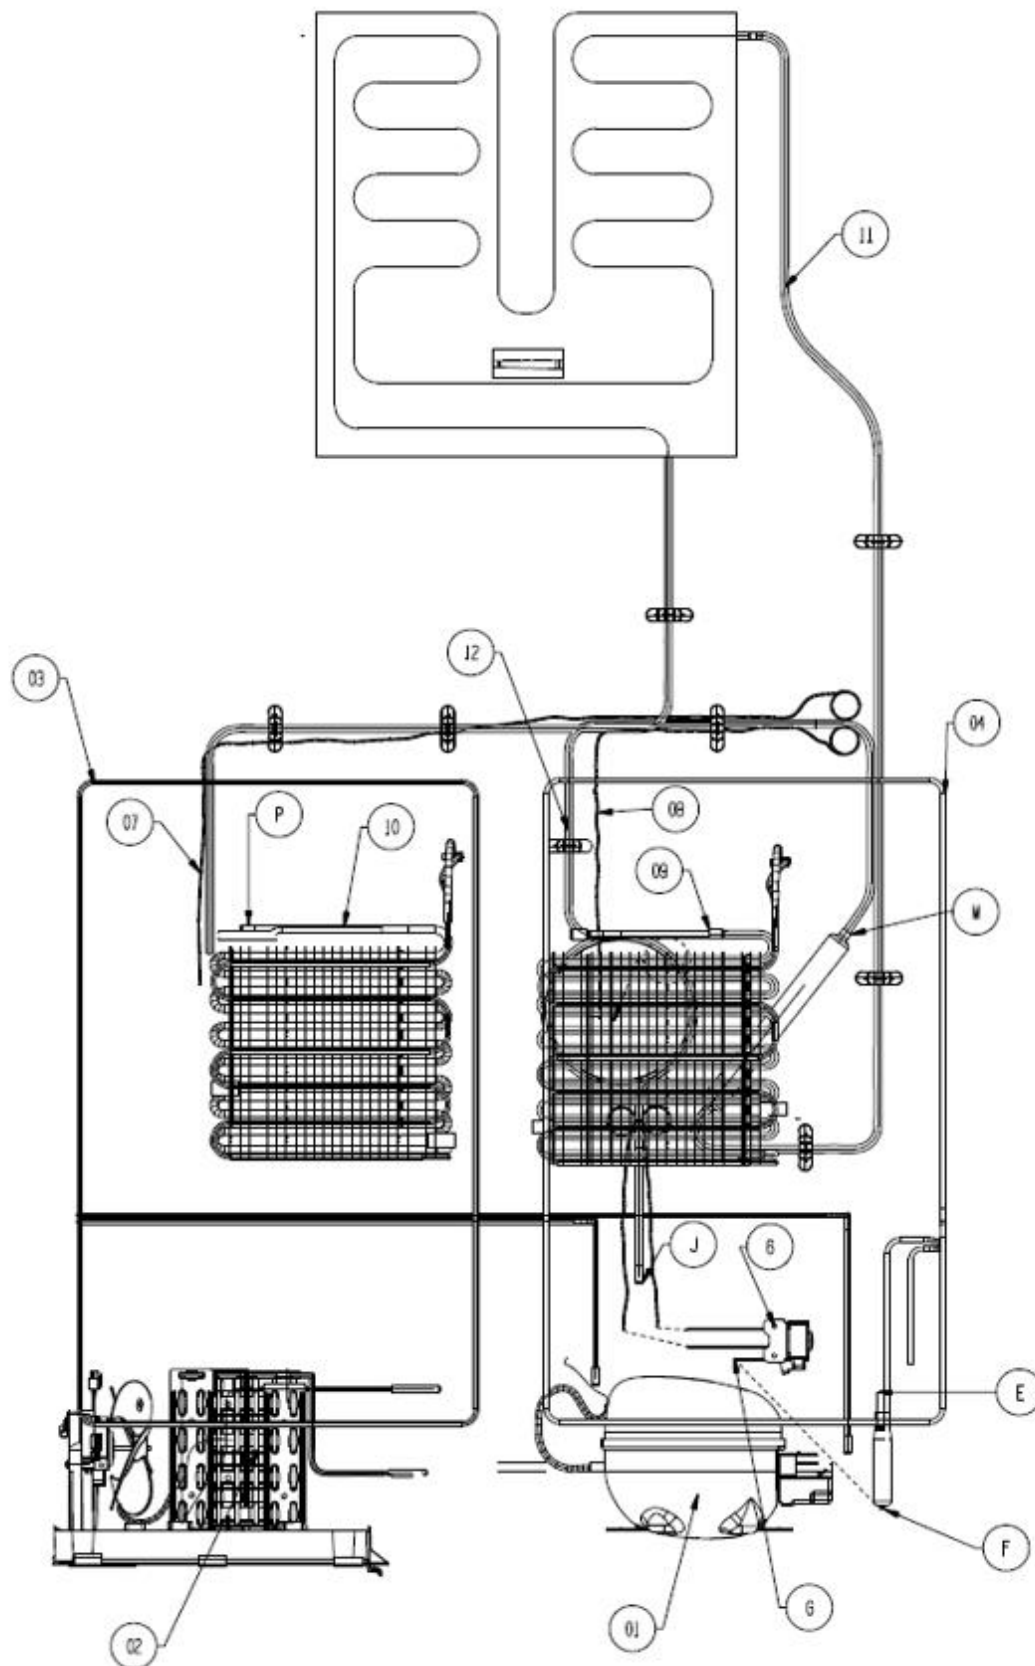

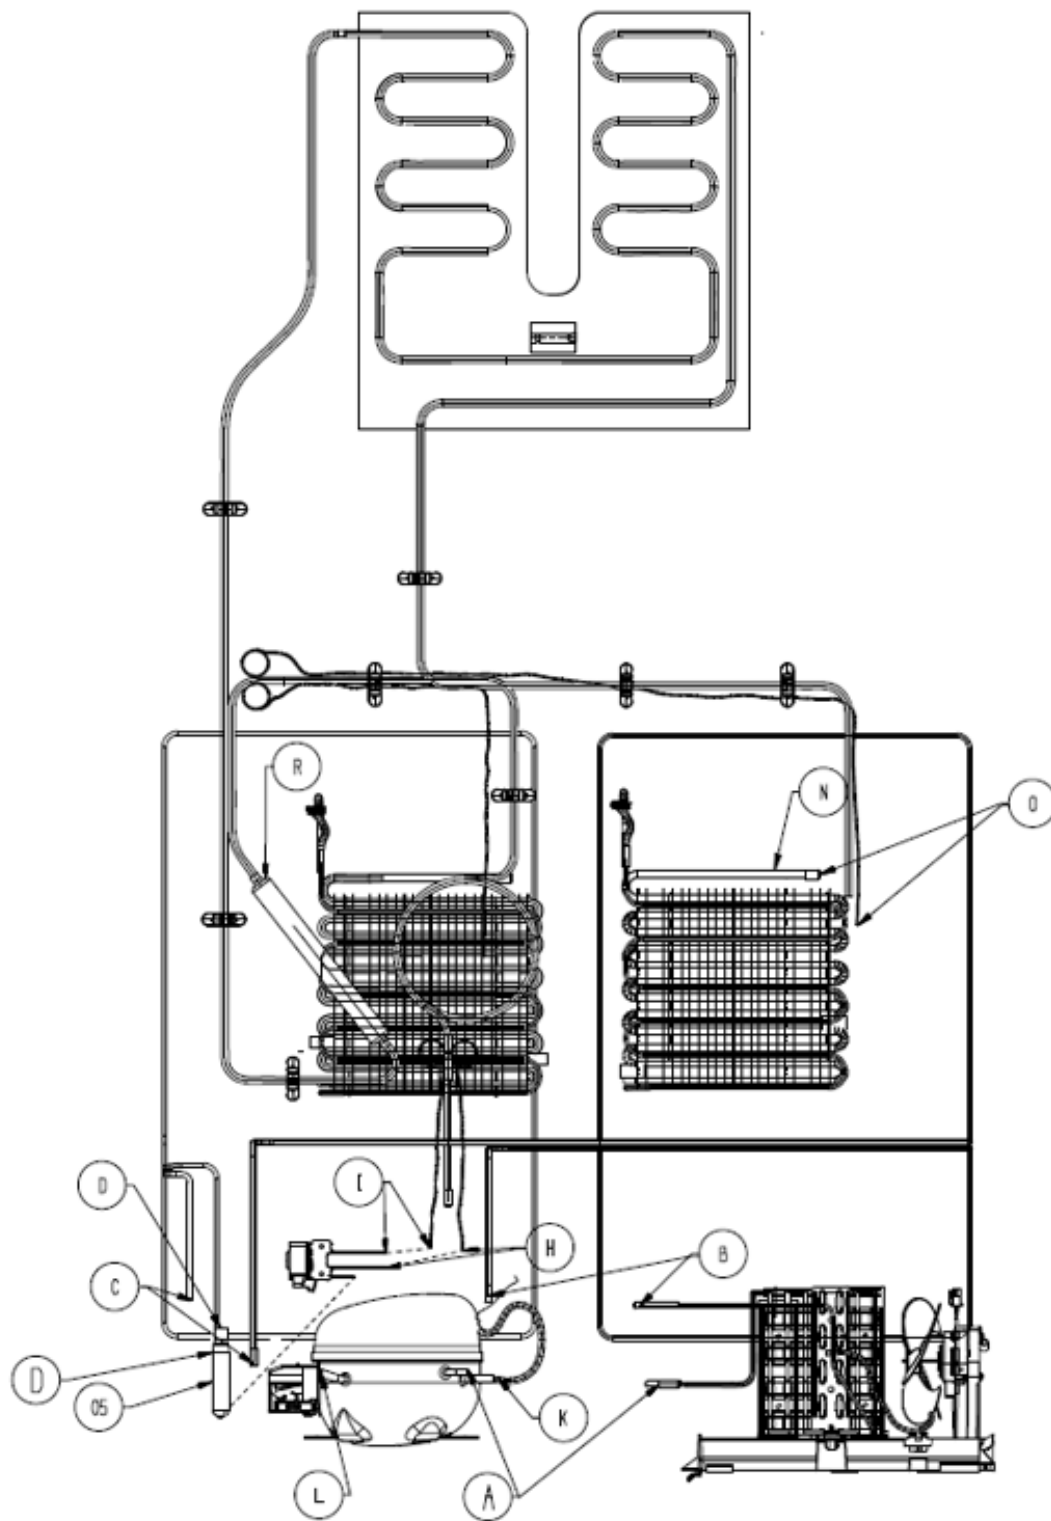

SOGUTMA SİSTEM PARÇALARI / COOLING SYSTEM COMPONENTS

- 1- KOMPRESOR / COMPRESSOR
- 2- COIL KONDANSER / COIL CONDENSER
- 3- FRZ FLANS ISITICI / FRZ FLANGE HEATER
- 4- JOKER FLANS ISITICI / MULTIZONE FLANGE HEATER
- 5- DRYER / DRYER
- 6- SELENOİD VALF / SELENOİD VALVE
- 7- KAPİLERİ-1 / CAPİLLARY TUBE 1
- 8- KAPİLERİ-2 / CAPİLLARY TUBE 2
- 9- JOKER NF EVA / MULTIZONE NF EVAPORATOR
- 10-FRZ NF EVA / FRZ NF EVAPORATOR
- 11-FF EVA GR / FRESHFOOD EVAPORATOR
- 12-DONUS BORU GRUBU / SUCTION TUBE

KAYNAK NOKTALARI

- A- COMPRESSOR / COIL CONDENSER
- B- COIL CONDENSER / FRZ FLANGE HEATER
- C- FRZ FLANGE HEATER / MULTIZONE FLANGE HEATER
- D- MULTIZONE FLANGE HEATER / DRYER
- E- DRYER CLOSE
- F- DRYER / ADAPTOR TUBE
- G- ADAPTOR TUBE /SELENOİD VALVE
- H- SELENOİD VALVE / CAPİLLARY TUBE 1
- I- SELENOİD VALVE/ CAPİLLARY TUBE 2
- J- SUCTION TUBE / CONNECTOR
- K- CONNECTOR/ COMPRESSOR
- L- SERVICE PIPE CLOSE
- M- FRESHFOOD EVAPORATOR / SUCTION TUBE
- N- NF EVAPORATOR / FRESHFOOD EVAPORATOR
- O- FRZ NF EVAPORATOR / CAPİLLARY
- P- MULTIZONE NF EVAPORATOR / CAPİLLARY
- R- ACCUMULATOR / SUCTION PIPE

7.ELECTRONIC AND CONTROLLING SYSTEM

7.1.Component List and Operating Principles

	Component
1	Compressor
2	Defrosting heater
3	DC Speed Freezer fan
4	DC Speed Condenser fan
5	Sensors (Frz Eva, Frz Air, FF Eva, FF Air, Icematic)
6	DC Fresh Food Fan
7	Flange Heater
8	FF Eva heater
9	Thermal fuse
10	PTC relay
11	Thermal
12	Door Reed Switch (FRZ, FF)
13	DC Led Bar and DC ATK Led Board
14	Ioniser
15	DC Blue LED board (optional)
16	Icematic motor
17	Water pipe heater
18	Supply line filter
19	Capacitor
20	Electronic control board
21	Indicator Card
22	Ice-cream machine
23	Everfresh compartment valve

Compressor: Refrigerant gas circulation is provided through the compressor. Power supply is provided over a thermal protector. The auxiliary coil which is activated for a short time during first start-up of the compressor is deactivated by PTC.

Freezer fan motor (Freezer Compartment Fan Motor): It is mounted on the inner body of refrigerator behind the rear cover of evaporator. It ensures circulation of the freezer compartment air in the freezer compartment by passing it continuously over the evaporator.

Condenser fan motor: It is located at the bottom of the cabin. It prevents excessive heating of the condenser and drops condensation pressure to increase the efficiency of the fridge. It is connected parallel to the compressor, runs when the compressor starts and stops when it stops.

Sensors: It has a characteristic that its resistance decreases as the temperature rises. Sensors on the refrigerator body detect the temperature of their surrounding area and transmit it to the electronic control board.

Freezer sensor (Freezer Compartment Sensor): It detects the temperature in the freezer compartment and transmits it to the microprocessor. Values taken from this sensor are compared with the cut-in and cut-out values of the temperature set for the freezer compartment to run or stop the compressor and the freezer compartment fan motor.

FF sensor (Fridge Compartment Sensor): It detects the temperature in the fridge compartment and transmits it to the microprocessor. Values taken from this sensor are compared with the cut-in and cut-out values of the temperature set for the fridge compartment to run or stop the compressor, the fridge compartment fan motor and the fridge compartment rear wall heater.

FF Eva sensor (Fridge Compartment Eva Sensor): It is used to detect the tail Evaporator temperature of the Fridge compartment.

Defrost sensor: It is located on the evaporator at the capillary outlet. It detects the temperature on the evaporator and transmits it to the microprocessor. Defrost is terminated according to the temperatures received from this sensor.

Freezer defrost heater: The heater under the freezer evaporator is activated and deactivated by the electronic card at times of defrost. In this way, it periodically defrosts icing accumulated on the evaporator.

Flange Heater: It is used to prevent condensation on the contact surface of Freezer Door seals.

Thermal fuse: It is located on the evaporator. In case of any malfunction, it cuts the current to the heater to deactivate the defrost heater in order to prevent the defrost heater from remaining activated continuously and doing any damage to the refrigerator, environment and foods inside. Thermal fuse is disposable and therefore it must be replaced once it is blown.

PTC relay: It has a characteristic that its resistance increases as the temperature rises. It ensures primary start-up of the compressor by activating the compressor's auxiliary coil, then it deactivates the auxiliary coil by being heated with the current flowing over it.

Thermal: It is a component that becomes open circuit when heated. It opens the circuit at a certain temperature and cuts the current to the compressor in order to protect the compressor coils against excessive heating. When the temperature of the compressor drops below a certain value, it re-completes the circuit to operate the compressor.

Upper hinge cover Reed Switch: Reed switches are used in the upper hinge cover with display. Normally, once the cooling doors are closed it is in closed circuit. When the cooling doors are open, a signal is transmitted to the control board and thus, FF illumination units are lit and disabled if the fan is running. When the door is closed, lamps are turned off and the fan starts running if needed.

DC Led Bar and DC ATK Led Board 6 units of 12V DC LED boards are used for the illuminating fridge compartment. These LED boards are activated by the reed switch and control board when the fridge compartment door is opened. 1 unit of 12V DC LED boards are used for the illuminating the fridge compartment. This LED board is activated by the reed switch and control board when the freezer compartment door is opened.

Electronic Control Board: The control board is placed in the plastic box towards the rear wall on the upper plate of the refrigerator. FRZ is used as the main board which controls the electronic systems which are controlled by the display on the door.

Icematic sensor: It is a sensor with flexible body under the icebox. It detects freezing of the water in the icebox and transmits the info to the microprocessor. Thus the motor of the icematic is rotated according to the temperatures detected from the sensor.

Icematic Sensor: The icematic accessory in the freezer compartment is used to detect the ice quantity in the icebox.


Icematic motor: It ensures discharging of the ice formed in the icebox into the ice container. Ice formation is determined with the information received from the icematic sensor; icebox motor is activated according to the time of ice formation and the ices are poured into the ice container. Icematic arm detects when the ice container is full and it does not pour more ice into the ice container than its capacity.

Blue light LED board: Blue light LEDs are used to ensure longer preservation of vegetables. It is used along with the rear illumination units of cooler compartment on the lower section.


Ioniser: It periodically spreads ions into the FF compartment in order to clean the air inside the compartment. It is used on the upper section of the fridge compartment and behind the fridge eva cover.

7.2.Service Function Test

The 4K LED display board we use in the refrigerator has an eight-key system. Set values are shown on the display.

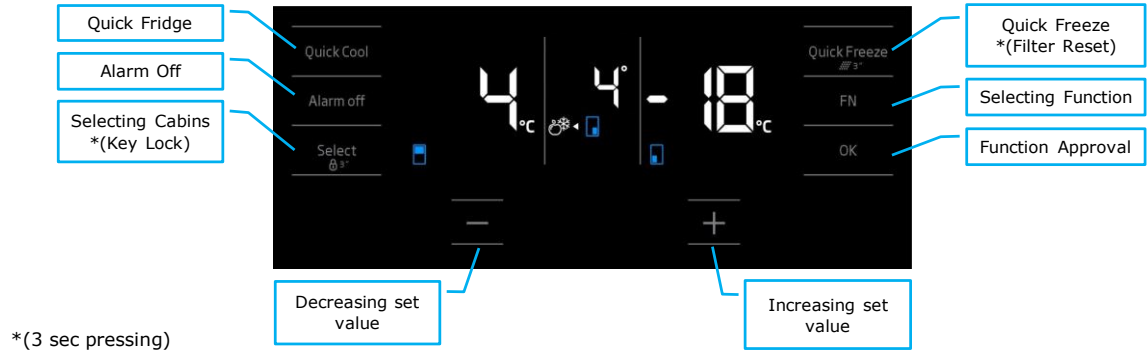



Step 1: Switch to password entry screen by pressing Select and OK keys simultaneously for 3 seconds after the refrigerator is energised.

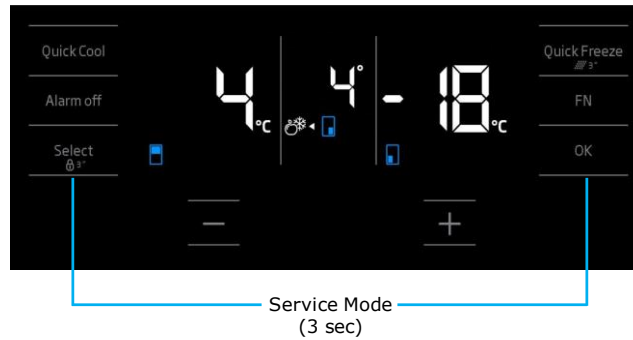

Press OK once to enter service test.




After you have entered the service test, all icons will be ON for 1 second and OFF for one second as follows.

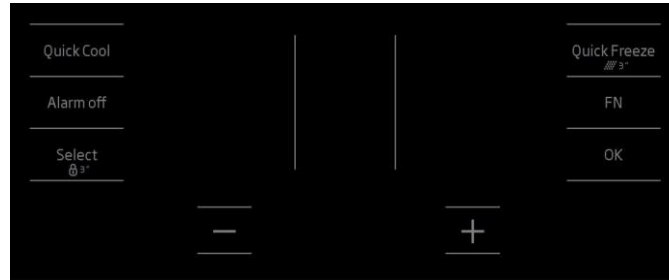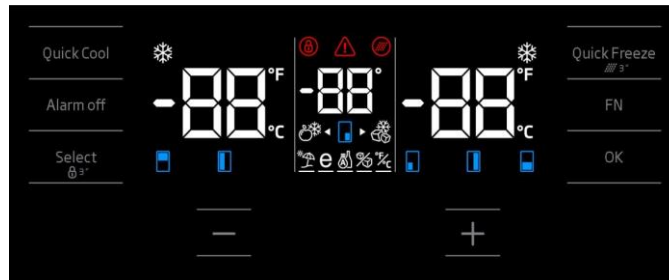


Once any button is pressed, Step 1 will be terminated.

Step 2: Firstly, the display software version info is shown on the FF compartment and the revision info is shown on the

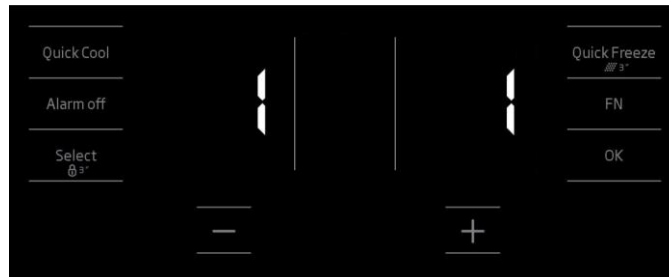

When any key is pressed, the control board version info will be shown on the FF compartment and the revision info will be shown on the FRZ compartment.

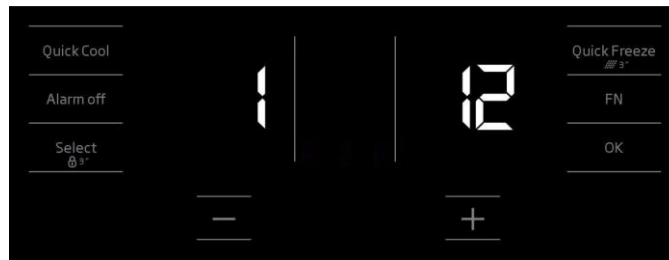

NOTE: For updated version revision info, control board and display technical drawings must be checked.

Step 3: When any key is pressed, sensor display step is entered. The sensor display is as follows.


View 1(Sensor-Value) :

Sensor value and sensor code



View 2 (Cabin-Value) :

Sensor value and Cabin abbreviation "CA"

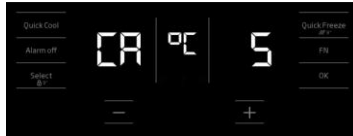


View 3 (Cabin Code-Value) :

Sensor value and cabin code



View 4 (Value-Value) :

Sensor value and Sensor value

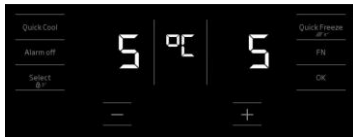


will be displayed alternately.

You can switch between sensors by pressing Quick Fridge in a forward direction and by pressing Alarm Off button in a backward direction.

When Select and OK keys are shortly pressed simultaneously, setting mode switches between sensor reading, concurrent on/off of fans (SC) and illuminations, component driving, water intake time, and dispenser light time on each press.

Sensor value on FRZ compartment,
On FF compartment:

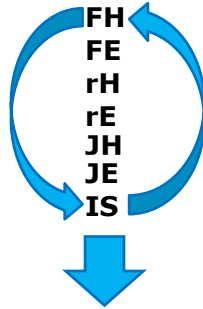


FH: Fridge Air
FE: Fridge Eva
rH: Freezer Air
rE: Freezer Eva
JH: Joker Air
JE: Joker EVA
*IS: Icematic Sensor

*Icematic sensor is optional.




Sensor value on FRZ compartment,
On FF compartment:

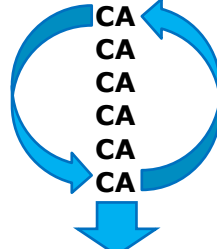

CA: Cabin




Sensor value on FRZ compartment,
On FF compartment:

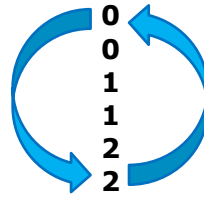


CA:0 Fridge
CA:1 Freezer
CA:2 Joker

Sensor value on FRZ compartment,
Sensor value on FF compartment

Step 4: Concurrent on/off step of fans and illuminations: Upon pressing the FF set button; FF Fan, Frz Fan, Condenser fan, FF Illumination, Frz Illumination, Blue Ray components are turned on or off.

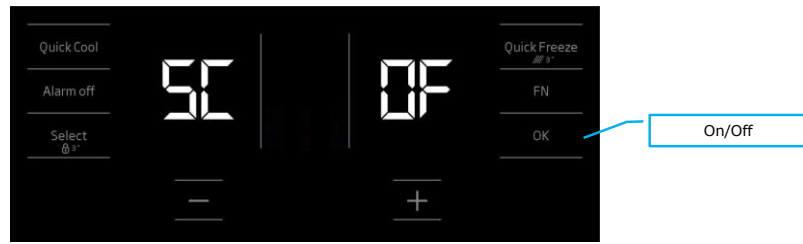


Step 5: Select and OK keys are shortly pressed simultaneously to switch to the component driving step.

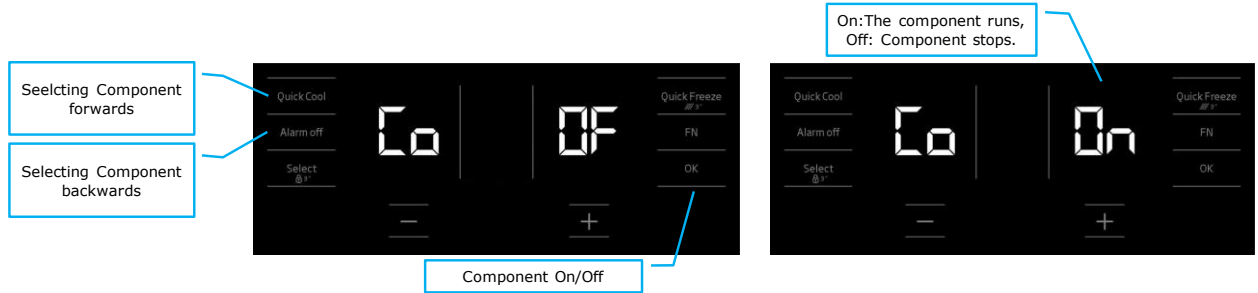


Component Name	Component Code	Component Name	Component Code
FF Fan	FF	Joker Fan	JF
FF Heater	FO	Joker Eva Heater	JE
Middle Section Hea	HC	Icematic	Ir
Ionizer	Io	Condenser Fan	CF
Blue Light	bA	Compressor	Co
FF Illumination	FL	Solenoid Valve	SU
Frz Fan	rF		
Frz Eva Heater	rE		

*Optional

Frz Fan and Condenser Fan speeds may be changed during the service mode. To perform this change, you can set to OFF-22-10-OFF... with the OK key while rF or CF is selected in the component selection phase. Speed may vary according to the product/component values.

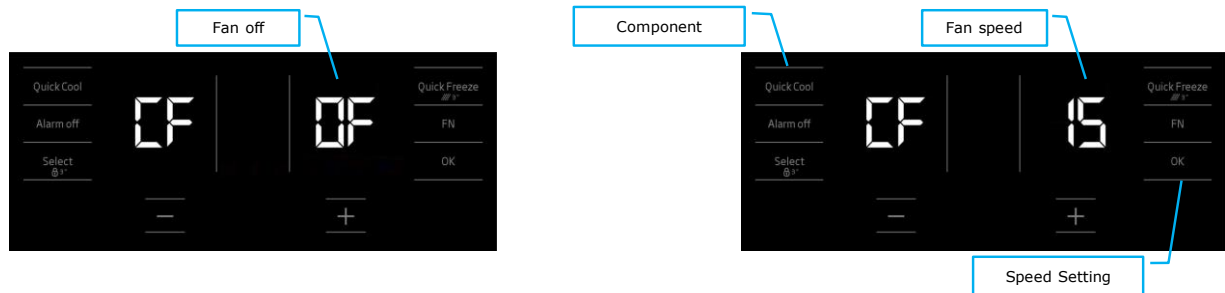

When Icematic 'Ir' is selected, Icematic is oriented at pouring direction by selecting '1' using FRZ Set button and at fixing direction when '2' is selected. Switching to OFF stops the icematic motor

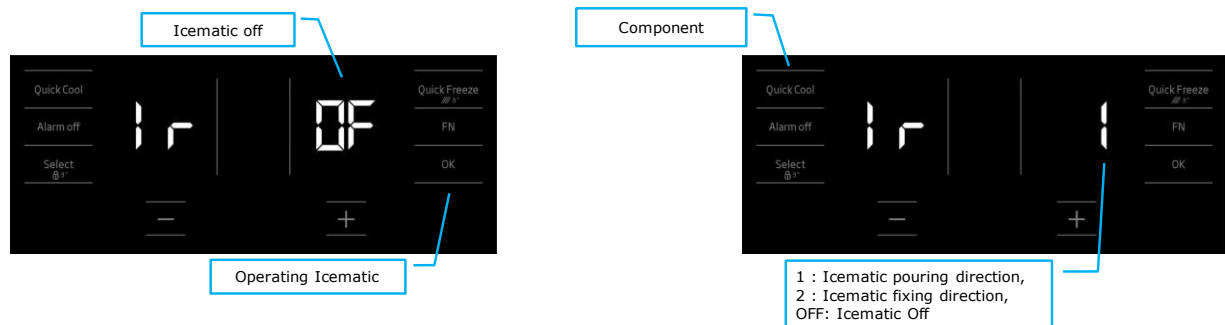

Step 6: Select and OK keys are shortly pressed simultaneously to switch to the step for setting water and dispenser illumination durations. - *Optional



Setting the Icematic water intake time:
1sec(10)-9.9sec(99) range

Setting Dispenser light On time:
1sec(10)-9.9sec(99) range

Exiting the Service Mode:


If the following issues occur, the service mode is exited:

Power failure

Pressing Select and OK keys simultaneously for 3 seconds


Operating in service mode for 30 minutes

The 4K LED display board we use in the refrigerator has an eight-key system.
Set values are shown on the display.

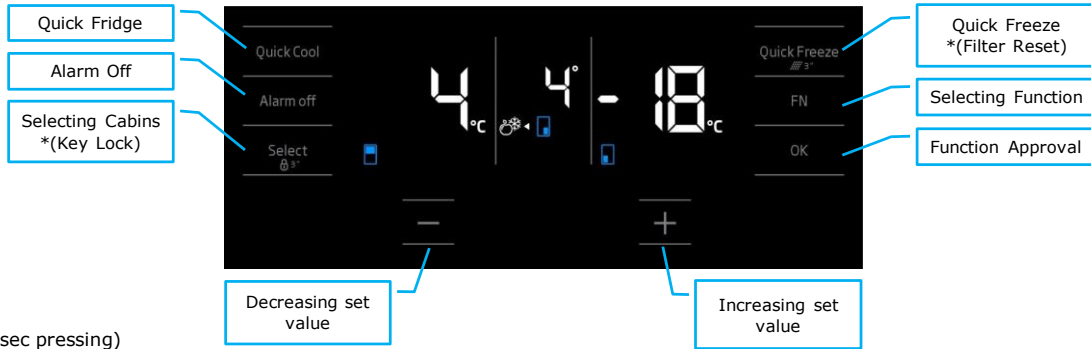

*(3 sec pressing)



Step 1: Switch to password entry screen by pressing Select and OK keys simultaneously for 3 seconds after the refrigerator is energised.

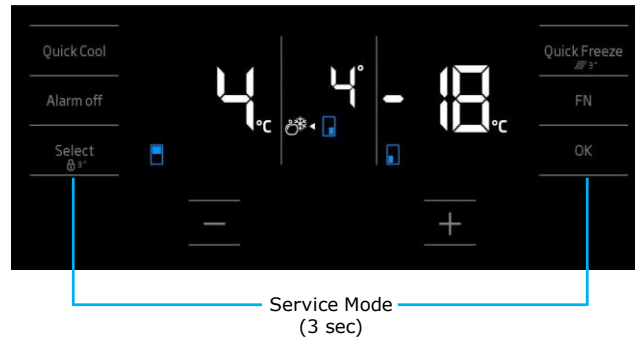

Press OK once to enter service test.




After you have entered the service test, all icons will be ON for 1 second and OFF for one second as follows.

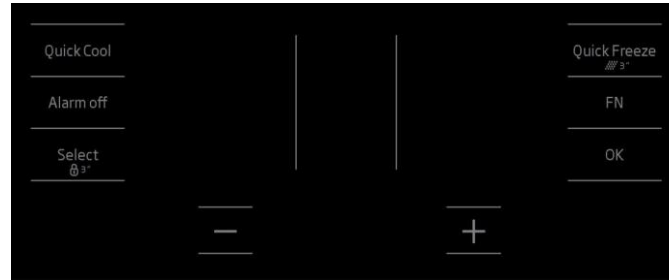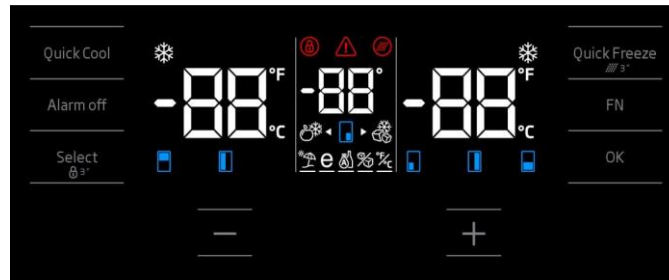


Once any button is pressed, Step 1 will be terminated.

Step 2: Firstly, the display software version info is shown on the FF compartment and the revision info is shown on the FRZ compartment.

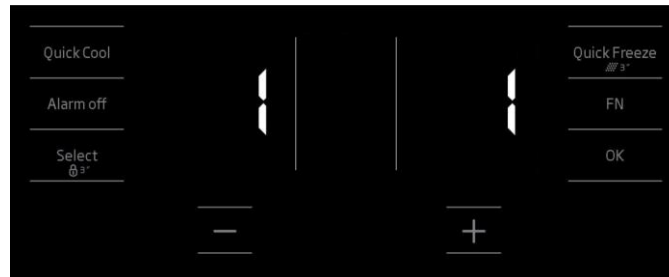

When any key is pressed, the control board version info will be shown on the FF compartment and the revision info will be shown on the FRZ compartment.

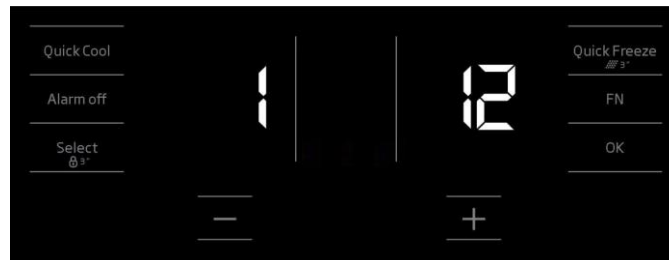

NOTE: For updated version revision info, control board and display technical drawings must be checked.

Step 3: When any key is pressed, sensor display step is entered. The sensor display is as follows.


View 1(Sensor-Value) :

Sensor value and sensor code



View 2 (Cabin-Value) :

Sensor value and Cabin abbreviation "CA"

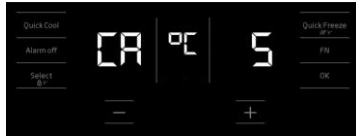


View 3 (Cabin Code-Value) :

Sensor value and cabin code



View 4 (Value-Value) :

Sensor value and Sensor value

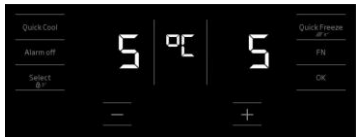


will be displayed alternately.


You can switch between sensors by pressing Quick Fridge in a forward direction and by pressing Alarm Off button in a backward direction.

When Select and OK keys are shortly pressed simultaneously, setting mode switches between sensor reading, concurrent on/off of fans (SC) and illuminations, component driving, water intake time, and dispenser light time on each press.


Sensor value on FRZ compartment,
On FF compartment:

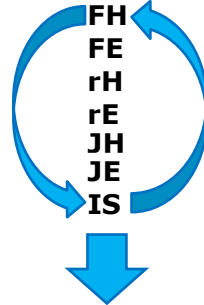

Sensor value on FRZ compartment,
On FF compartment:

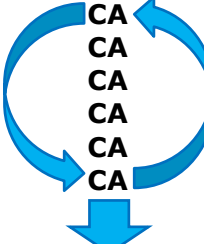

Sensor value on FRZ compartment,
On FF compartment:

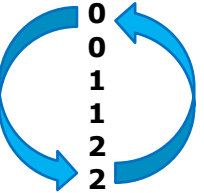

Sensor value on FRZ compartment,
Sensor value on FF compartment

FH: Fridge Air
FE: Fridge Eva
rH: Freezer Air
rE: Freezer Eva
JH: Joker Air
JE: Joker EVA
*IS: Icematic Sensor

*Icematic sensor is optional.




CA: Cabin




CA:0 Fridge
CA:1 Freezer
CA:2 Joker

Step 4: Concurrent on/off step of fans and illuminations: Upon pressing the FF set button; FF Fan, Frz Fan, Condenser fan, FF Illumination, Frz Illumination, Blue Ray components are turned on or off.

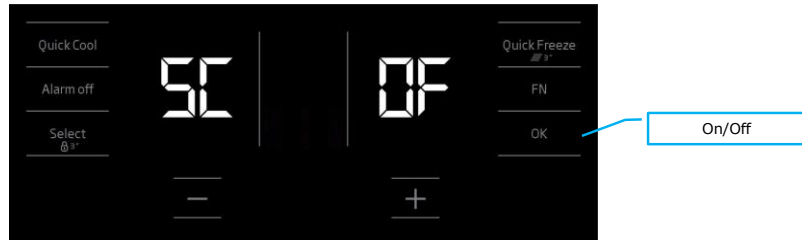

Step 5: Select and OK keys are shortly pressed simultaneously to switch to the component driving step.

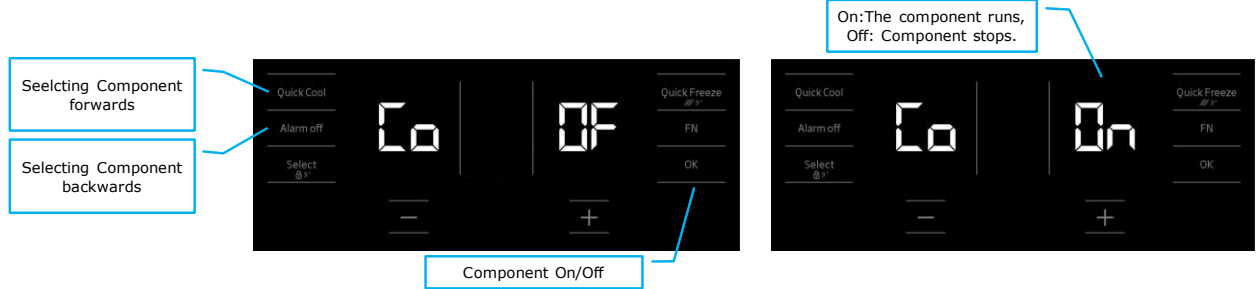


Component Name	Component Code	Component Name	Component Code
FF Fan	FF	Joker Fan	JF
FF Heater	FO	Joker Eva Heater	JE
Middle Section Heater	HC	Icematic	Ir
Ionizer	Io	Condenser Fan	CF
Blue Light	bA	Compressor	Co
FF Illumination	FL	Solenoid Valve	SU
Frz Fan	rF		
Frz Eva Heater	rE		


*Optional

Frz Fan and Condenser Fan speeds may be changed during the service mode. To perform this change, you can set to OFF-22-10-OFF... with the OK key while rF or CF is selected in the component selection phase.

Speed may vary according to the product/component values.

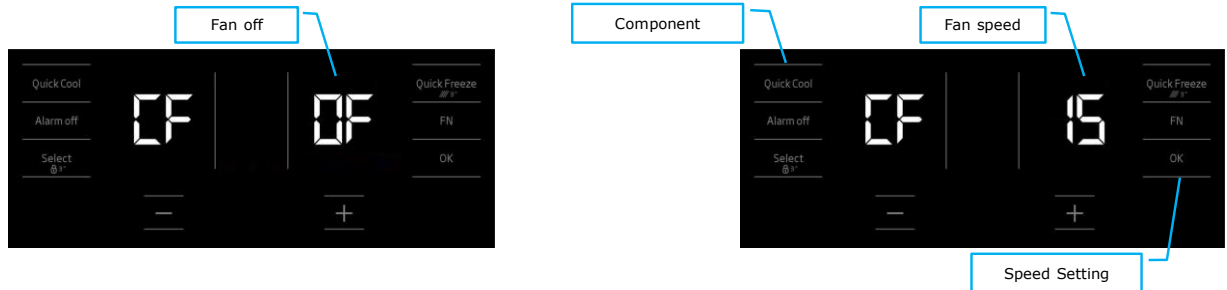

When Icematic 'Ir' is selected, Icematic is oriented at pouring direction by selecting '1' using FRZ Set button and at fixing direction when '2' is selected. Switching to OFF stops the icematic motor

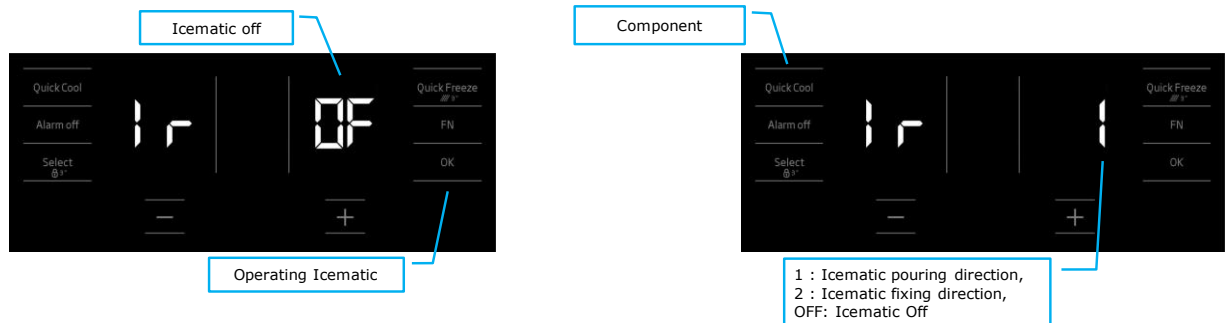

Step 6: Select and OK keys are shortly pressed simultaneously to switch to the step for setting water and dispenser illumination durations. - *Optional



Setting the Icematic water intake time:
1sec(10)-9.9sec(99) range

Setting Dispenser light On time:
1sec(10)-9.9sec(99) range

Exiting the Service Mode:

If the following issues occur, the service mode is exited:


Power failure

Pressing Select and OK keys simultaneously for 3 seconds

Operating in service mode for 30 minutes

**7.3.U4 CONTROL CARD FOREVER DISPLAY DEALER MODE
DEALER MODE ACTIVATION**

- The display board we use in the refrigerator has a six-key system.
- Set values are shown on the display.

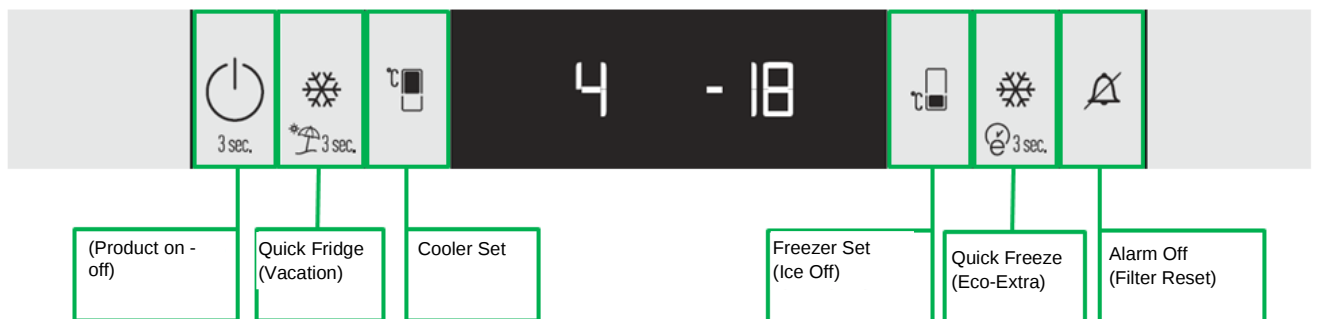

 The figure given is for schematic purposes and may not be exactly the same with the product. If the relevant parts are not available in the product, it applies to other models.

***(pressing for 3 seconds)**

Step 1: Press and hold On/Off and Alarm Off buttons for 3 sec within the first 60 seconds to switch to password entry screen.



Dealer Mode
(3 sec)




- If the key configuration is pressed correctly, dealer mode is enabled with a buzzer sound. Alarm icon lights continuously.
- Related icons light as the display button is pressed; no cooling is made.
- If the door is opened, "door open" alarm is heard, and pressing any button deactivates the active "door open" alarm.
- Once service test is configured after power failure, the post service test dealer mode is terminated.




7.4.U4 CONTROL CARD FOREVER DISPLAY SERVICE TEST ACTIVATION OF SERVICE TEST

- The display board we use in the refrigerator has a six-key system.
- Set values are shown on the display.

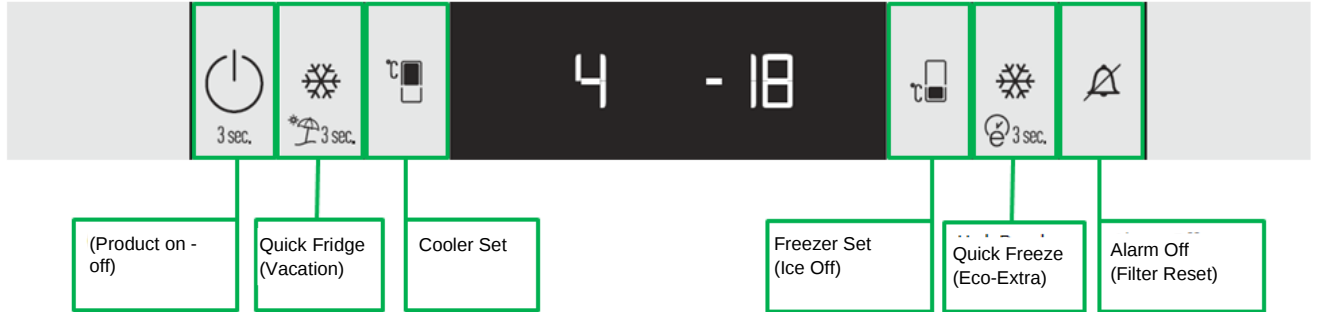

*(pressing for 3 seconds)

Step 1: Press and hold On/Off and Alarm Off buttons for 3 sec within the first 60 seconds to switch to password entry screen.

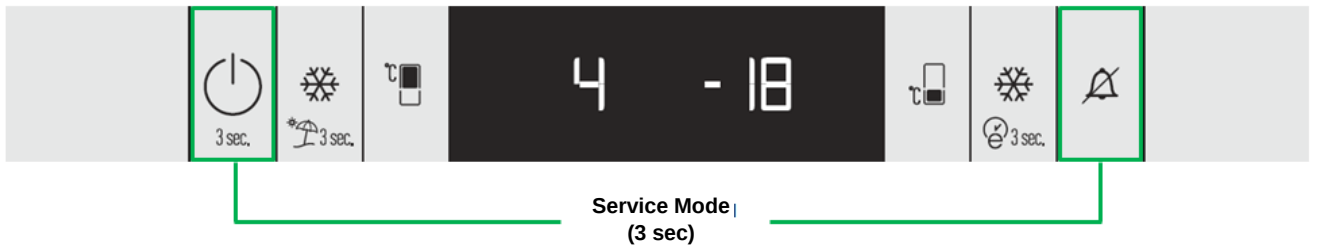

- Service test is entered by pressing the freezer set button for 4 times consecutively.



7.5.U4 CONTROL CARD FOREVER DISPLAY SERVICE TEST

VERSION NUMBER DISPLAY

- Once entered in the service test, icons work for ON for 0.5 sec. and OFF for 0.5 sec.



- Once any button is pressed, Step 1 is terminated.

Step 2: Firstly, the display software version info is shown on the FF compartment and the revision info is shown on the FRZ compartment.

- Shown on Forever displays as version - revision 0-0.



- When any key is pressed, control board version info is shown on the FF compartment and the revision info is shown on the FRZ compartment.




NOTE: To see updated version revision info, control board and display technical drawings must be checked.


7.6.U4 CONTROL CARD FOREVER DISPLAY SERVICE TEST SENSOR TEMPERATURES DISPLAY

Step 3: When any button is pressed, sensor display step is entered. Sensor display is as follows.

View (Value-Sensor) :

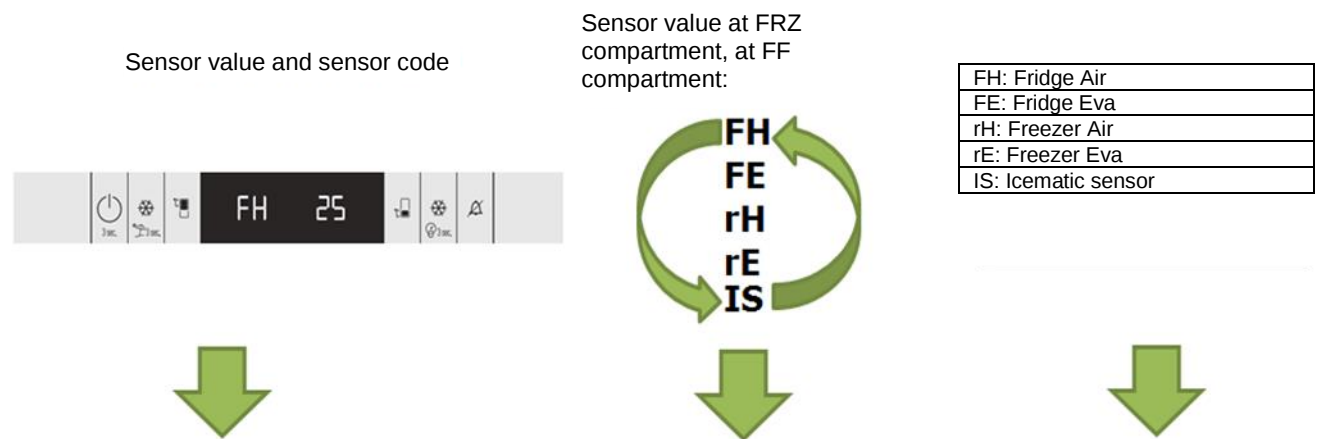


View (Value-Cabin Code) :

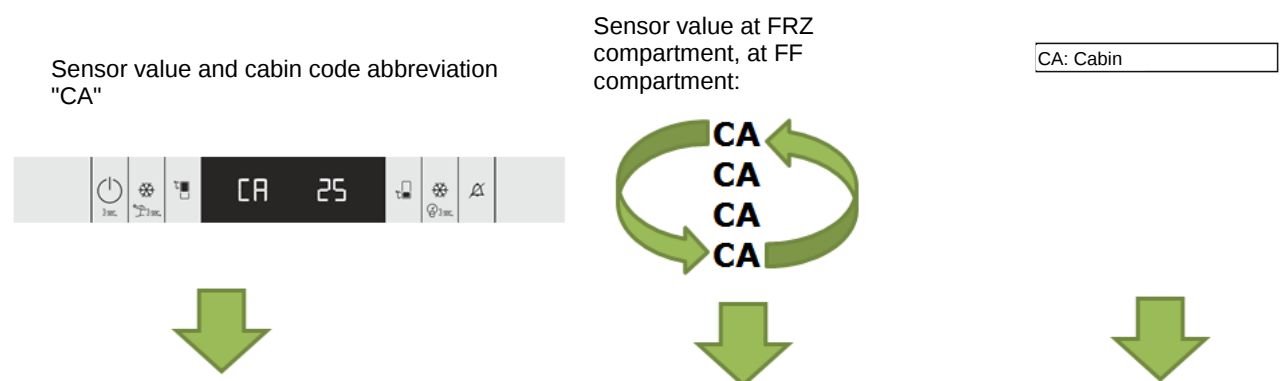

View (Value-Cabin Code) :

Sensor value and cabinet code

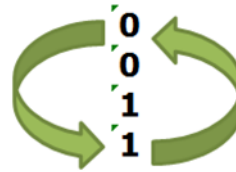

CA: 0 Fridge
CA: 1 Freezer

- Switch between sensors can be made by pressing Fridge Set button in forward direction and Quick Fridge button in backward direction.
- When the product On/Off and Alarm Off buttons are shortly pressed simultaneously, setting mode switches between reading, concurrent on/off of fans and illuminations, component driving, water intake time, and dispenser light time after each press.




Step 4: Concurrent on/off step of fans and illuminations: When Frz Set button is pressed, FF Fan, Frz Fan, Condenser Fan, FF Illumination, Frz Illumination, Blue Ray components are turned on or off.




7.7.U4 CONTROL CARD FOREVER DISPLAY SERVICE TEST COMPONENT DRIVE STEP

Step 5: Product ON/OFF and Alarm Off buttons are shortly pressed simultaneously to switch to the component drive step.

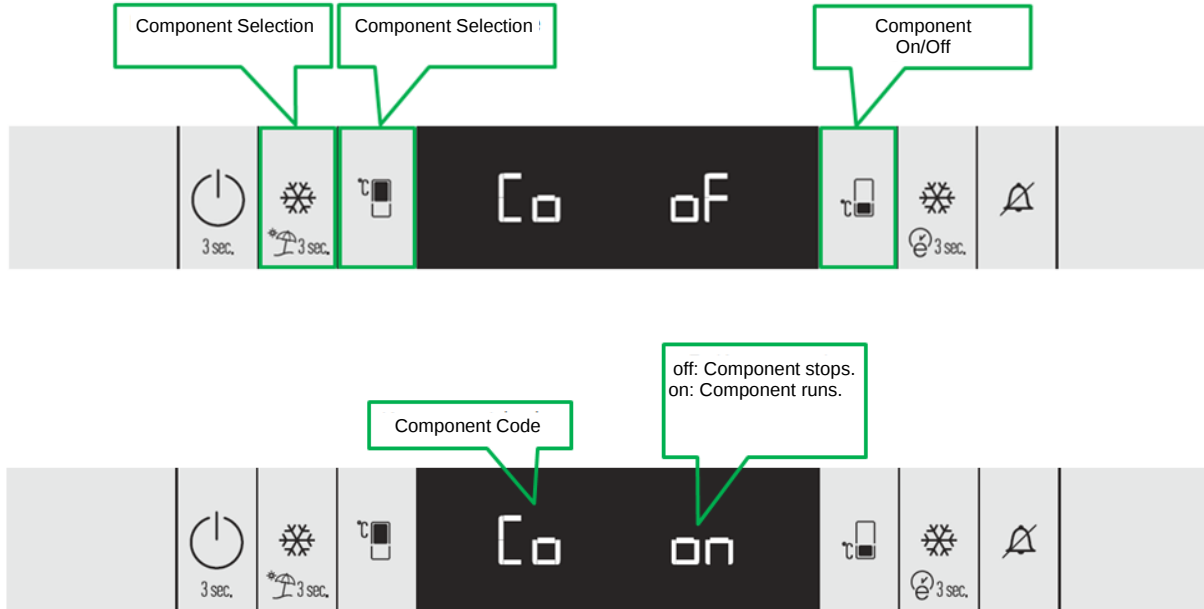


Component Name	Component Code	Component Name	Component Code
FF Fan	FF	Water Valve	dU
FF Heater	FO	Ice Valve	bU
Ioniser	Io	Water Pipe Heating	Sb
Blue Light	bA	Ice Selector	IS
FF Illumination	FL	Ice Shutter	IH
Frz Fan	rF	Ice Pusher	IP
Frz Eva heater	rE	Condenser Fan	CF
Frz Illumination	rL	Compressor	Co
Icematic	Ir		
Main Water Valve	AU		

- Frz Fan and Condenser Fan speeds may be changed during the service mode. To perform this change, while the rF and CF are pressed during component selection phase, it can be set to OFF-30-20-10-OFF... with RRZ setting button.

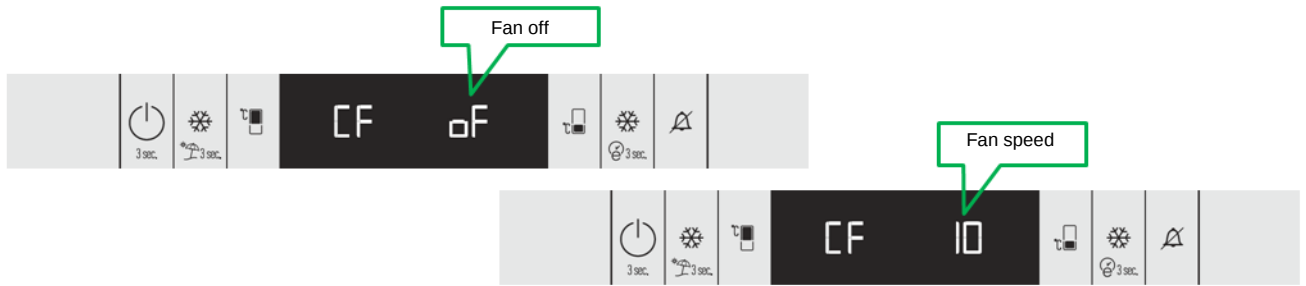

- When Icematic 'Ir' is selected, Icematic is rotated in pouring direction by selecting '1' using FRZ Set button and in the correction direction when '2' is selected.
- Pressing OFF stops icematic motor

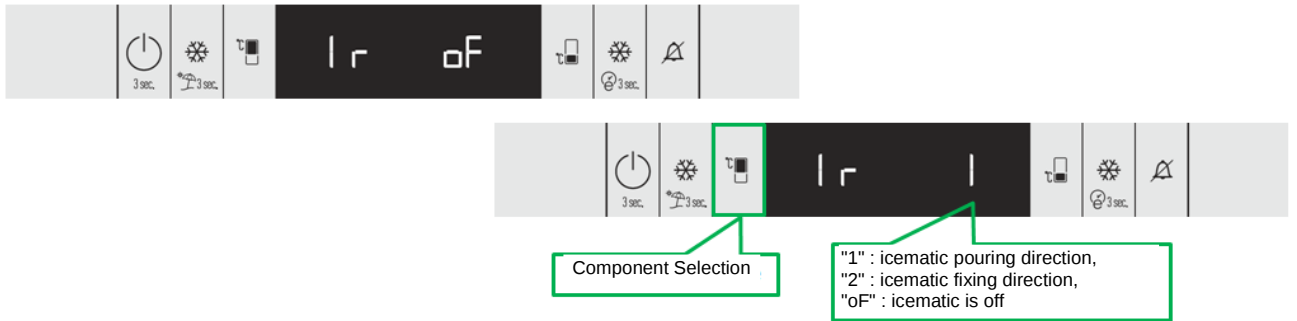

Step6: On/Off and Alarm Off buttons are shortly pressed simultaneously to switch to the component driving step.

- Setting Icematic water intake time:
- within the range of 1 sec. - 9.9 sec.



- Setting Dispenser light On time:
- within the range of 1 sec. - 9.9 sec.



7.8.Termination of Service Mode:

If the following states occur, service test is aborted.

- Power failure
- Product on-off and Alarm Off buttons are pressed simultaneously
- Operating in service test for 30 minutes


arçelik	TPM Single Point Lesson		
SUBJECT	U4 CONTROL BOARD SMART TOP TRIM DISPLAY SERCIVE TEST SERVICE TEST ACTIVATION	LESSON NO:	

The top trim display which are used in refrigerator has an eight-key system
Set values are shown on the display.



*(3 sec pressing)

Step 1: Switch to password entry screen by pressing On/Off and Alarm off keys simultaneously for 3 seconds after the refrigerator is energised.

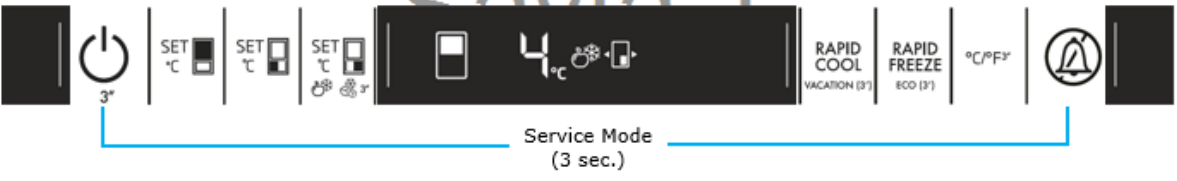

Press °C/°F button once to enter service test.



☐ MAINTENANCE	☒ QUALITY	☐ ISIG	☒ PROCESS	Page No: 1/4
PREPARED BY: (NAME/SURNAM) Tacettin Ekici 220007 PREPARED ON: 04.06.2018		TEAM: Electronic Control Management MACHINE CODE:		

	TPM Single Point Lesson		
SUBJECT	U4 CONTROL CARD SMART TOP TRIM DISPLAY SERVICE TEST VERSION NUMBER DISPLAY	LESSON NO.:	

After you have entered the service test, all icons will be ON for 1 second and OFF for 1 second as follows.

	SET °C	SET °C	SET °C		RAPID COOL VACATION (3')	RAPID FREEZE ECO (3')	°C/°F	
	SET °C	SET °C	SET °C		RAPID COOL VACATION (3')	RAPID FREEZE ECO (3')	°C/°F	

Once °C/°F button is pressed, Step 1 will be terminated.

Step 2: Firstly, the display software version and revision informations will be shown turn by turn

	SET °C	SET °C	SET °C		RAPID COOL VACATION (3')	RAPID FREEZE ECO (3')	°C/°F	
	SET °C	SET °C	SET °C		RAPID COOL VACATION (3')	RAPID FREEZE ECO (3')	°C/°F	

When °C/°F button is pressed, the control board version and revision informations will be shown turn by turn

	SET °C	SET °C	SET °C		RAPID COOL VACATION (3')	RAPID FREEZE ECO (3')	°C/°F	
	SET °C	SET °C	SET °C		RAPID COOL VACATION (3')	RAPID FREEZE ECO (3')	°C/°F	

NOTE: For updated version revision info, control board and display technical drawings must be checked.

☐ MAINTENANCE ☒ QUALITY ☐ ISIG ☒ PROCESS	Page No: 2/4
PREPARED BY (NAME/SURNAME) Tacettin Ekici 220007 PREPARED ON: 04.06.2018	TEAM: Electronic Control Management MACHINE CODE:

arçelik	TPM Single Point Lesson		
SUBJECT	U4 CONTROL BOARD SMART TOP TRIM DISPLAY SERVICE TEST SENSOR TEMPERATURES DISPLAY	LESSON NO:	

Step 3: When °C/°F button is pressed, sensor display step is entered. The sensor display is as follows.

View 1(Sensor-Code) :



FH: Fridge Air
FE: Fridge Eva
rH: Freezer Air
rE: Freezer Eva
JH: Joker Air
JE: Joker EVA
*IS: Icematic Sensor

*Icematic sensor is optional.

View 2 (CA: Cabin Abbreviation) :



View 3 (Cabin Code) :



CA:0 Fridge
CA:1 Freezer
CA:2 Joker

View 4 (Sensor Value) :



You can switch between sensors by pressing Quick Fridge in a forward direction and by pressing Alarm Off button in a backward direction.
 When On/Off and Alarm off buttons are shortly pressed simultaneously, setting mode switches between sensor reading, concurrent on/off of fans (SC) and illuminations, component driving, water intake time(optional), and dispenser light time(optional) on each press.


☐ MAINTENANCE	☒ QUALITY	☐ ISIG	☒ PROCESS	Page No: 3/4
PREPARED BY (NAME/SURNAME) Tacettin Ekici 220007		TEAM: Electronic Control Management		
PREPARED ON: 04.06.2018		MACHINE CODE:		

arçelik	TPM Single Point Lesson		
	SUBJECT	U4 CONTROL BOARD SMART TOP TRIM DISPLAY SERVICE TEST COMPONENT DRIVE STEP	LESSON NO:

Step 4: Concurrent on/off step of fans and illuminations: Upon pressing the °C/°F button; FF Fan, Frz Fan, Condenser fan, FF Illumination, Frz Illumination, Blue Ray components are turned on or off.



Step 5: On/Off and Alarm off buttons are shortly pressed simultaneously to switch to the component driving step.

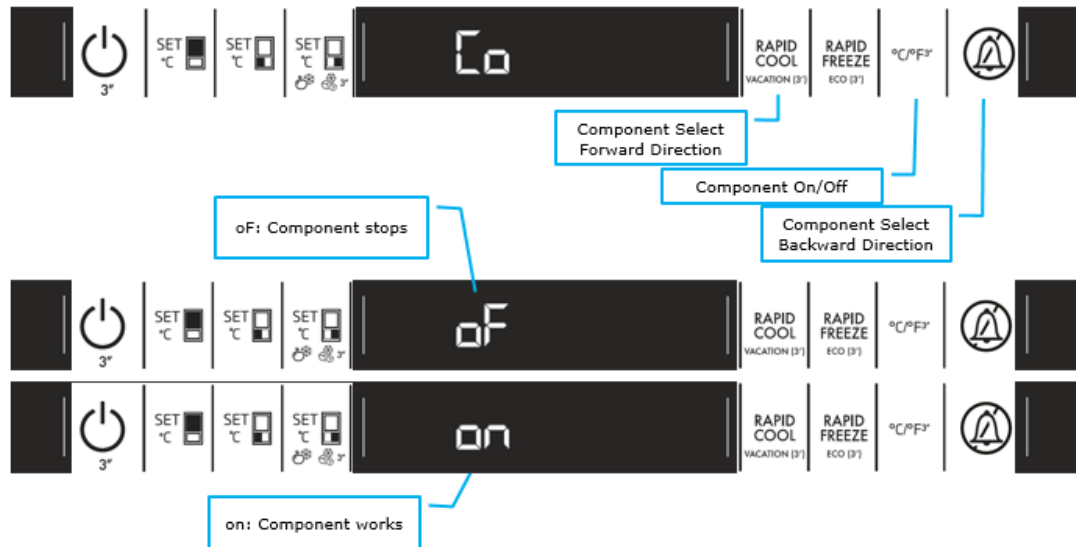


Component Name	Component Code	Component Name	Component Code
FF Fan	FF	Joker Fan	JF
FF Heater	FO	Joker Eva Heater	JE
Middle Section He	HC	Icematic-1	Ir
Ionizer	Io	Icematic-2	dA
Blue Light	bA	Water Pump	AP
FF Illuminaiton	FL	Condenser Fan	CF
Frz Fan	rF	Compressor	Co
Frz Eva Heater	rE	Solenoid Valve	SU


*Optional
*Optional
*Optional

If product has 2 water pump , it will be shown 2 times. First one is icemaker water pump,second one is dispenser water pump.

Frz Fan and Condenser Fan speeds may be changed during the service mode. To perform this change, you can set to OFF-22-10-OFF... with the °C/°F button while rF or CF is selected in the component selection phase. Speed may vary according to the product/component types.

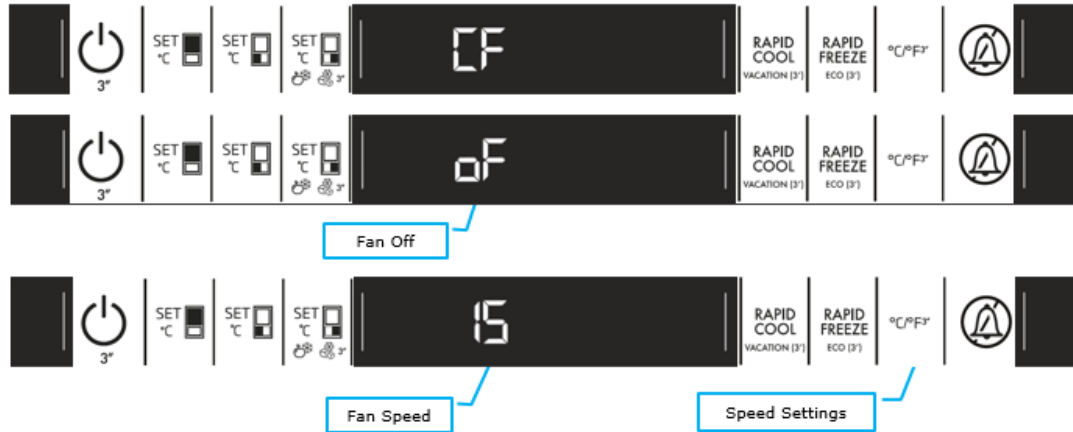

When Icematic 'Ir' is selected, Icematic is oriented at pouring direction by selecting '1' using °C/°F button and at fixing direction when '2' is selected. Switching to oF stops the icematic motor

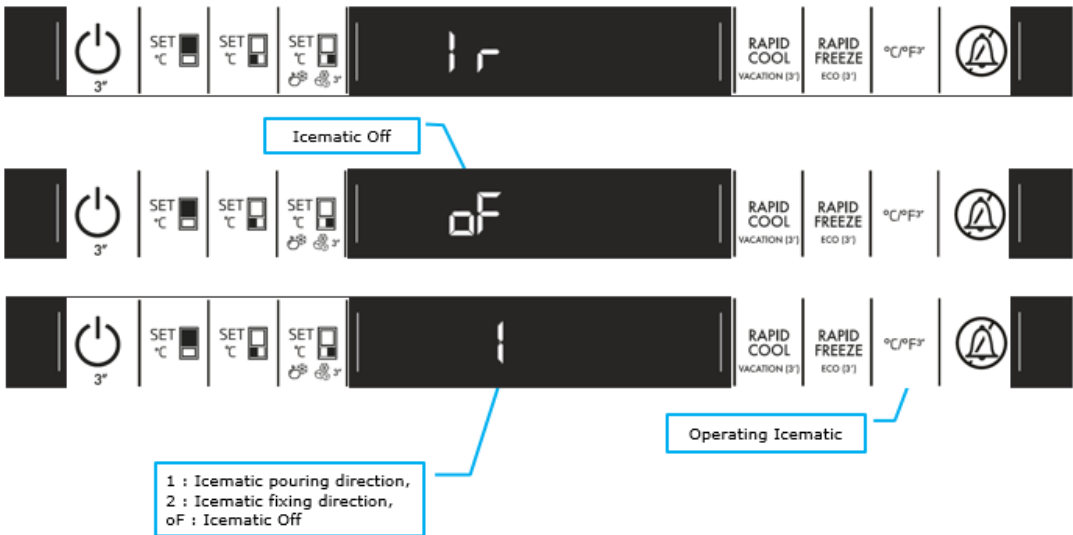

Exiting the Service Mode:

If the following issues occur, the service mode is exited:

Power failure

Pressing On/Off and Alarm Off keys simultaneously for 3 seconds

Operating in service mode for 30 minutes

☐ MAINTENANCE ☒ QUALITY ☐ ISIG ☒ PROCESS

Page No: 4/4

PREPARED BY (NAME/SURNAME): Tacettin Ekici

220007

PREPARED ON: 04.06.2018

TEAM: Electronic Control Management

MACHINE CODE:


arçelik	TPM Single Point Lesson		
SUBJECT	U4 CONTROL BOARD DUMMY TOP TRIM DISPLAY SERVICE TEST SERVICE TEST ACTIVATION	LESSON NO: 	

The top trim display which are used in refrigerator has an eight-key system
Set values are shown on the display.



*(3 sec pressing)

Step 1: Switch to password entry screen by pressing On/Off and Alarm off keys simultaneously for 3 seconds after the refrigerator is energised.

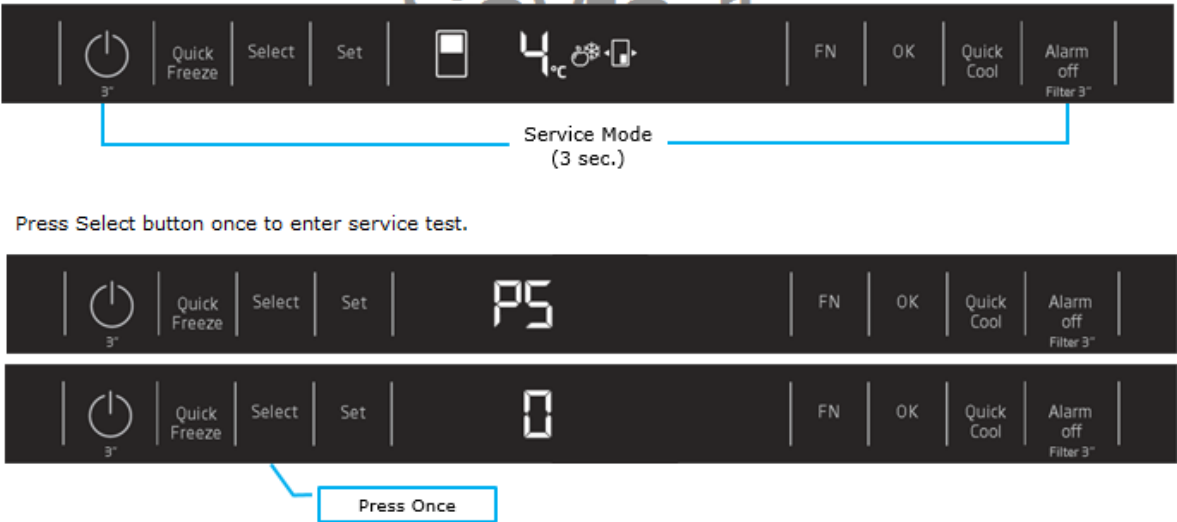


☐ MAINTENANCE	☒ QUALITY	☐ ISIG	☒ PROCESS	Page No: 1/4
PREPARED BY (NAME/SURNAM): Tacettin Ekici 220007 PREPARED ON: 01.06.2018		TEAM: Electronic Control Management MACHINE CODE:		

arçelik	TPM Single Point Lesson		
SUBJECT	U4 CONTROL BOARD DUMMY TOP TRIM DISPLAY SERVICE TEST VERSION NUMBER DISPLAY	LESSON NO:	

 After you have entered the service test, all icons will be ON for 1 second and OFF for 1 second as follows.





Once any button is pressed, Step 1 will be terminated.

Step 2: the control card version and revision informations will be shown turn by turn





NOTE: For updated version revision info, control board and display technical drawings must be checked.

☐ MAINTENANCE	☒ QUALITY	☐ ISIG	☒ PROCESS	Page No: 2/4
PREPARED BY (NAME/SURNAME) Tacettin Ekici 220007 PREPARED ON: 01.06.2018		TEAM: Electronic Control Management MACHINE CODE:		

	TPM Single Point Lesson		
SUBJECT	U4 CONTROL BOARD DUMMY TOP TRIM DISPLAY SERVICE TEST SENSORS TEMPERATURE DISPLAY	LESSON NO:	

Step 3: When any button is pressed, sensor display step is entered. The sensor display is as follows.

View 1 (Sensor Code) :



FH: Fridge Air
FE: Fridge Eva
rH: Freezer Air
rE: Freezer Eva
JH: Joker Air
JE: Joker EVA
*IS: Icematic Sensor

*Icematic sensor is optional.

View 2 (CA: Cabin Abbreviation) :



View 3 (Cabin Code) :



CA:0 Fridge
CA:1 Freezer
CA:2 Joker

View 4 (Sensor Value) :




You can switch between sensors by pressing Set button in a forward direction and by pressing Quick Cool button in a backward direction.

When On/Off and Alarm off buttons are shortly pressed simultaneously, setting mode switches between sensor reading, concurrent on/off of fans (SC) and illuminations, component driving, water intake time(optional), and dispenser light time(optional) on each press.


☐ MAINTENANCE		☒ QUALITY		☐ ISIG		☒ PROCESS		Page No: 3/4	
PREPARED BY (NAME/SURNAME) Tacettin Ekici 220007					TEAM: Electronic Control Management				
PREPARED ON: 01.06.2018					MACHINE CODE:				

arçelik	TPM Single Point Lesson		LESSON NO:	
	SUBJECT	U4 CONTROL BOARD DUMMY TOP TRIM DISPLAY SERVICE TEST COMPONENT DRIVE STEP		

Step 4: Concurrent on/off step of fans and illuminations: Upon pressing the Select button; FF Fan, Frz Fan, Condenser fan, FF Illumination, Frz Illumination, Blue Ray components are turned on or off.

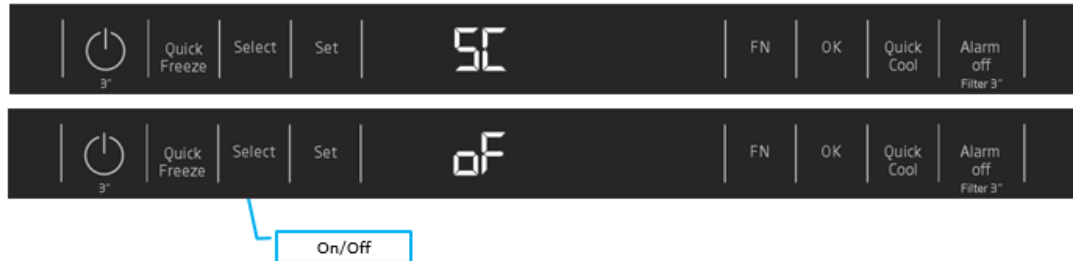

Step 5: On/Off and Alarm off buttons are shortly pressed simultaneously to switch to the component driving step.

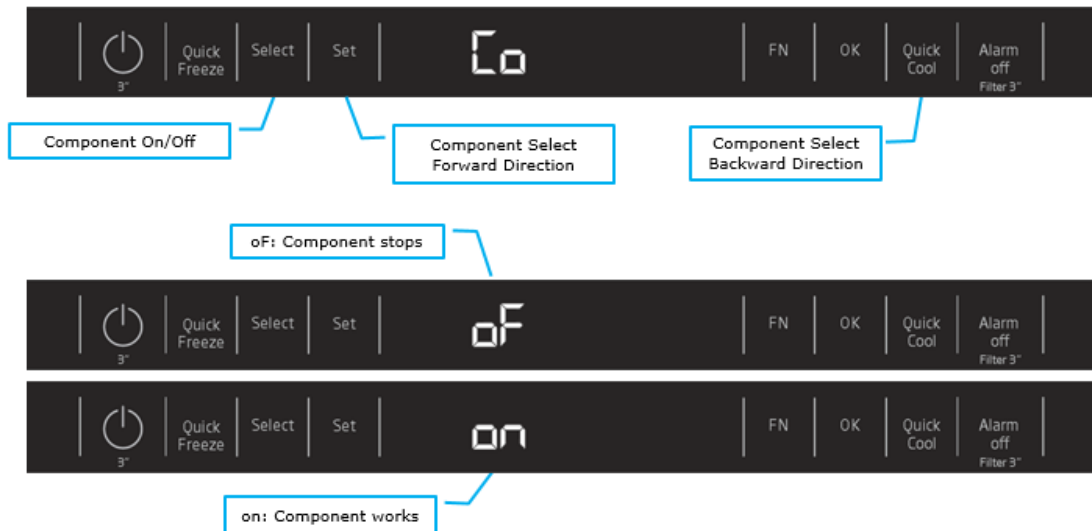


Component Name	Component Code	Component Name	Component Code
FF Fan	FF	Joker Fan	JF
FF Heater	FO	Joker Eva Heater	JE
Middle Section He	HC	Icematic-1	Ir
Ionizer	Io	Icematic-2	dA
Blue Light	bA	Water Pump	AP
FF Illuminaiton	FL	Condenser Fan	CF
Frz Fan	rF	Compressor	Co
Frz Eva Heater	rE	Solenoid Valve	SU


*Optional
*Optional
*Optional

If product has 2 water pump , it will be shown 2 times. First one is icemaker water pump,second one is dispenser water pump.

Frz Fan and Condenser Fan speeds may be changed during the service mode. To perform this change, you can set to OFF-22-10-OFF... with the Select button while rF or CF is selected in the component selection phase. Speed may vary according to the product/component types.

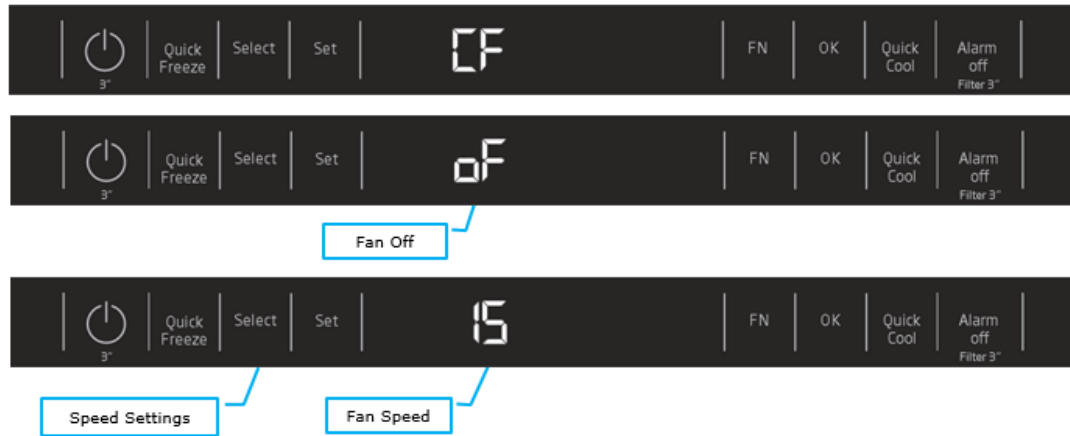

When Icematic 'Ir' is selected, Icematic is oriented at pouring direction by selecting '1' using °C/°F button and at fixing direction when '2' is selected. Switching to oF stops the icematic motor

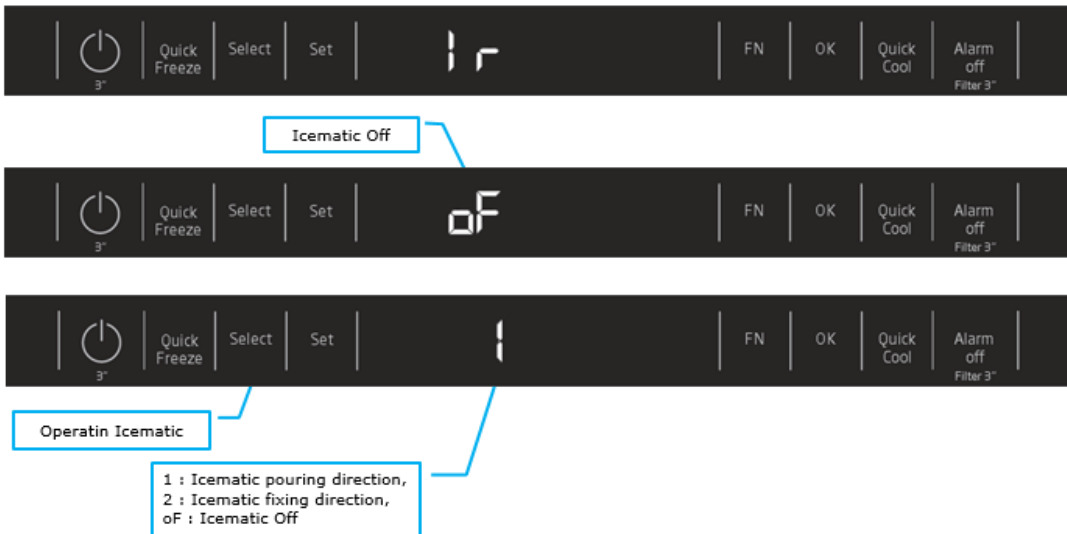

Exiting the Service Mode:

If the following issues occur, the service mode is exited:

Power failure

Pressing On/Off and Alarm Off keys simultaneously for 3 seconds

Operating in service mode for 30 minutes

☐ MAINTENANCE ☒ QUALITY ☐ ISIG ☒ PROCESS

Page No: 4/4

PREPARED BY (NAME/SURNAME): Tacettin Ekici

220007


PREPARED ON: 01.06.2018

TEAM:

Electronic Control Management

MACHINE CODE:

8. ELECTRIC CIRCUIT DIAGRAM

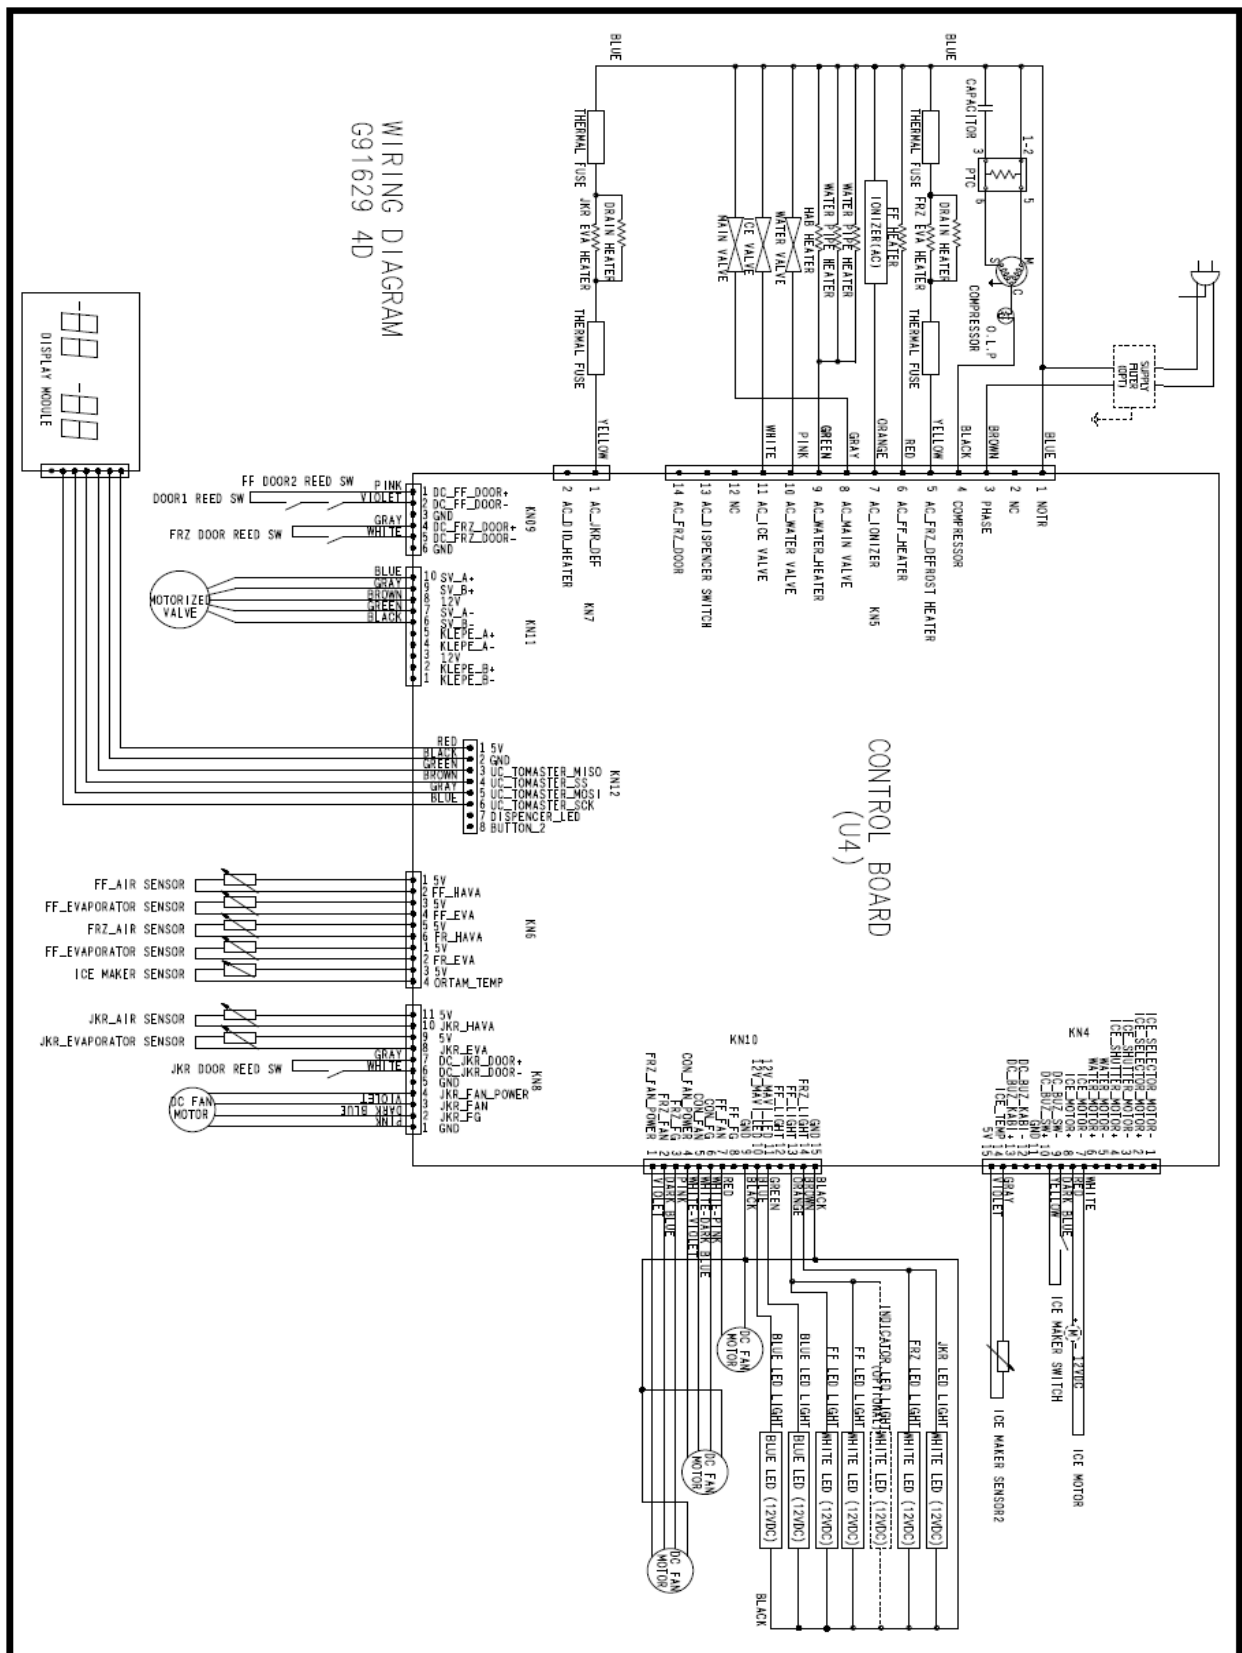


9.U4 MALFUNCTION ERROR CODES

Error Code	Error Definition
E0	Freezer Compartment Air Sensor Error
E1	Freezer Compartment Evaporator Sensor Error
E2	Cooler Compartment Evaporator Sensor Error
E3	Cooler Compartment Air Sensor Error
E4	Freezer Compartment Defrost Heater Error
E8	Ice Machine Sensor Error
E9	Ice Machine Error
E10	Joker Compartment Air Sensor Error
E11	Joker Compartment Evaporator Sensor Error
E12	Joker Compartment Defrost Heater Error
E13	Freezer Fan Error
E13 (Deep 4 doors models)	Ice Machine Chamber Defrost Sensor Error
E14	Joker Fan Error
E15	Condanser Fan Error
Warning icon and temperature	High Temp Error


9.1.E0 Freezer Air Sensor Error

**E0:
Freezer
Air
Sensor
Error**

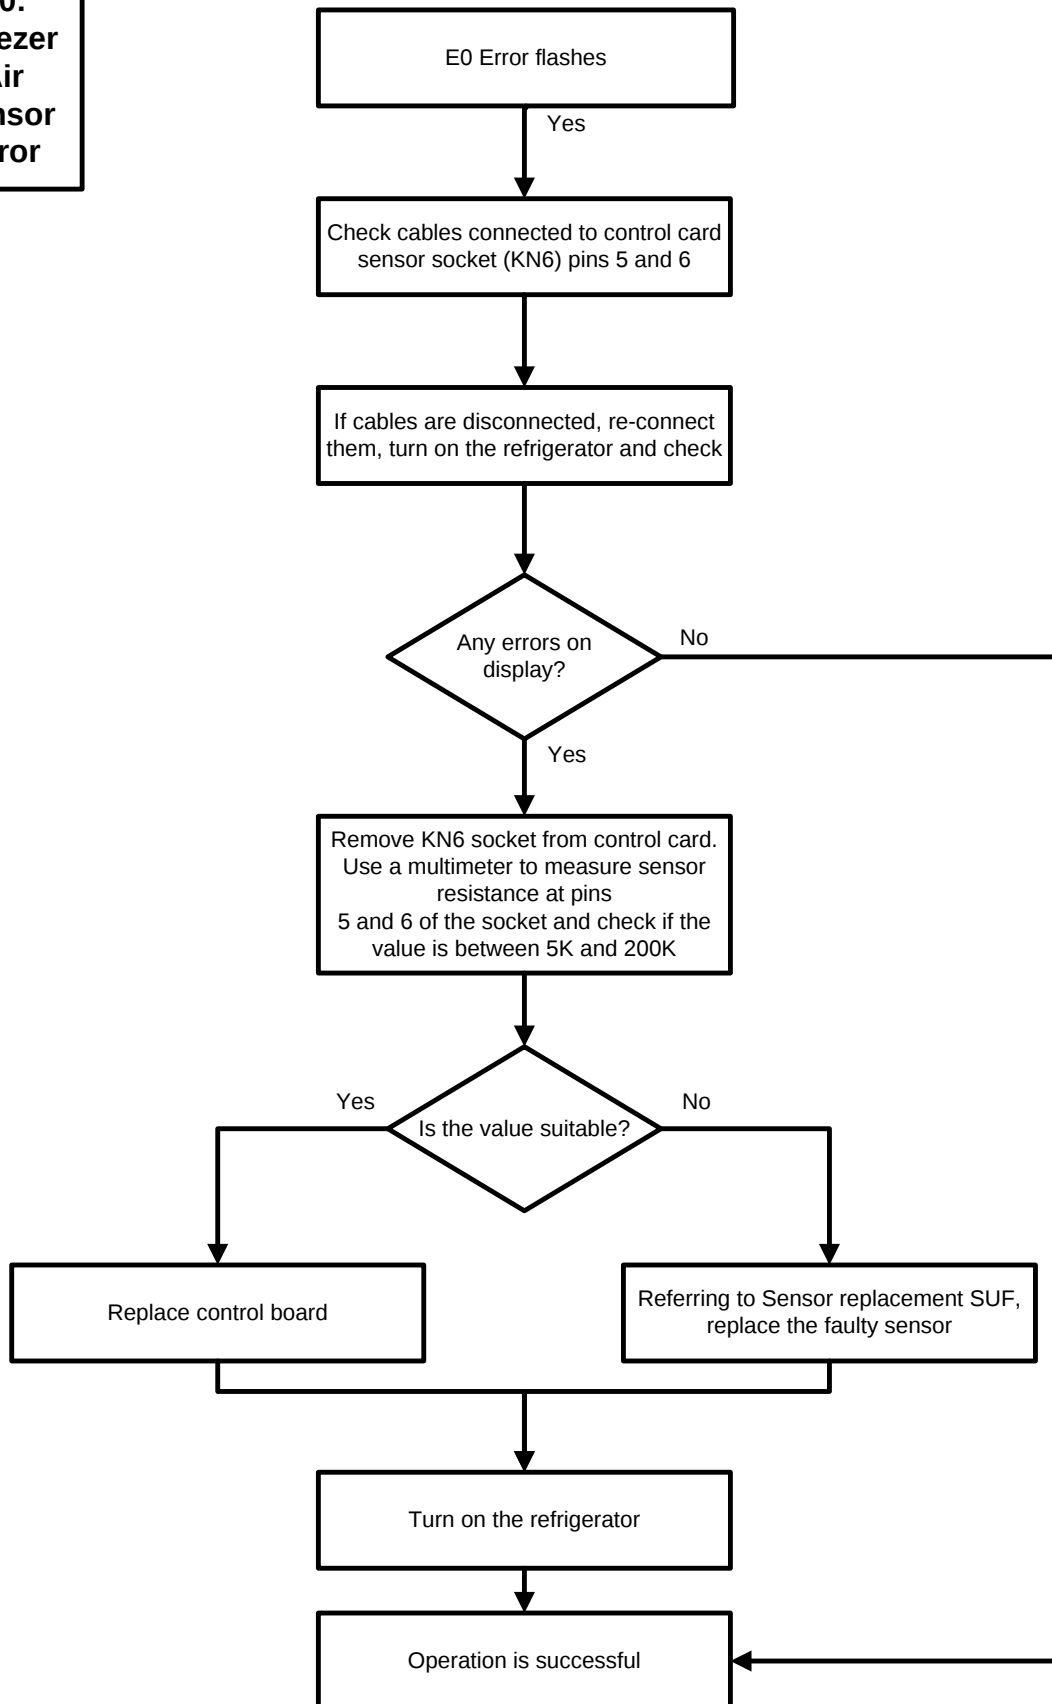


9.2.E1 Freezer Evaporator Sensor Error

**E1:
Freezer
Evaporator
Sensor
Error**

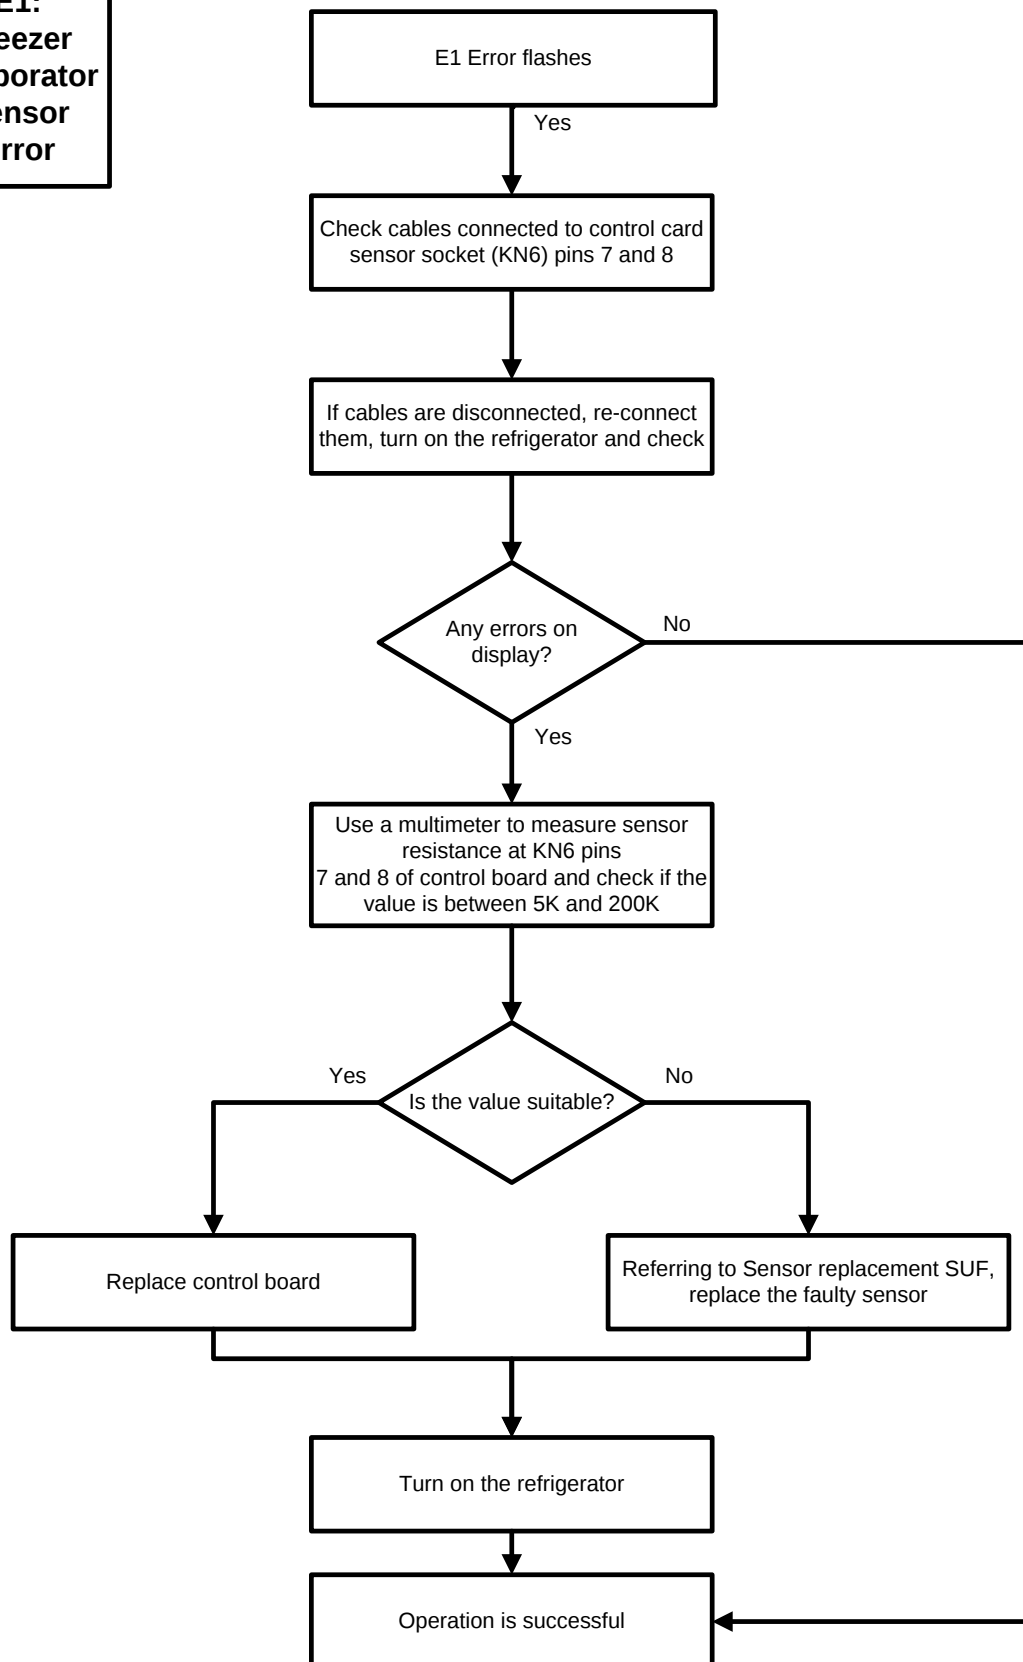


9.3.E2 Fridge evaporator sensor error

**E2:
Fridge
Evaporator
Sensor
Error**

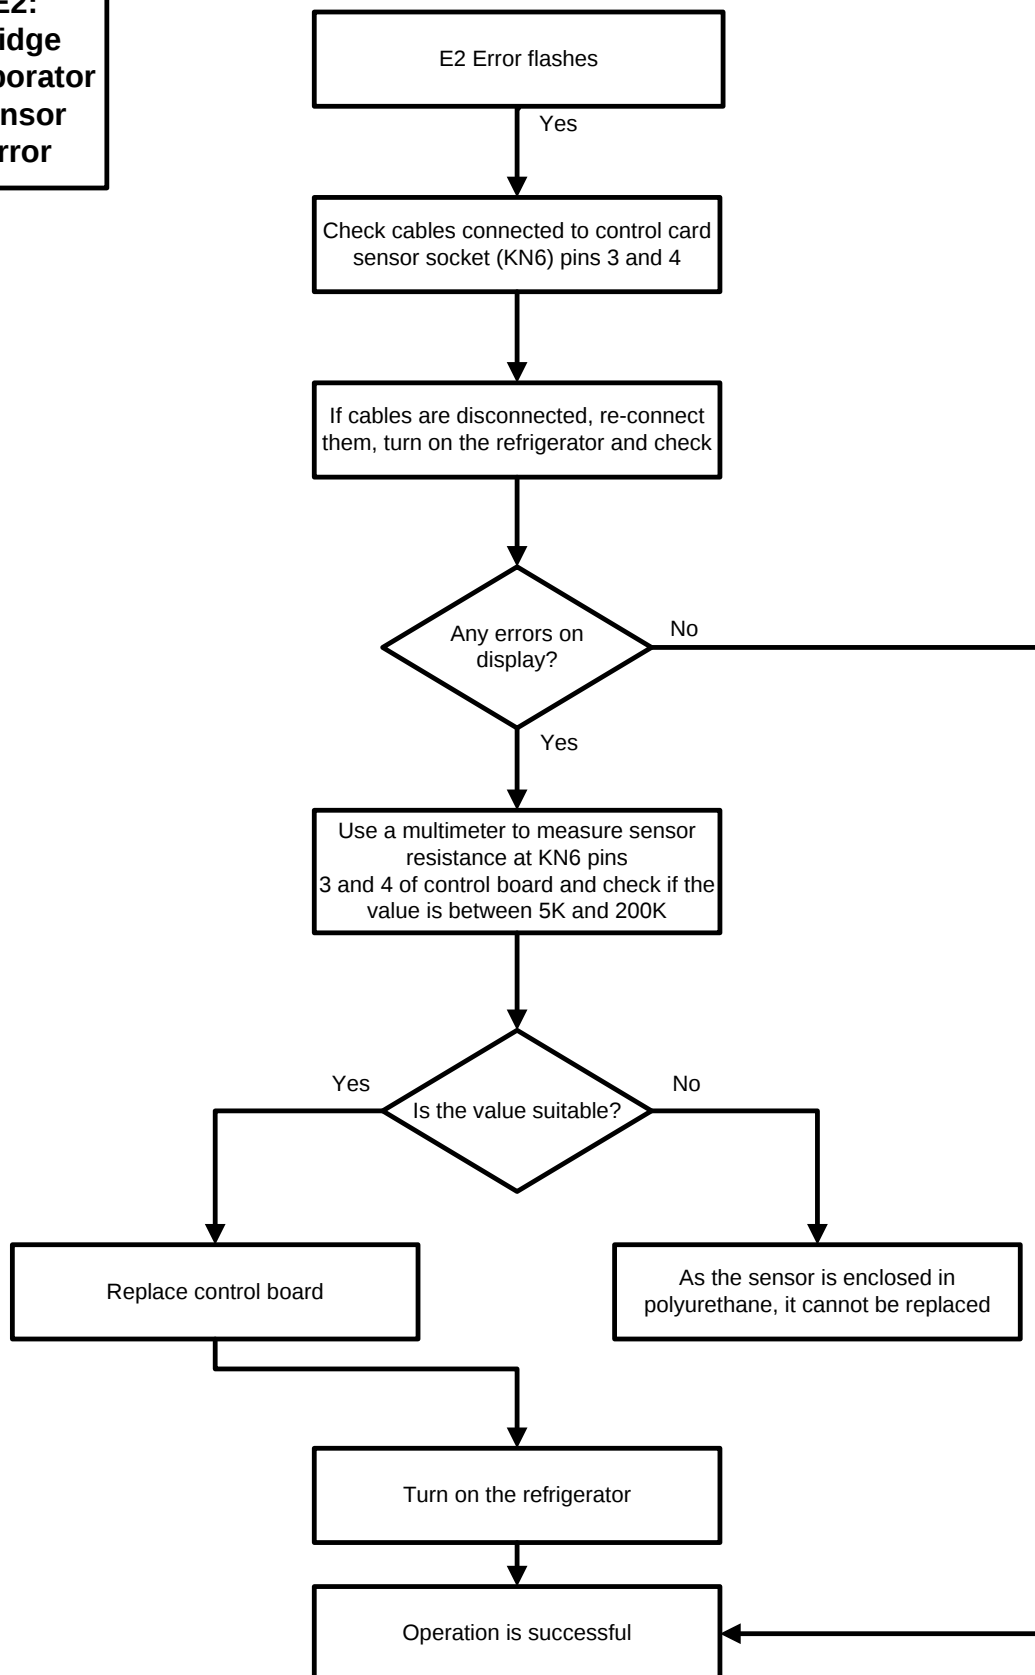


9.4.E3 Fridge Air Sensor Error

**E3:
Fridge Air
Sensor
Error**

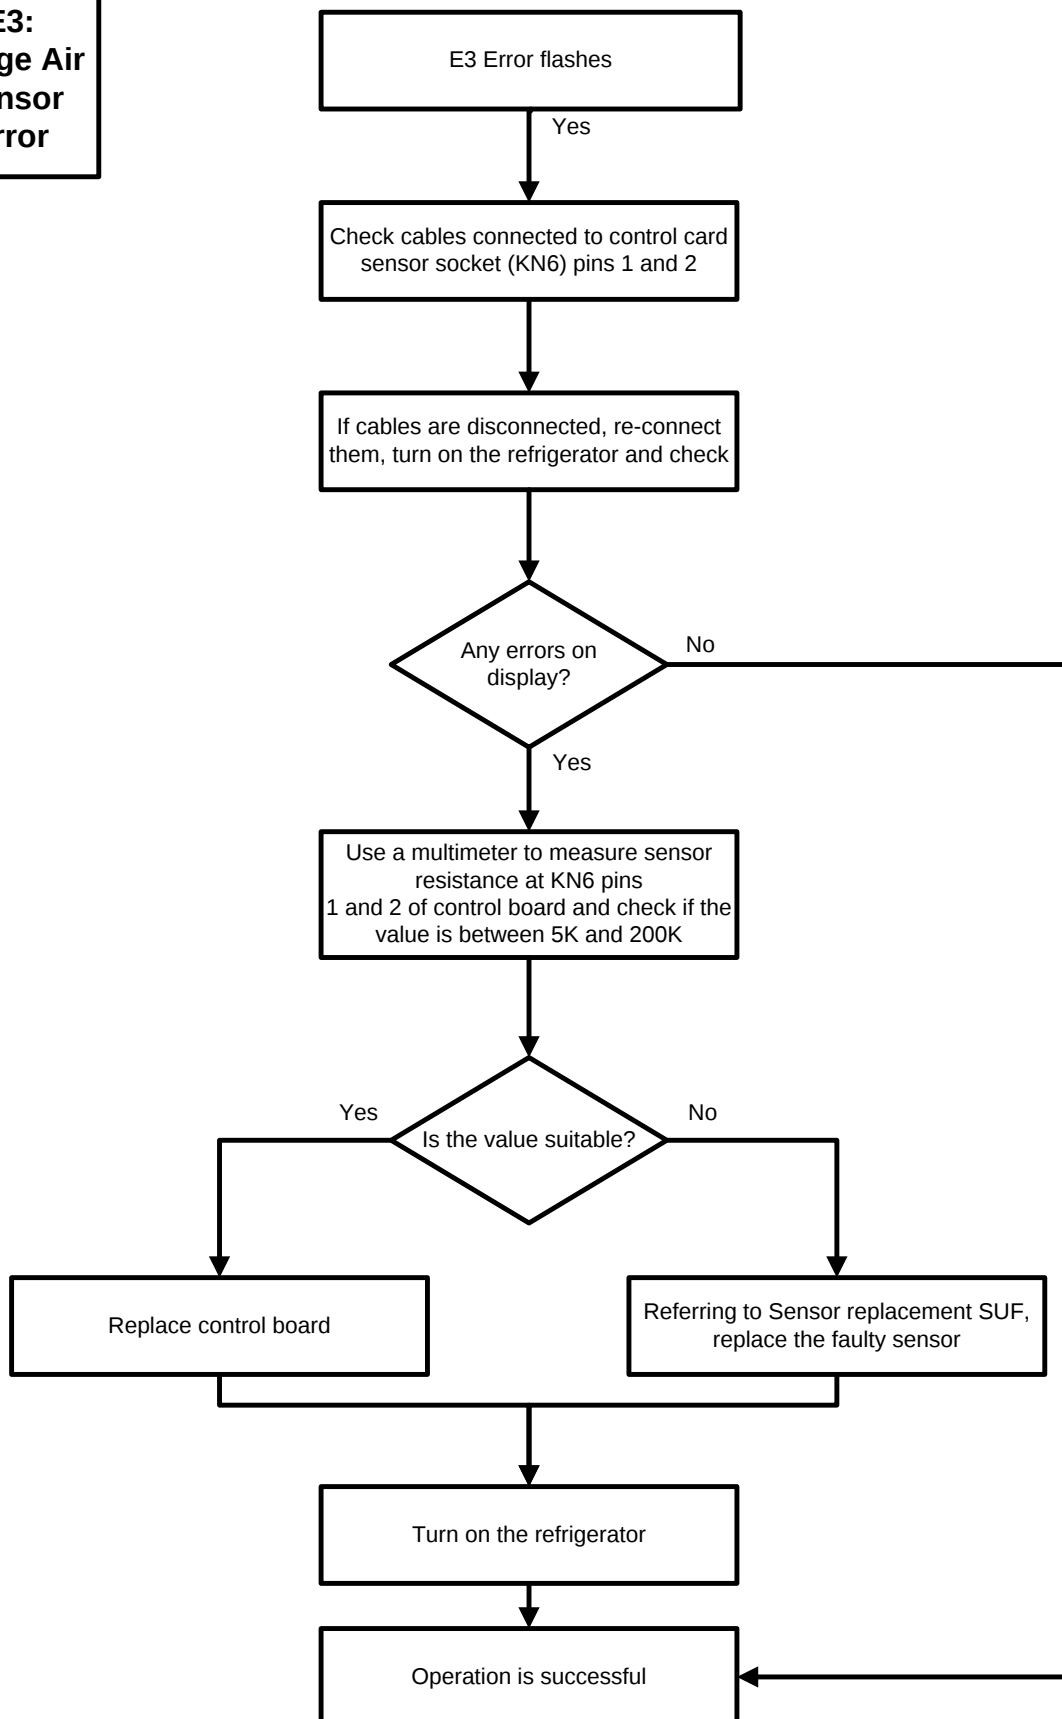


9.5.E4 Freezer Defrost Heater Error

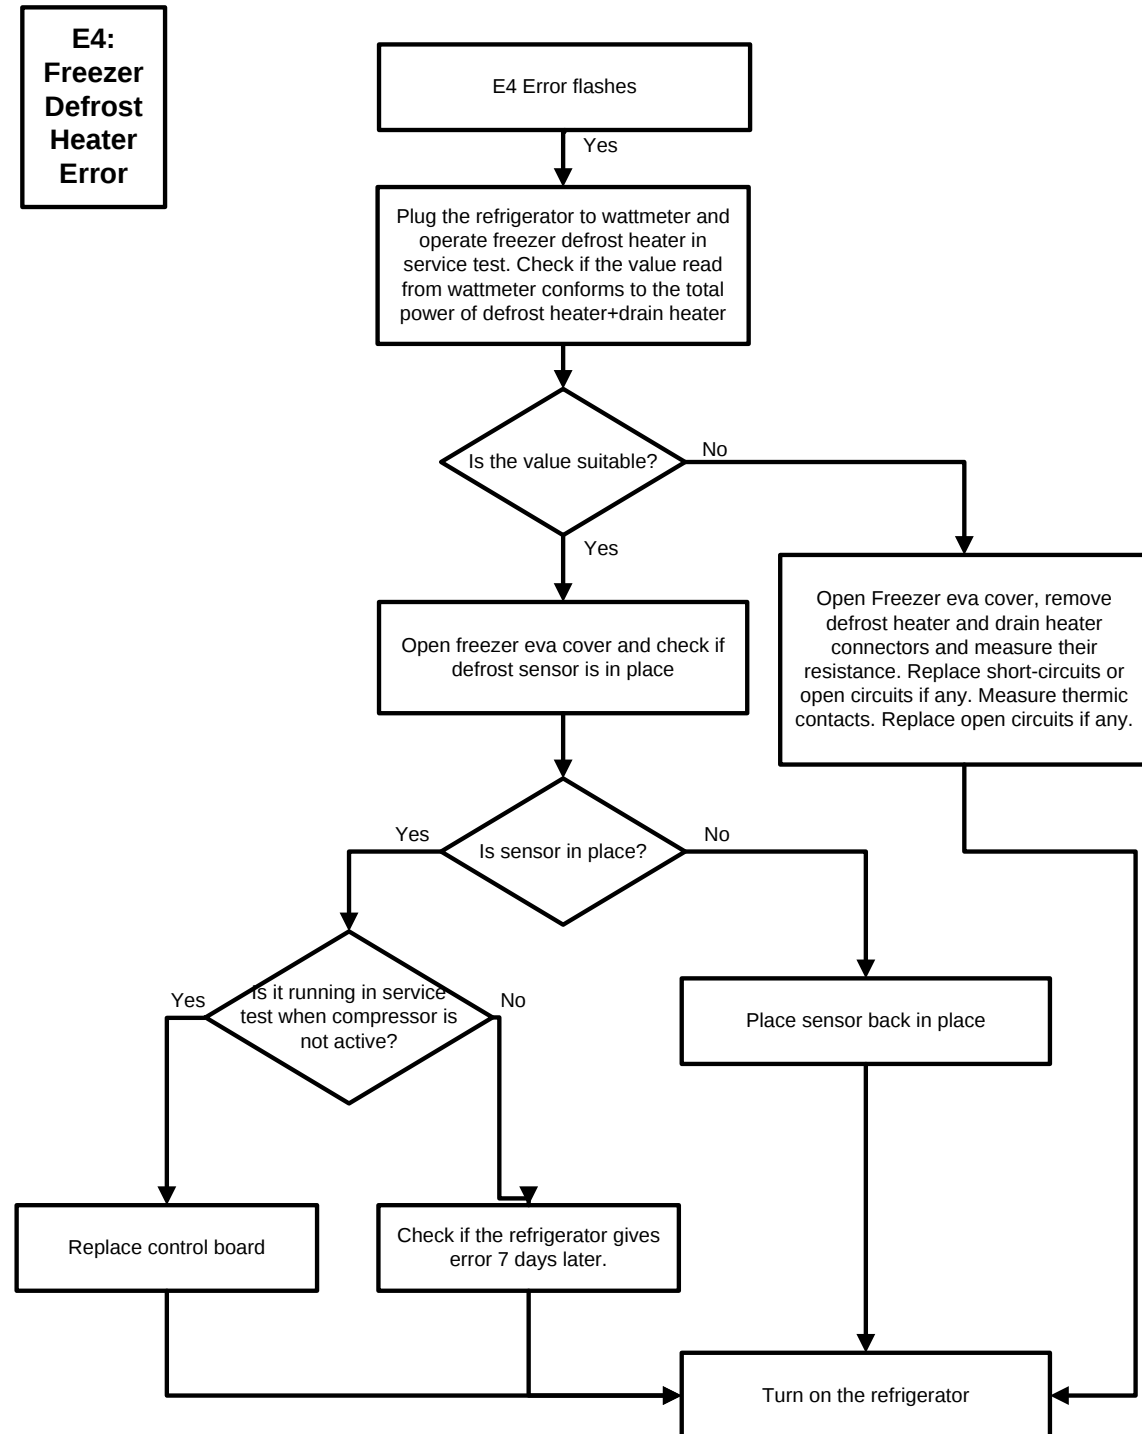


9.6.E8 Icematic Air Sensor Error


**E8:
Icematic
Air
Sensor
Error**

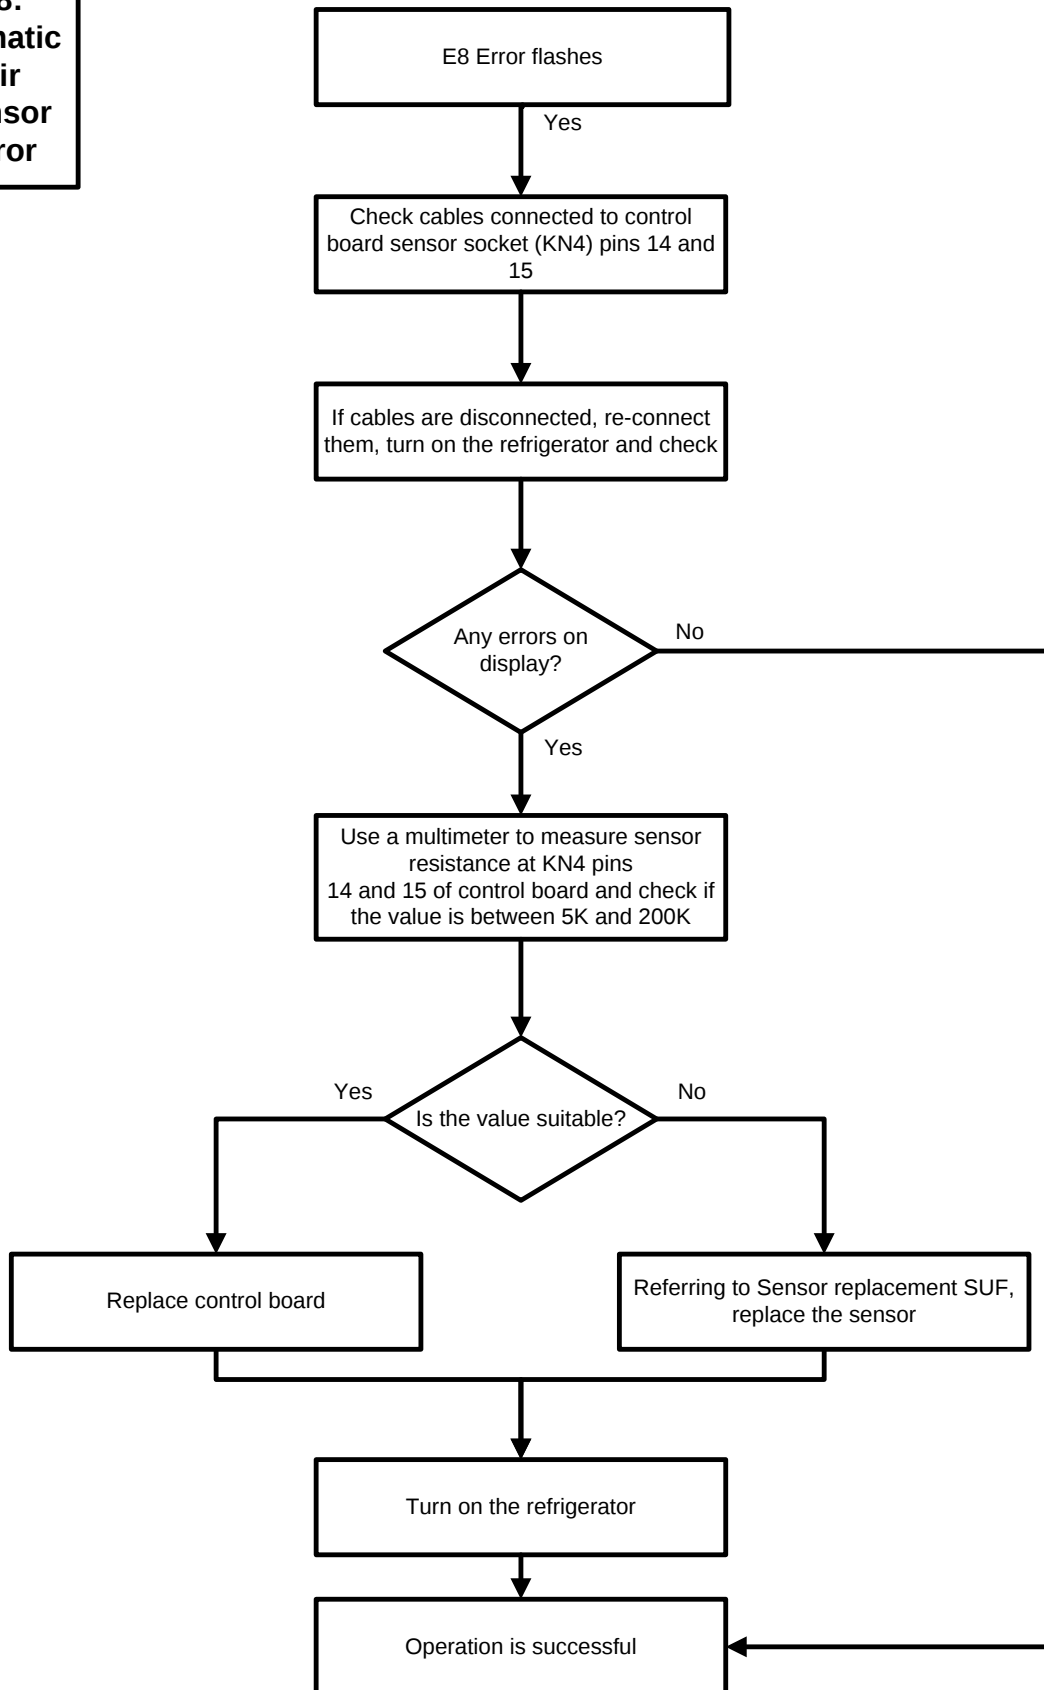

9.7.E9 Icematic Motor Error

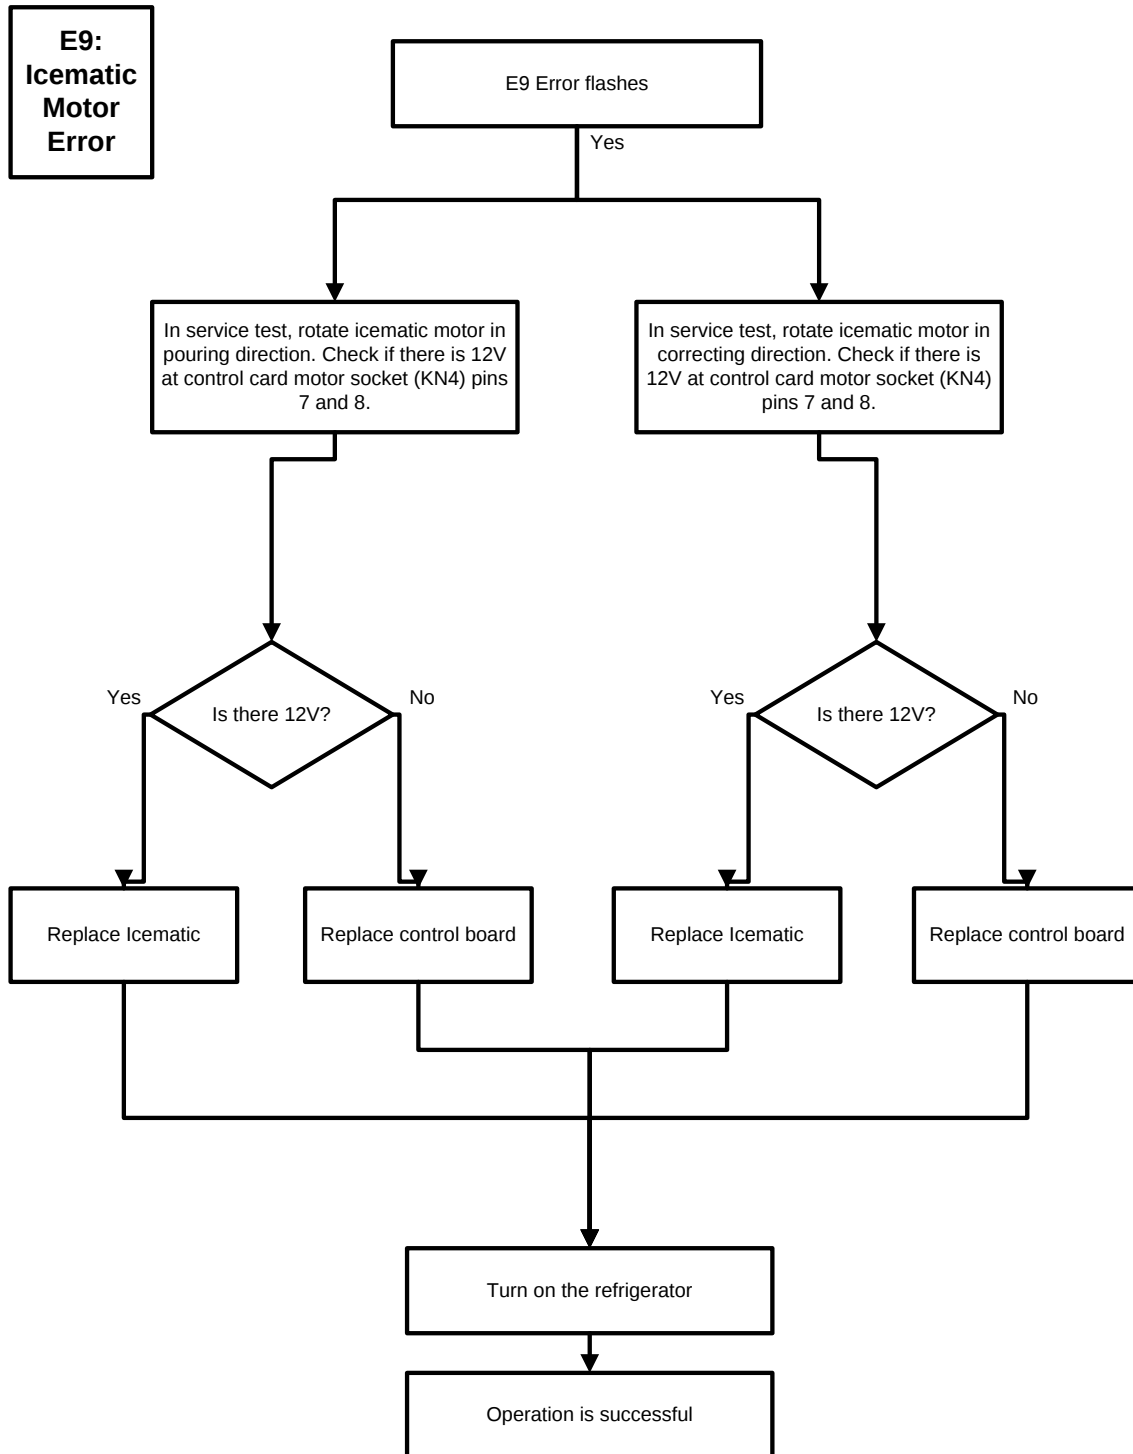


9.8.E13 Cyclic freezer fan error

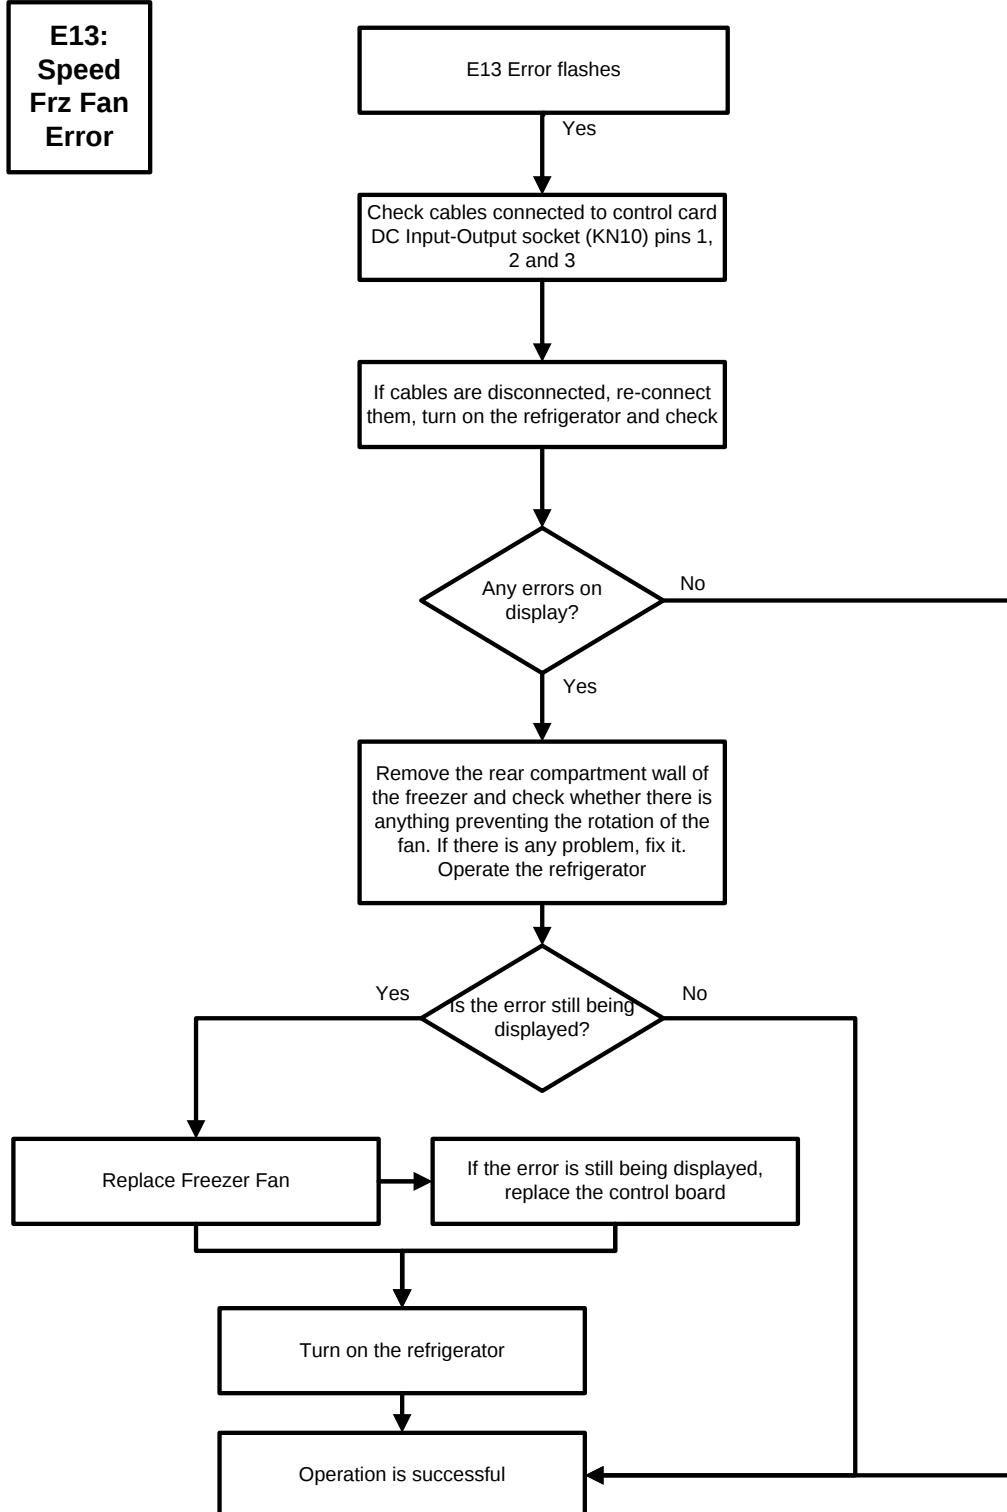


9.9.E15 Speed Condenser Fan Error

**E15:
Speed
Condenser
Fan Error**

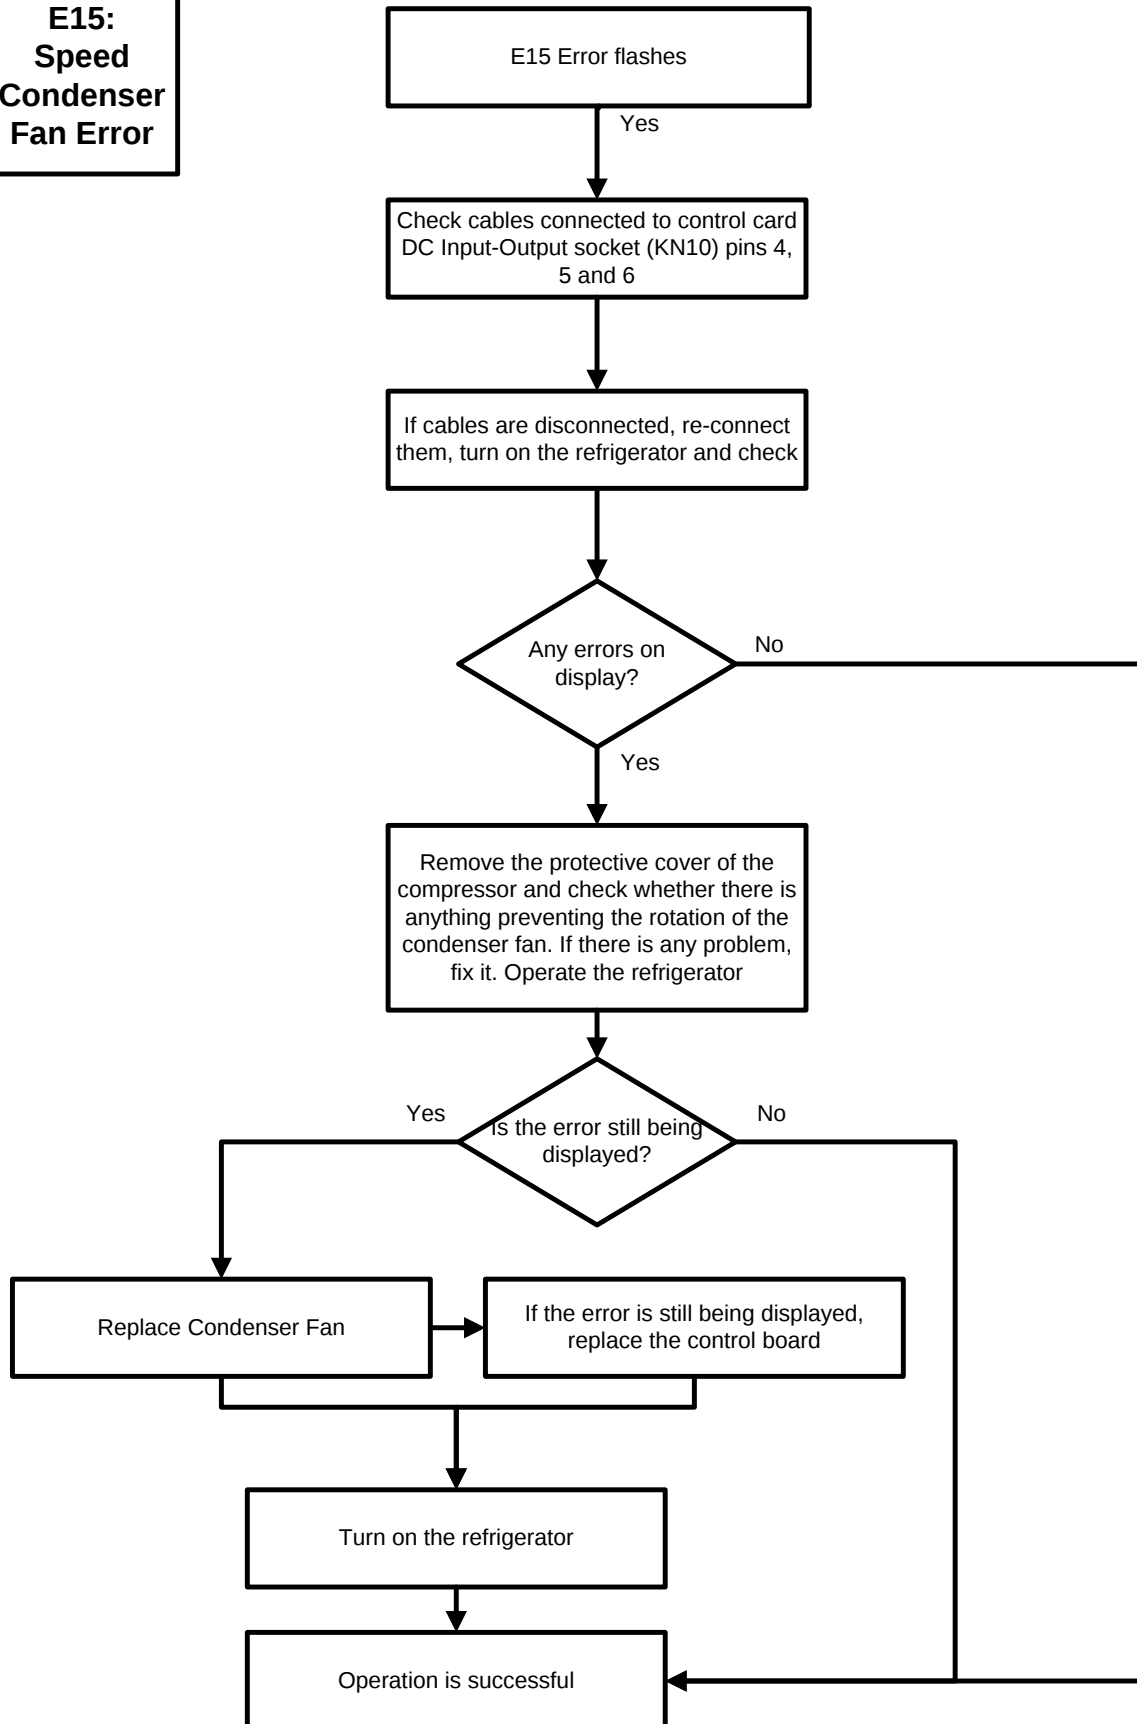


9.10.Cooling failure due to electrical issues

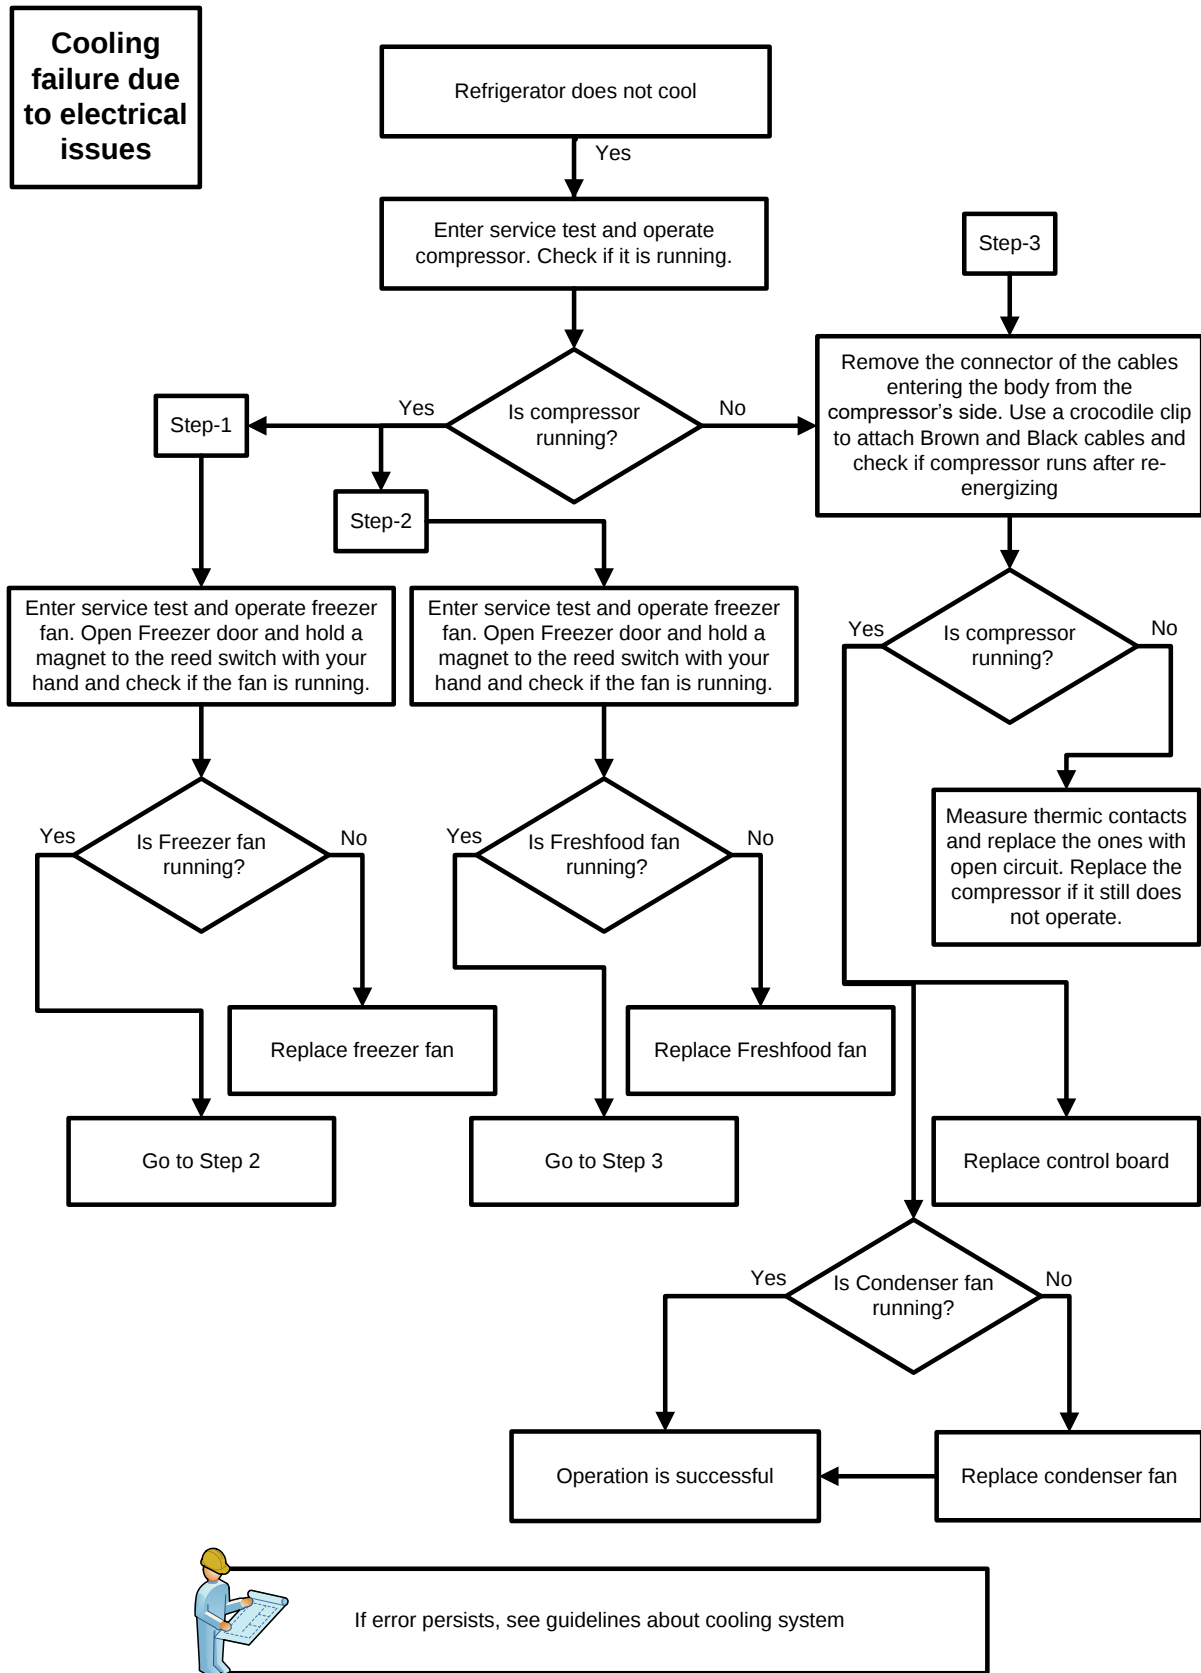


9.11.Freezing error due to electrical issues


**Freezing
error due to
electrical
issues**

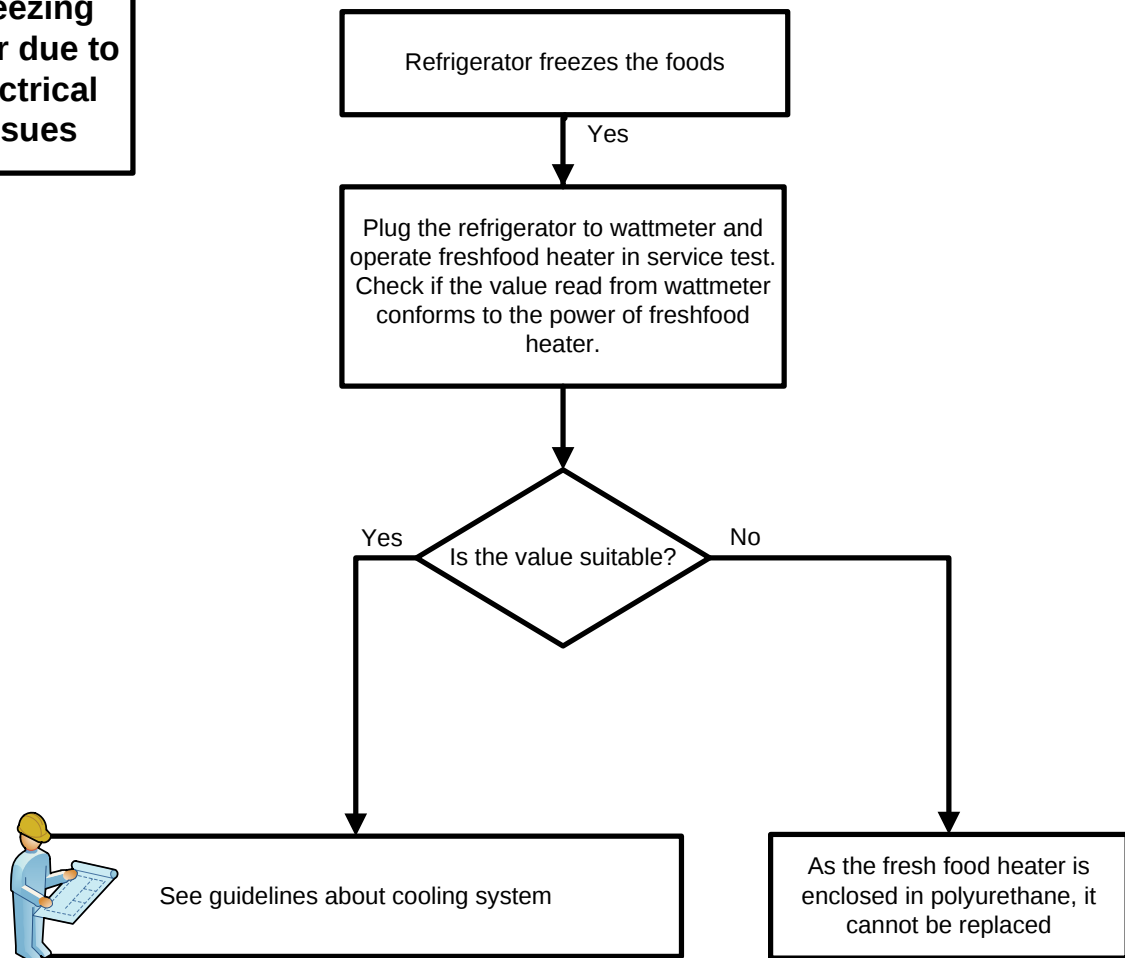


10.1.The refrigerator is not operating

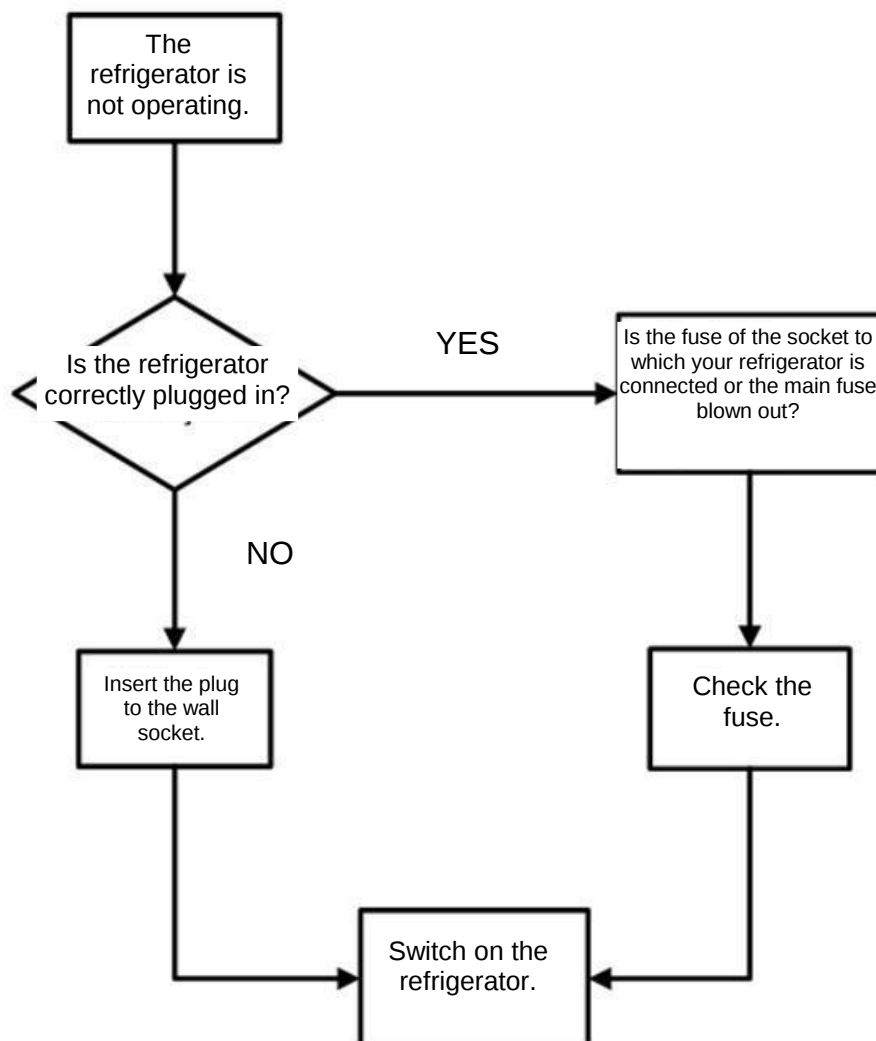


10.2.Condensation in the Fridge Compartment

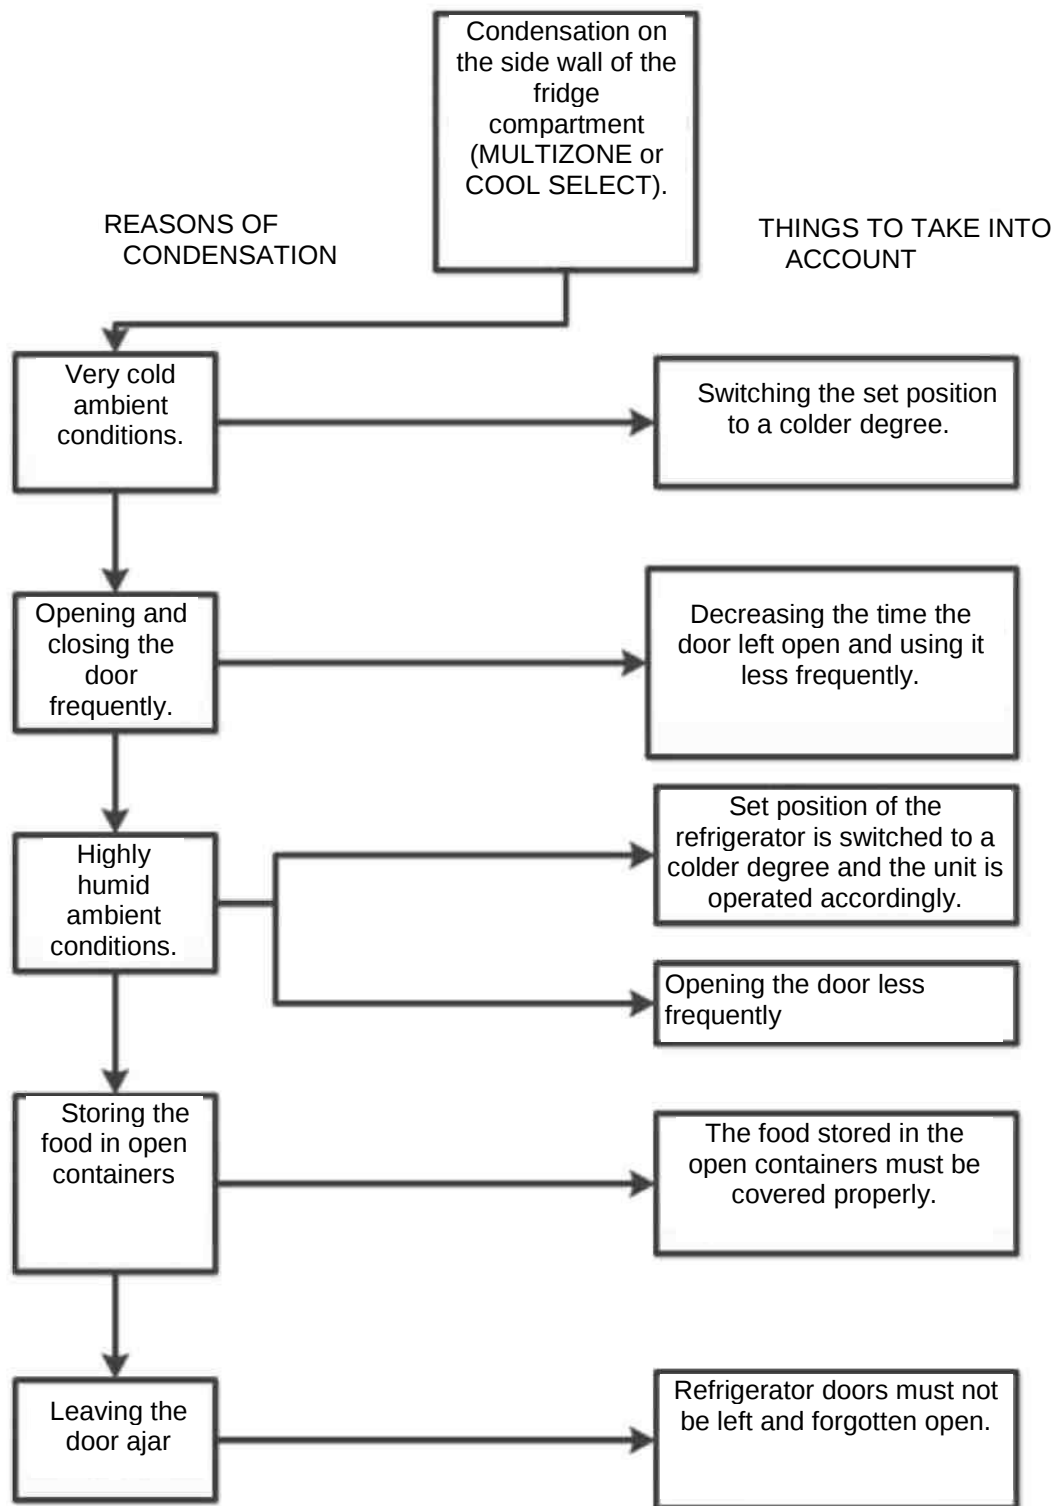


10.3.Compressor is not running

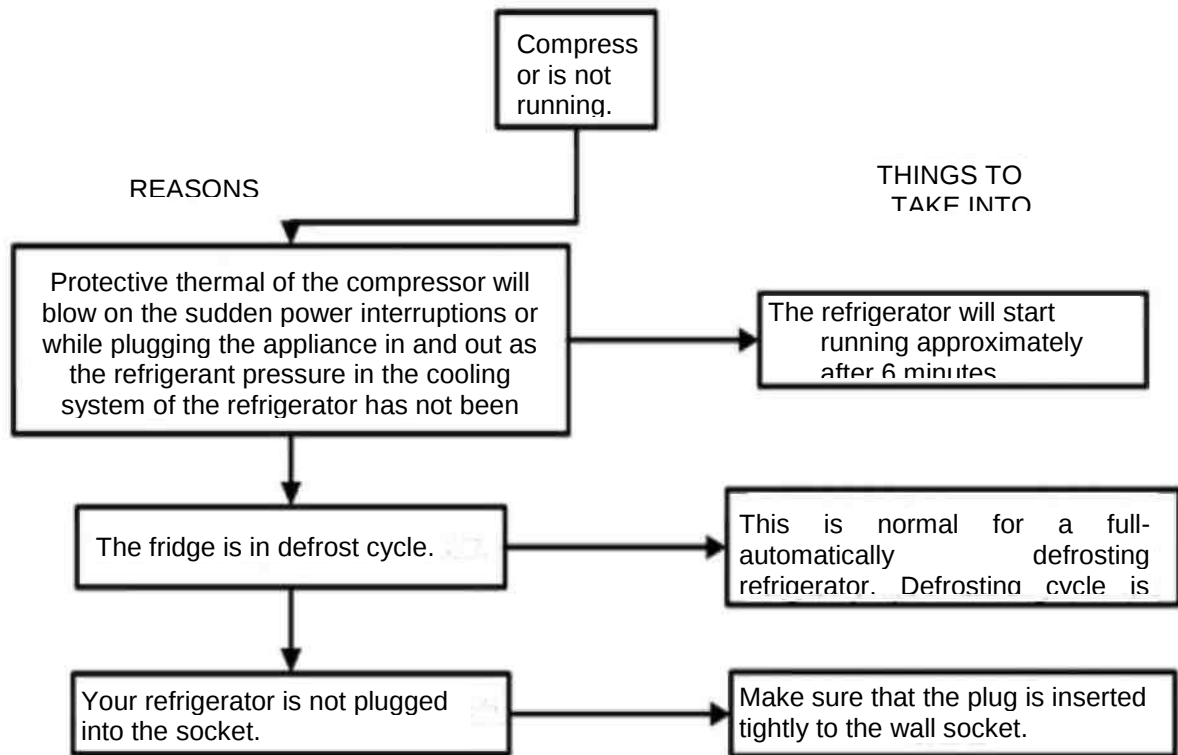


10.4.Refrigerator runs either frequently or for a long time

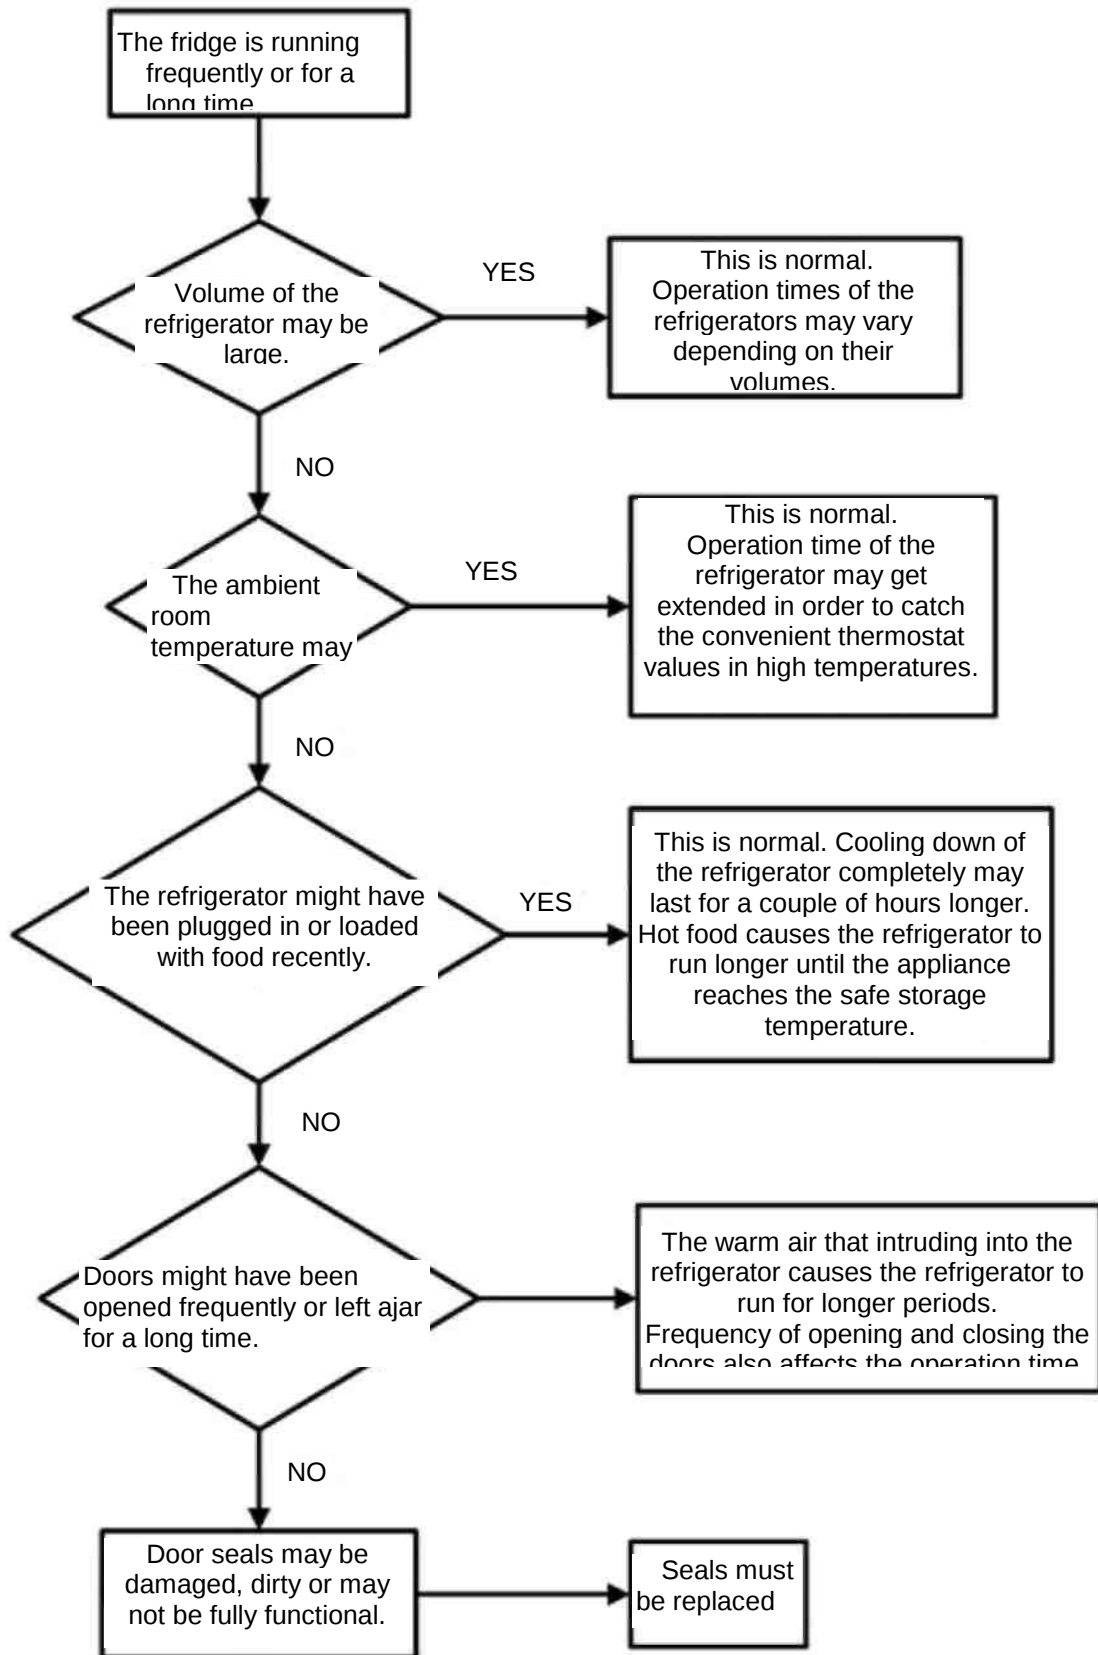


10.5.Temperatures are too low

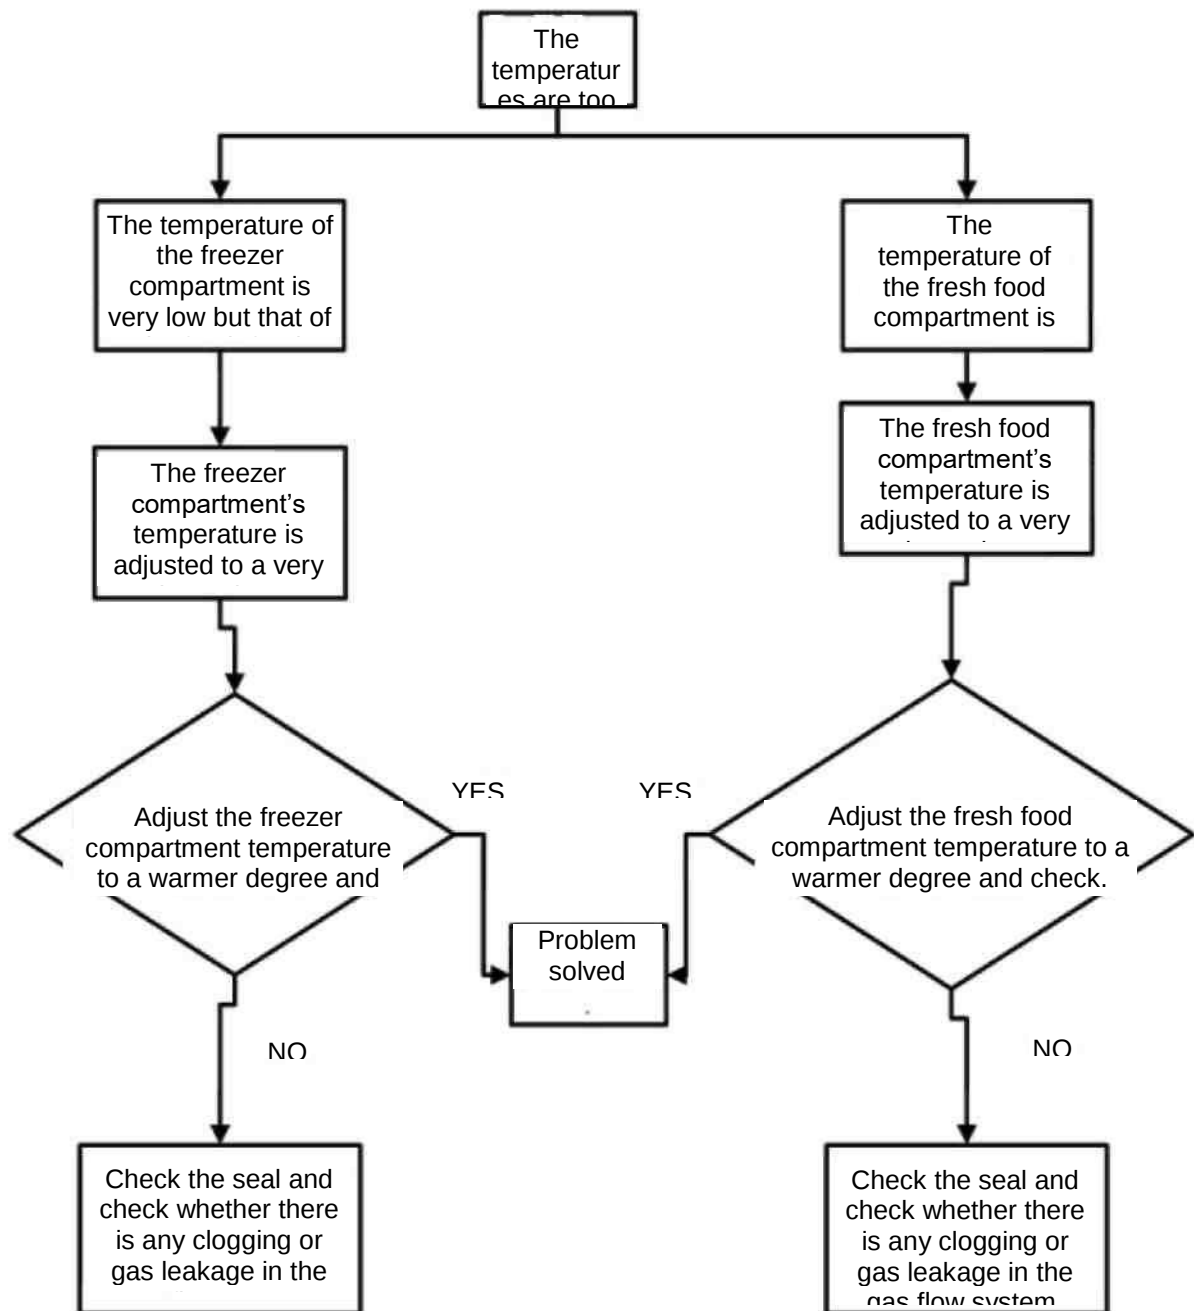


10.6.The refrigerator operates tumultuously

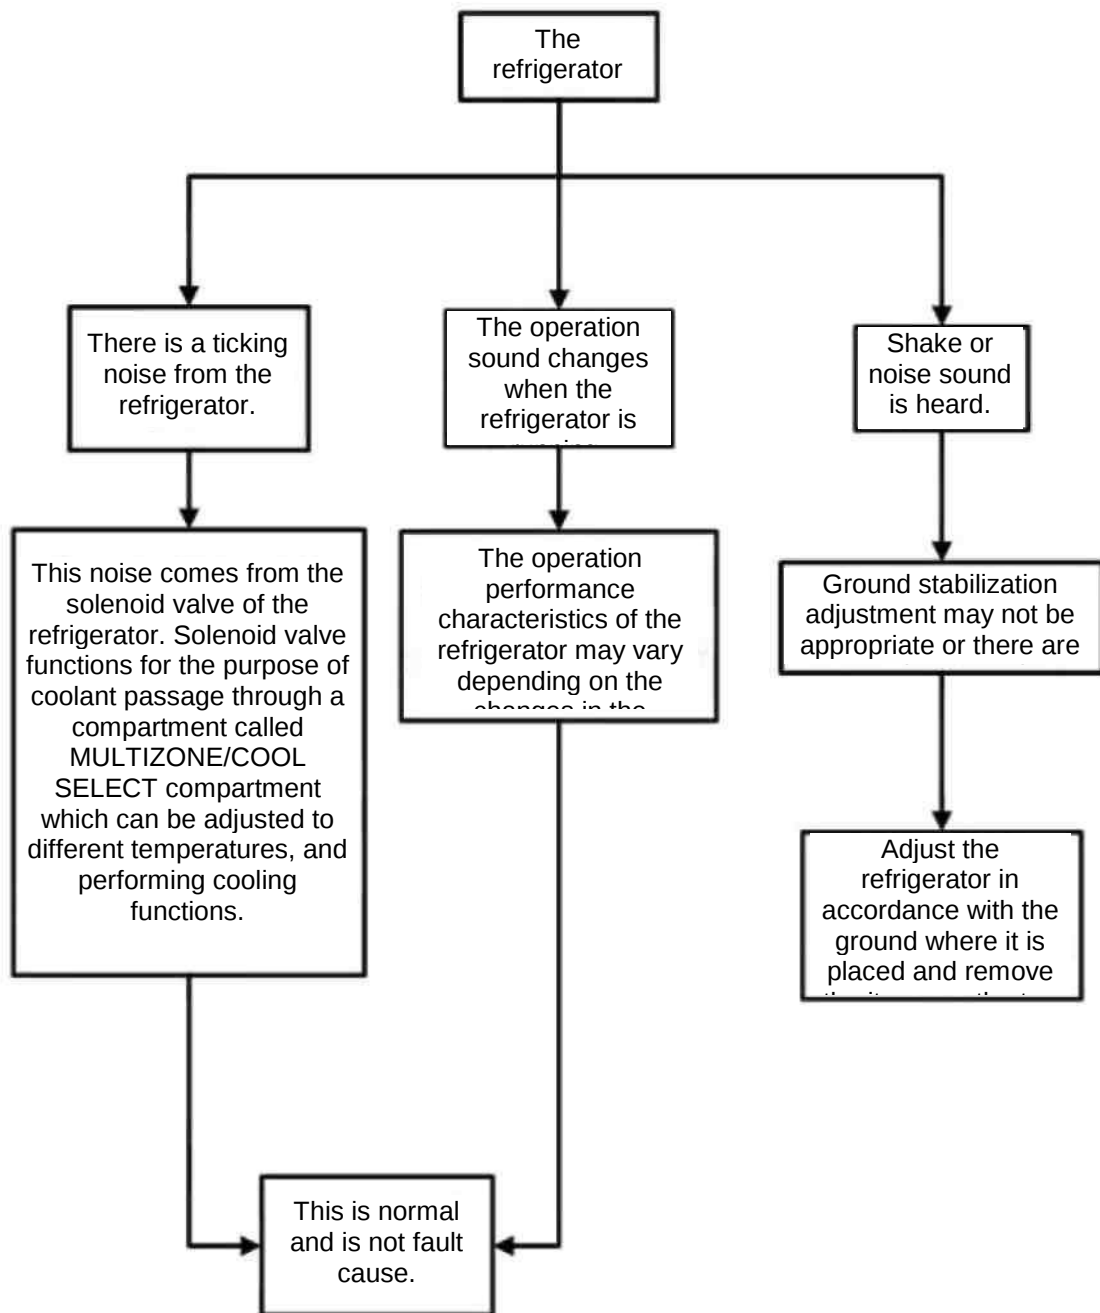


10.7.Noise from the evaporator fan motor

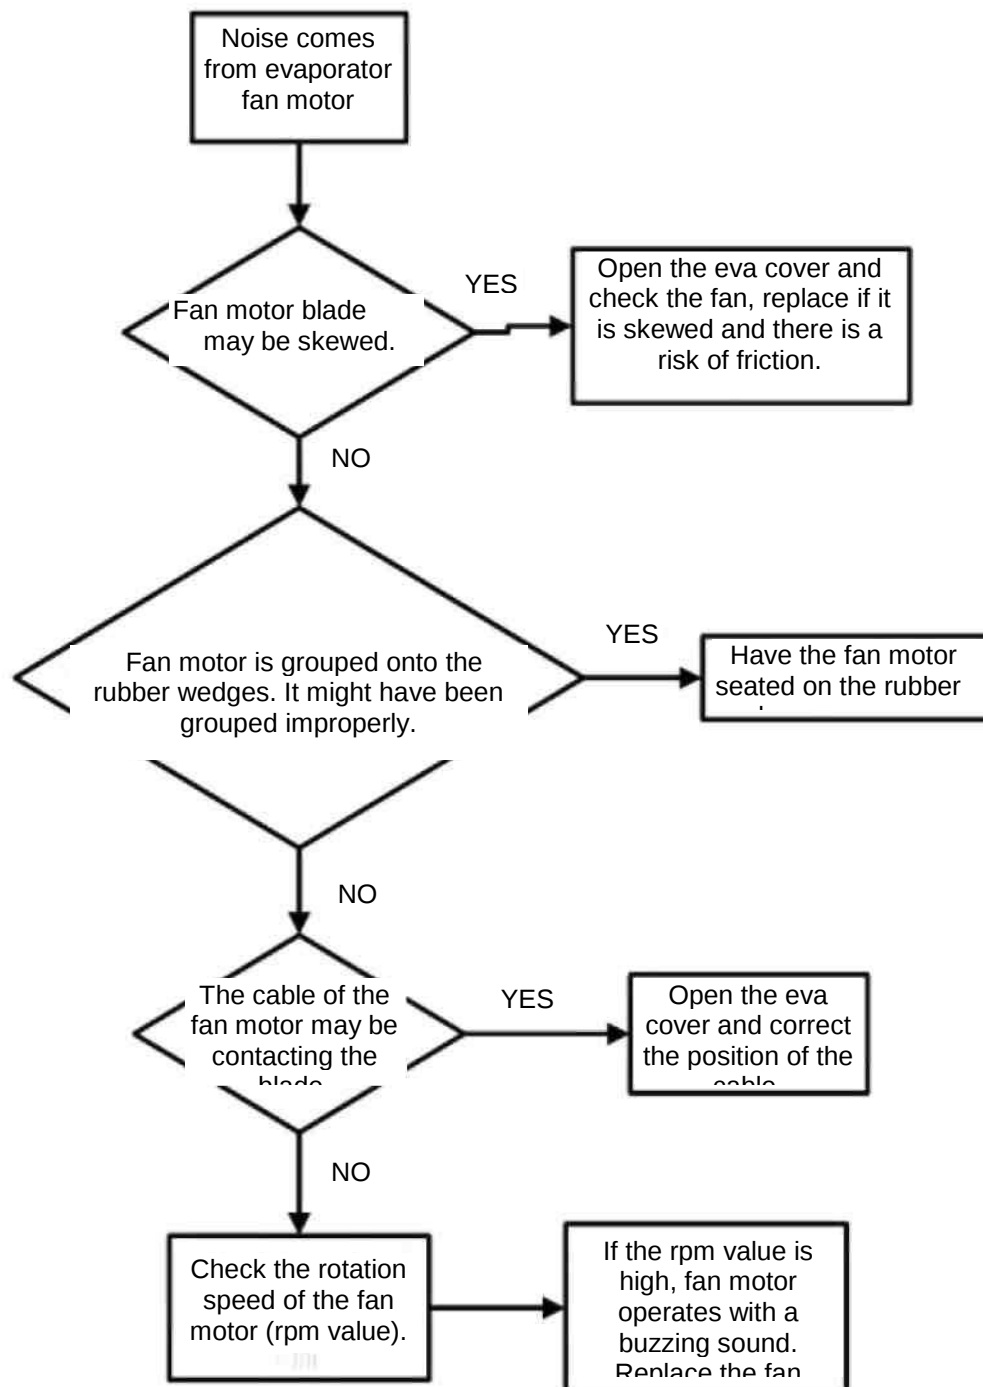


10.8.Noise from the condenser fan motor

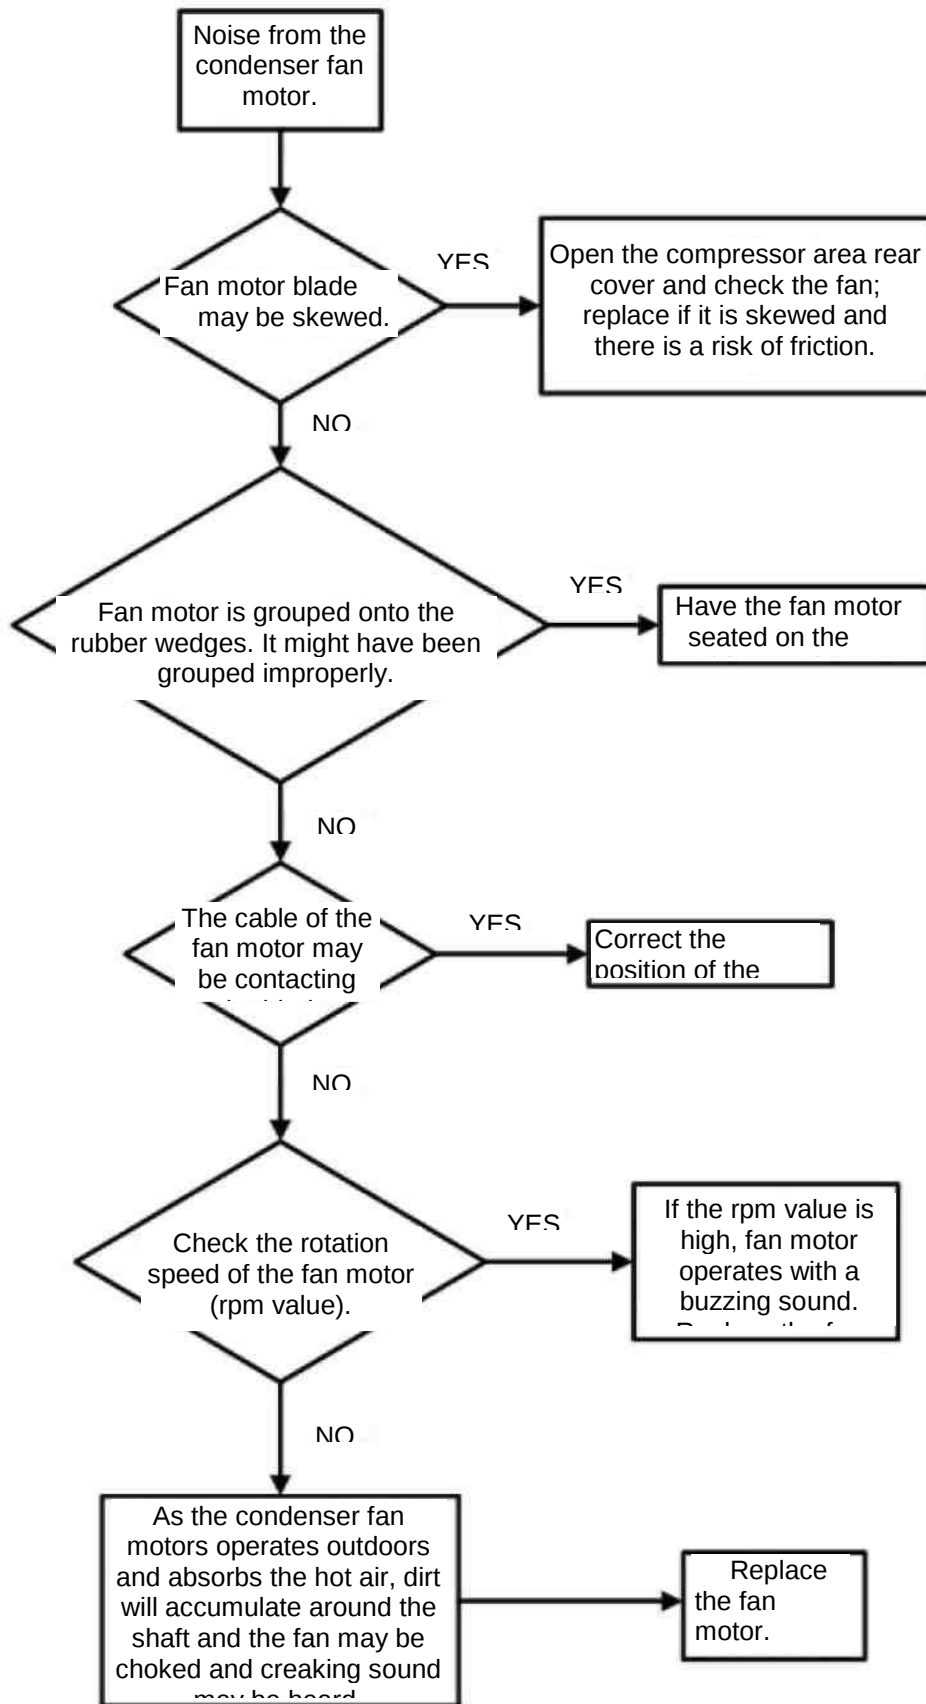


10.9.Noise from the refrigerator

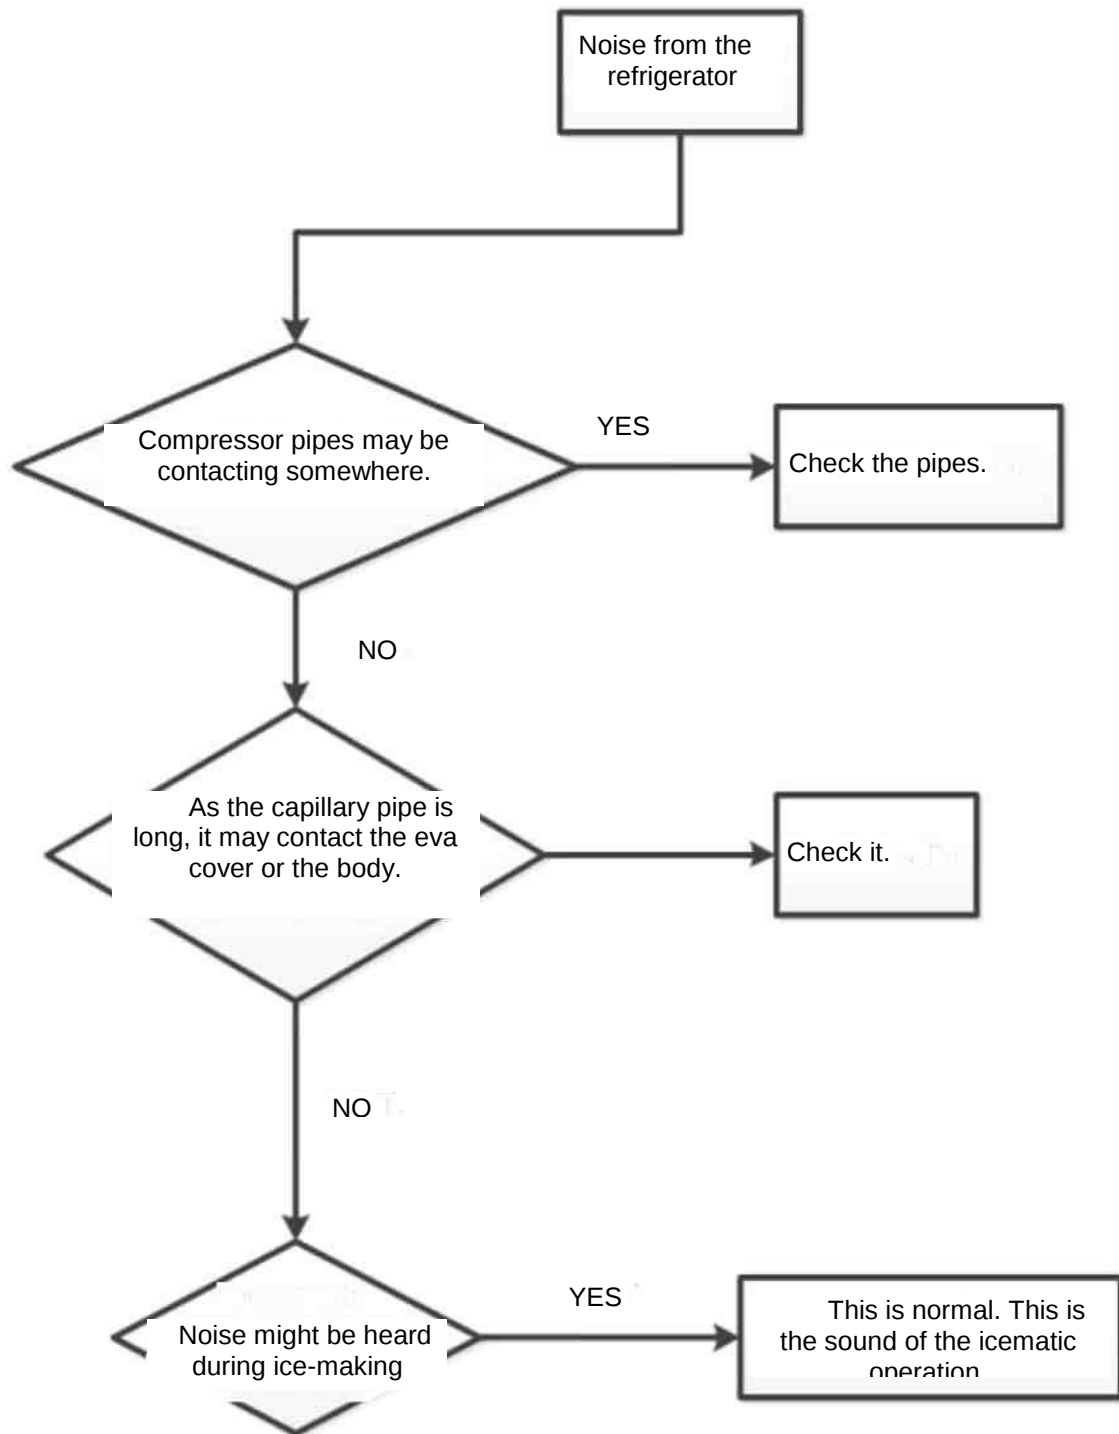


10.10. Condensation on the inner walls of the refrigerator

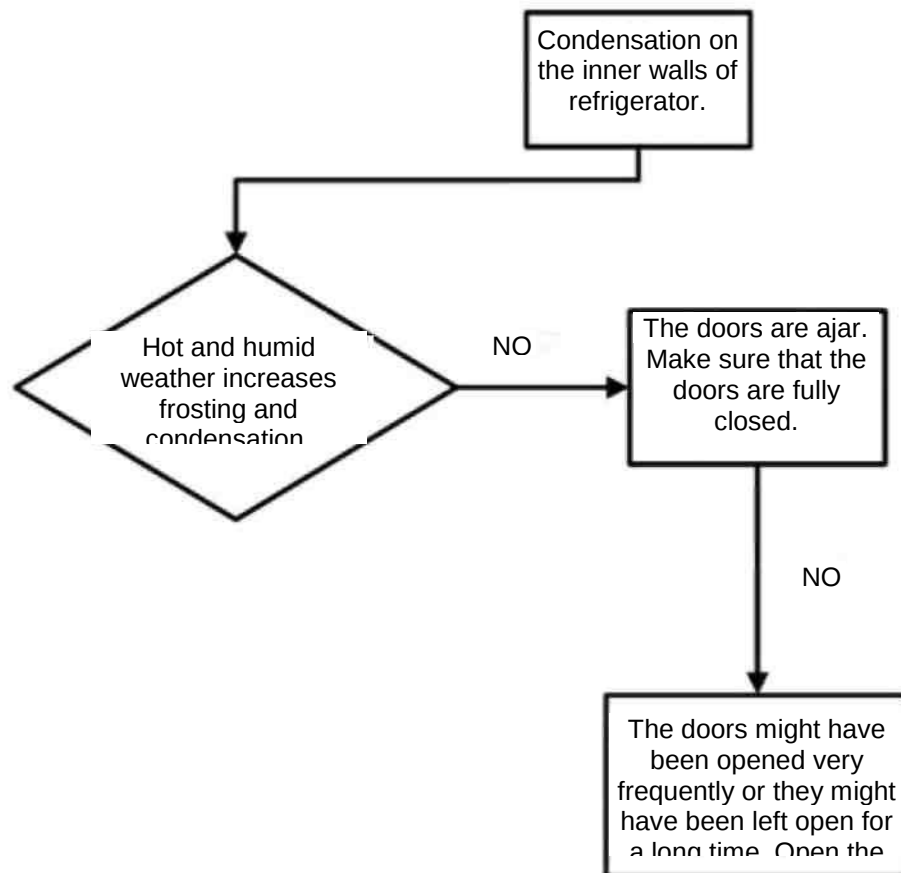


10.11. Condensation on the outer side of the refrigerator

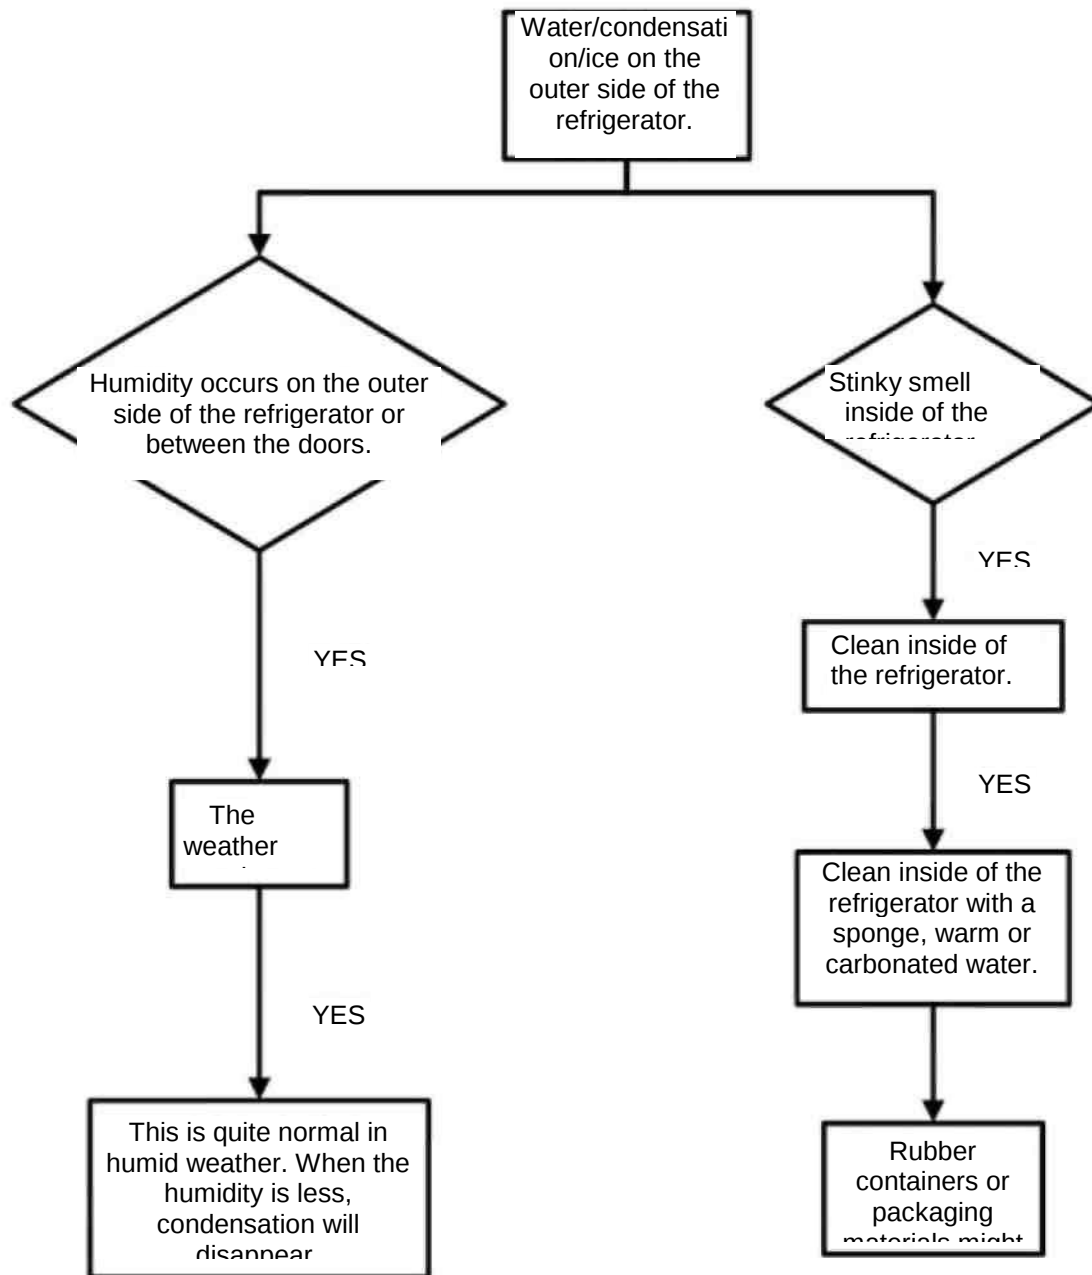


10.12.The doors cannot be closed

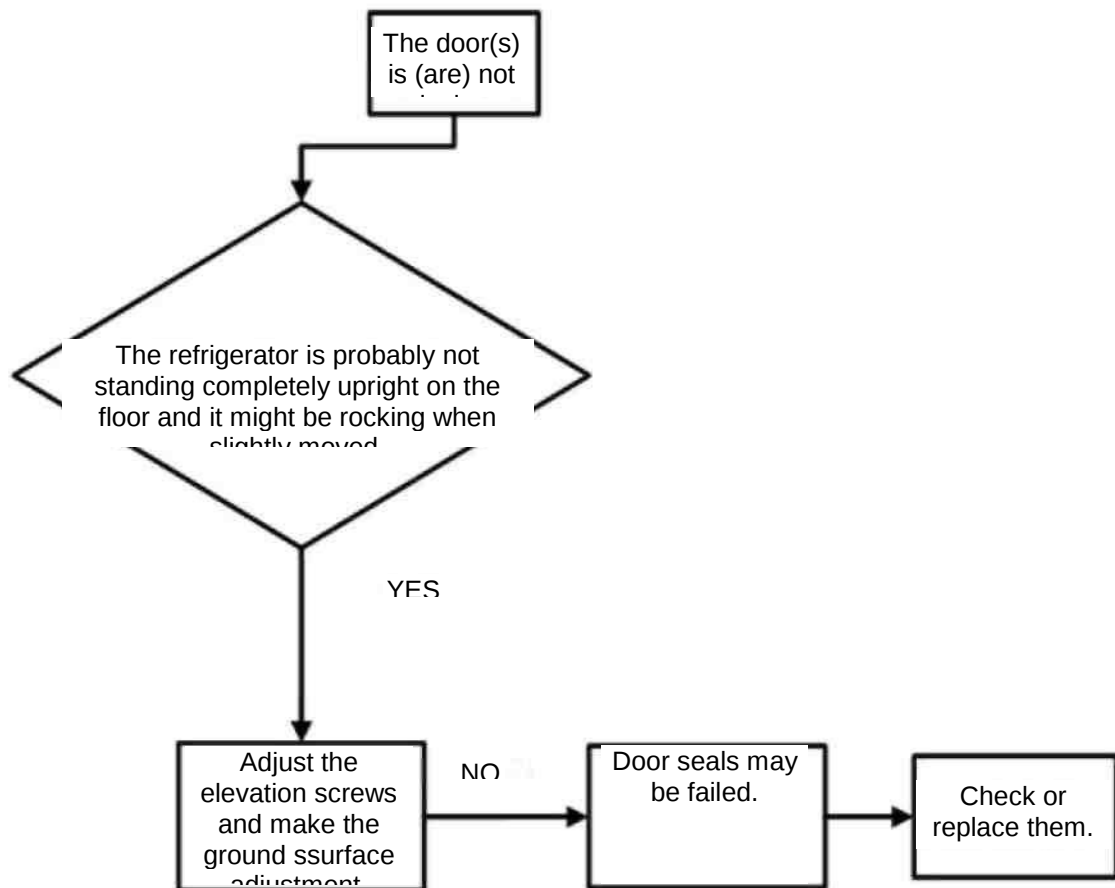

10.13. Water cannot be dispensed from the water dispenser

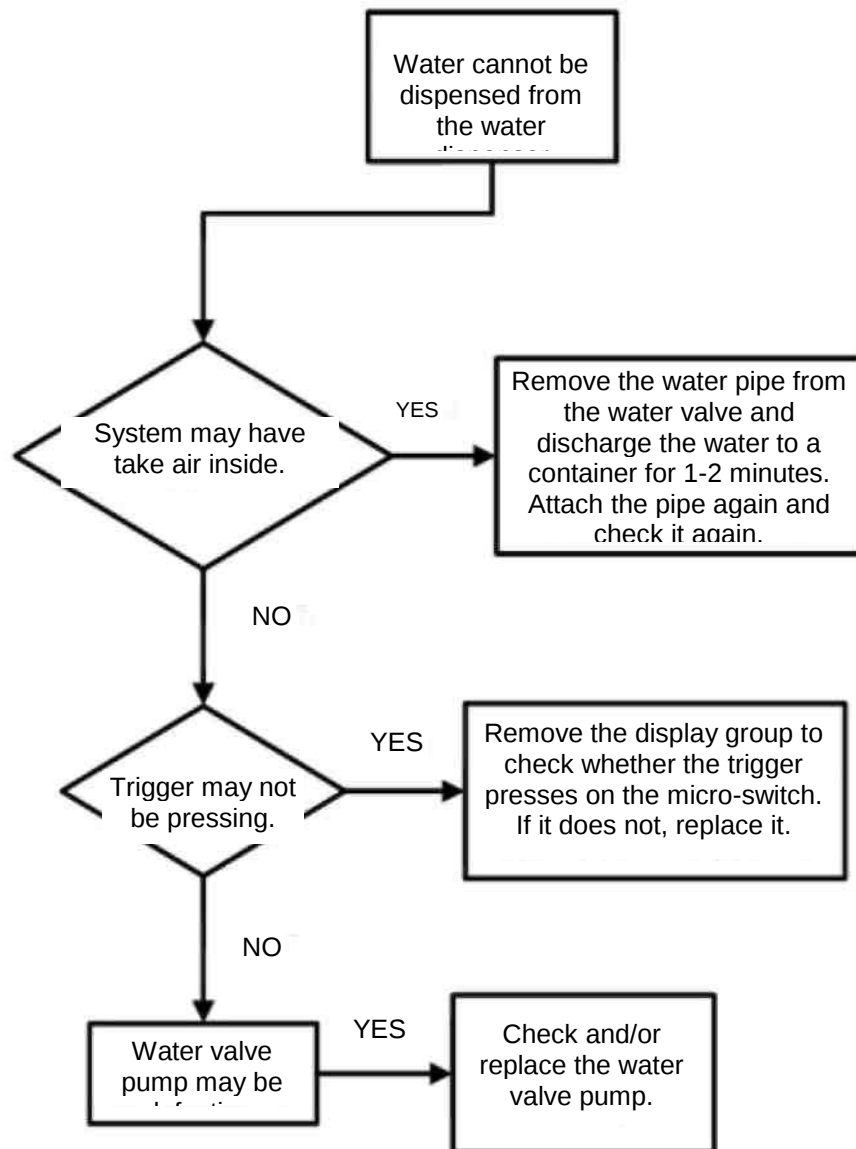

10.14. Condensation in the form of drops on the water dispenser area

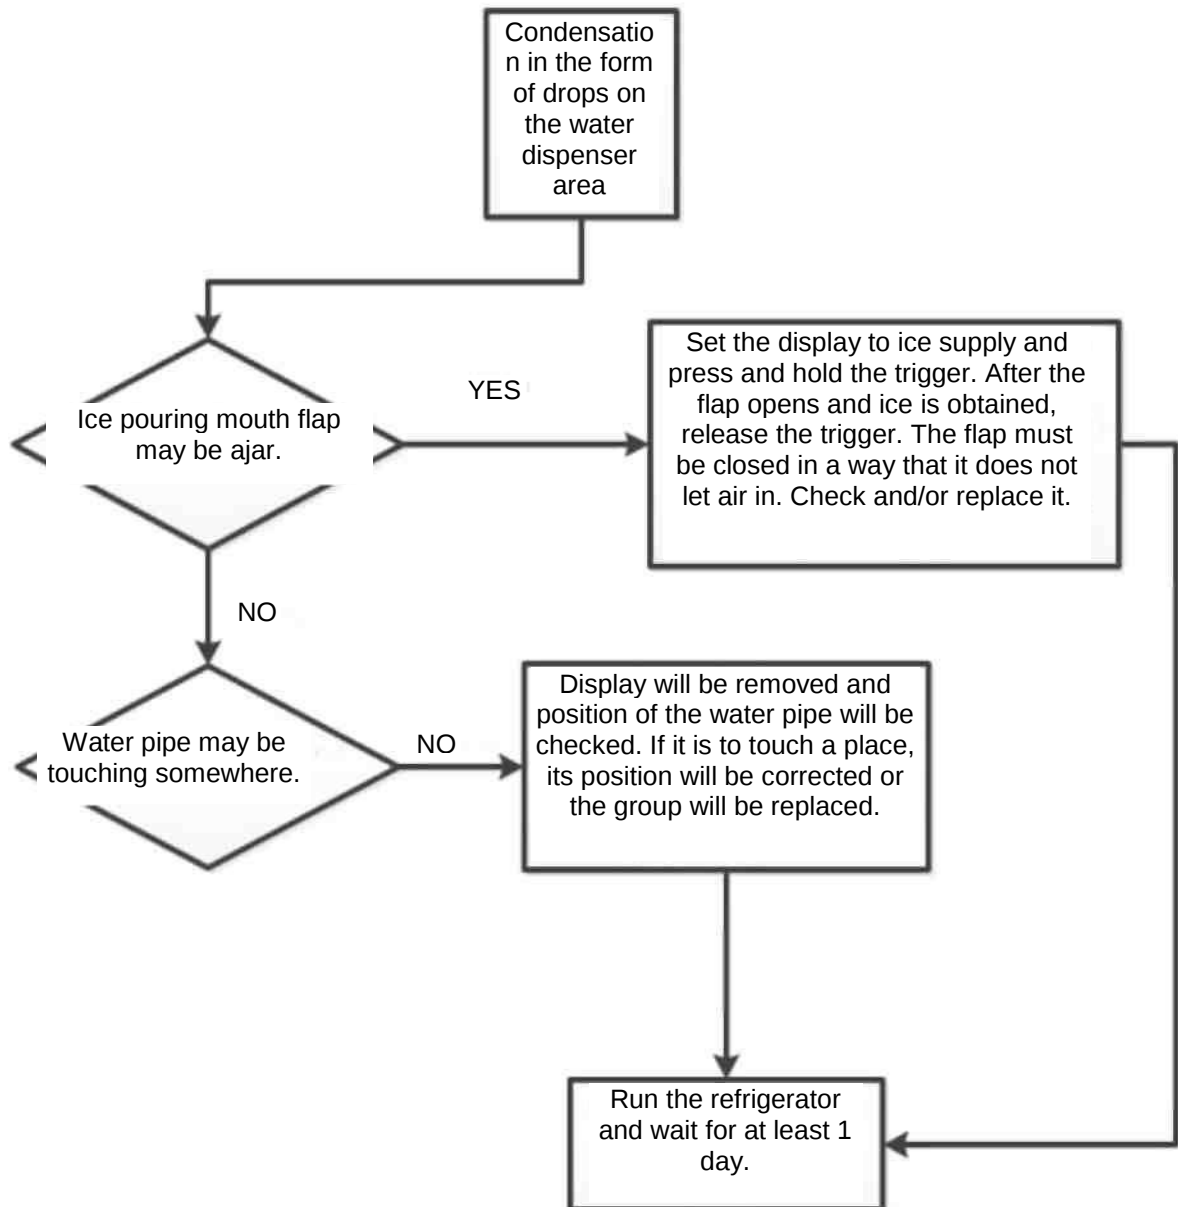

Note: In very humid environments, condensation is normal along the water line especially at the corners. This is not a

11. MOUNTING/DEMOUNTING PROCESSES OF THE PARTS

11.1. Beko handle group




- Insert handle is used on the product.
- The handles on the cooling doors are detached from bottom up direction.

11.2.Rear cover



As the waterspouts are on transition point, do not tighten a screw.

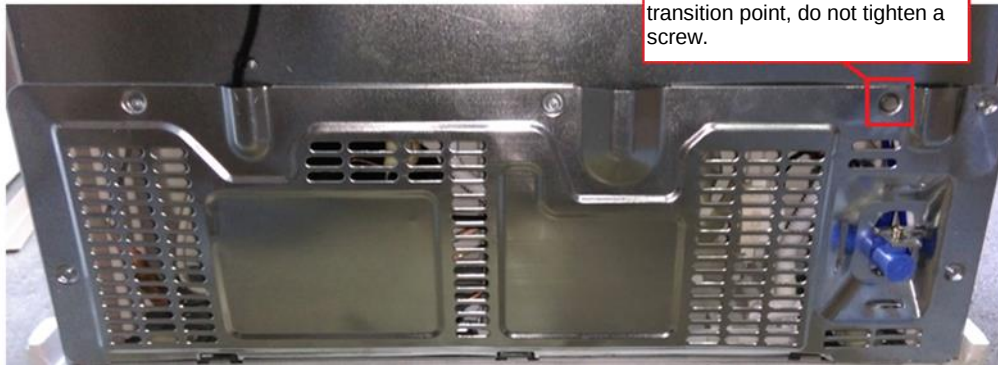

- Rear cover and rears are fixed by 5 screws and insertion at the bottom.
- Remove the screws to take the cover out.

Note: Products without water system use back cover without valve hole.

11.3.Service hatch




- The service hatch used on the rear wall section of the product is fixed to the rear wall by insertion to plate and 1 screw.
- Remove the screws to take the cover out.

11.4.Card cover



- The electronic card board used on the top plate is fixed by insertion and 1 screw.
- Screw is removed off and the board is detached according to the arrow direction.

11.5.Electronic Card

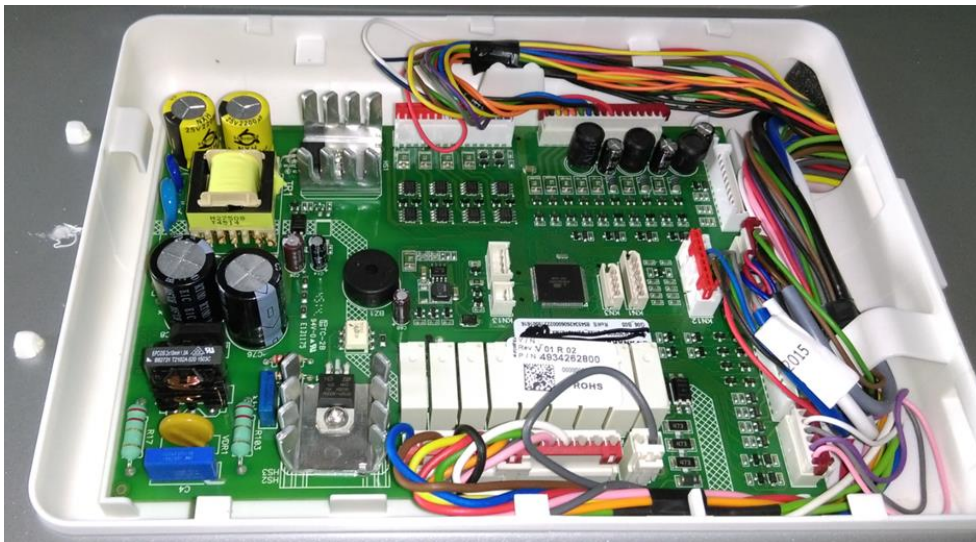

- Electronic card is fixed in the housing with bench stops. Afterwards, socket connections are made.
- Card is removed by detaching from bench stops after socket connections are made.

11.6.Front leg plate group and the cover



- Front leg plate group is taken out by removing three screws.

11.7.Rear leg plate group



- It is fixed with 4 screws. Rear leg plate is detached by removing the screws.

11.8.Door shelf 70 mm



- 70-Gallon Door Shelf is used on the upper section of cooling left and right doors.
- Detached by moving onto the arrow direction.
- *Optional

11.9.TPK shelf




- Gallon Door Shelf is used on the upper section of cooling left and right doors.
- Detached by moving onto the arrow direction.

11.10.Door shelf 90 mm (for gallon)



- Gallon Door Shelf is used on the upper section of cooling left and right doors.
- Detached by moving onto the arrow direction.

11.11.Sliding door shelf

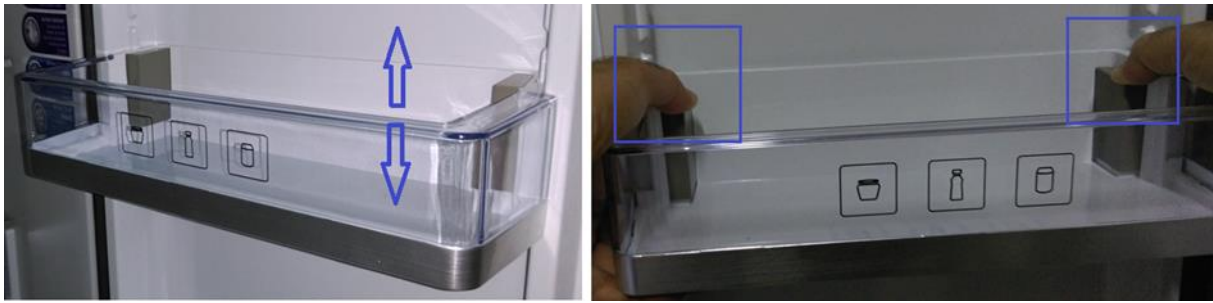

- Gallon Door Shelf is used on the upper section of cooling left and right doors.
- Can be moved up and down by arrow directed motions.
- The buttons located on the inner section of the shelf are pressed simultaneously in movement is required.

11.12.Adjustable glass shelves



- Adjustable glass shelves are inserted to the channels on the aluminium profiles on the rear section.
- Glass shelves are detached by moving on the direction indicated by arrow.

11.13.Aluminium adjustable glass shelf profiles



- The aluminium profiles on which the adjustable glass shelf profiles are grouped are fixed by 2 screws.
- Profiles are detached by removing off the screws.

11.14.Fridge crisper-top glass shelf



- The glass shelf on the crisper is slightly lifted upwards and detached by pulling.

11.15.Crispers




- Crisper are pulled from their rails and removed.

11.16. Chiller compartment



- Chiller compartment is pulled, got free from the pins on the telescopic rail, slightly lifted upwards and detached.

11.17. Water dispenser trigger group

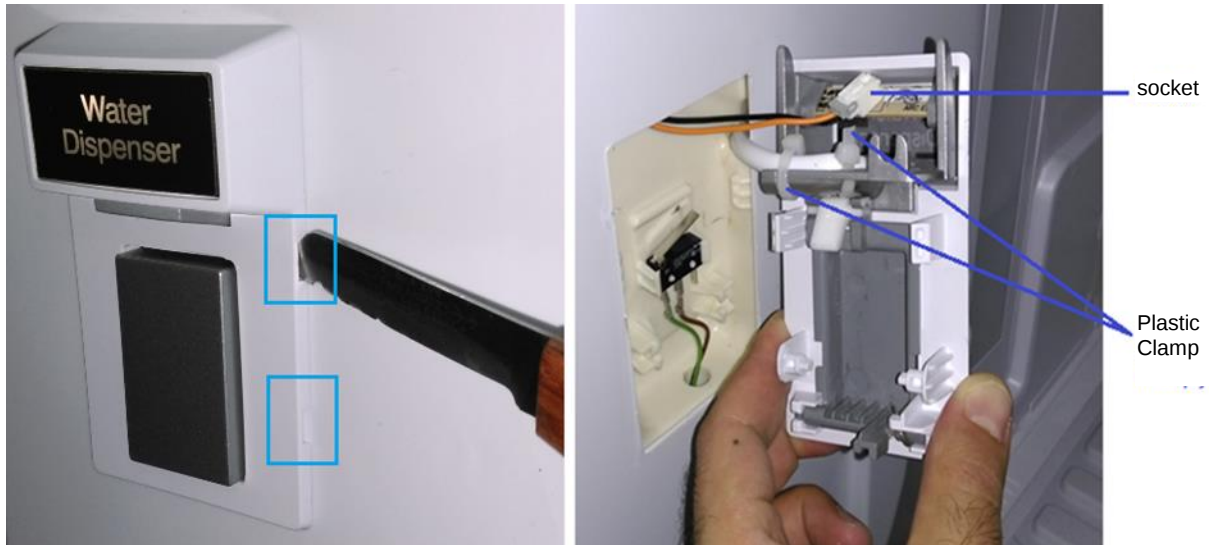

- Water dispenser trigger group is located on the inner left section.
- Remove by getting free from bench stops using a thin-edged apparatus.
- The led socket connection is detachable, plastic clamps are cut off and the water pipe is removed.

11.18.Crisper sheathing group and water container middle rail group



- The water container pipes through water valve and water dispenser are detached.
- Crisper cover group is fixed to the body by a screw on the rear wall. Screw is removed off, crisper cover and medium rail group are detached by pulling.
- The medium rail group fixed by 4 clamps are detached by slightly pushing. The pushing direction is as indicated in the image.

11.19.Waterspout closer lids




- They are comprised of two parts.
- Removed by removing 2 screws starting with the longer one.
- Then the other covering part is removed which is fixed to the rear wall by 3 screws.

11.20.Middle rail group and water container



- The rails on the right and the left of the middle rail group chassis are fixed by clamps. Rails are detached by removing the screws and getting loose from the clamps.
- 5 screws are removed off from the chassis holding water container.


11.21. Water valve and waterspouts

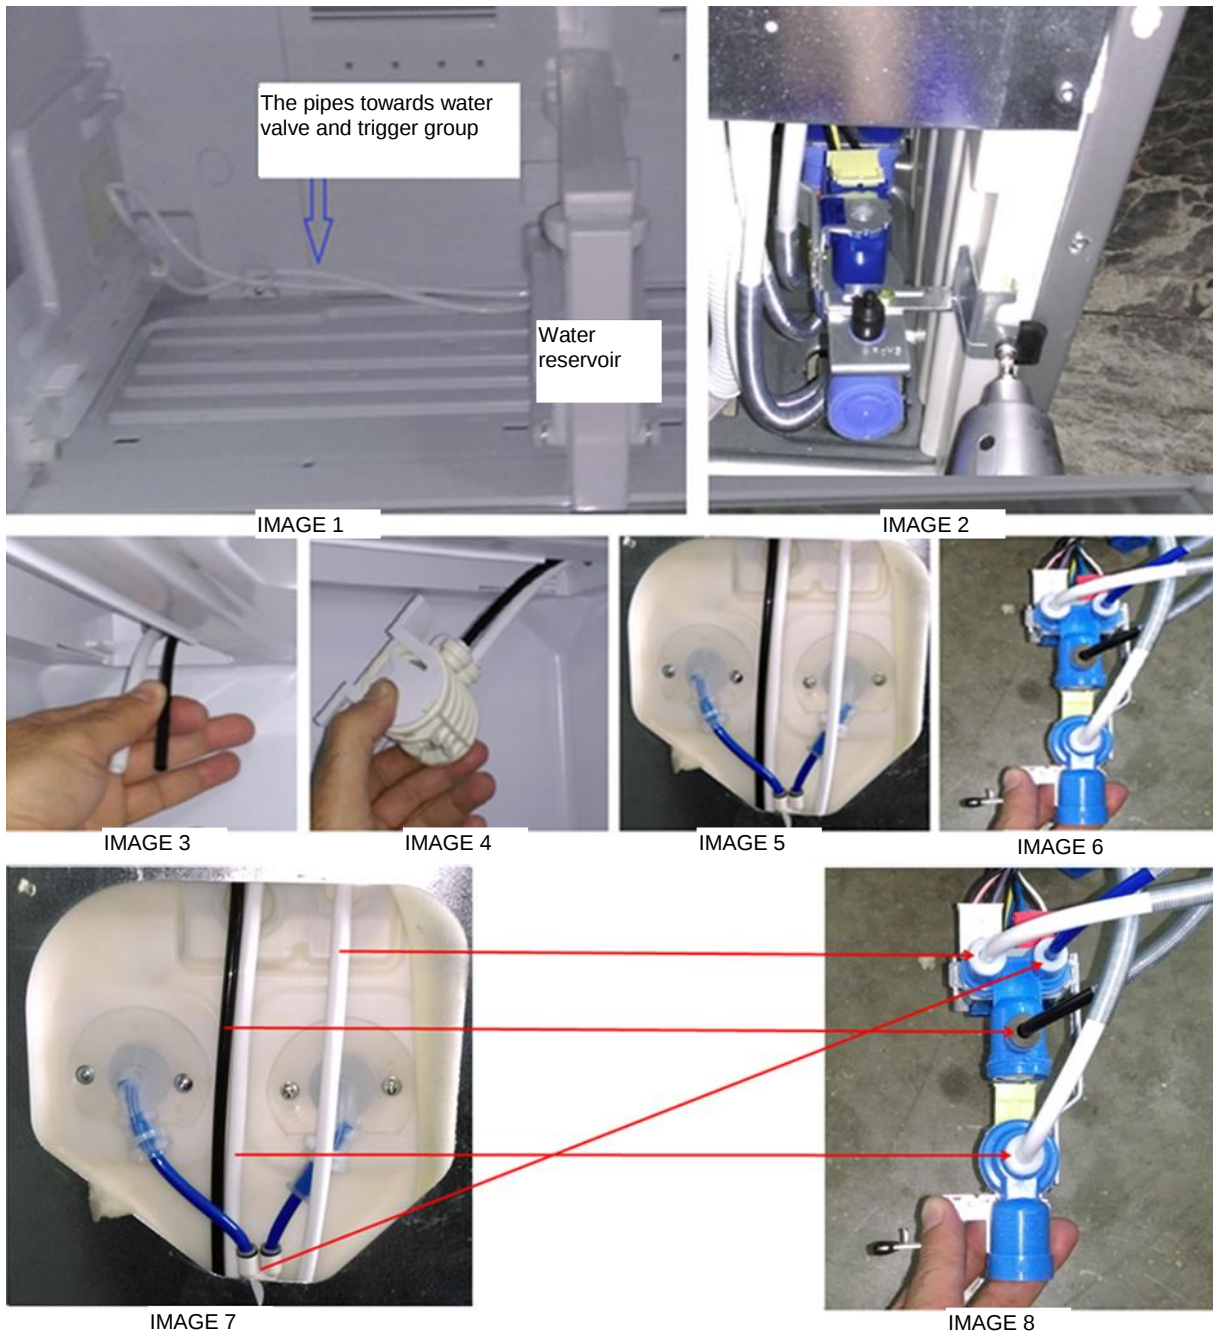



- The pipes towards water valve and trigger group are shown in image 1.
- The rear cover located on the rear part of the fridge is detached, the 1 screw fixing the water container is removed and water valve is detached. Water container middle rail group is removed by this way and water container may be changed.
- The 1900 mm long black and white hoses shown in image 3 and 4 are transmitted from inner body's upper left corner, pulled out from rear wall and grouped in valve and filter head in assembly.
- The 6.35 meters long blue hose reaching the ice machine shown in image 5 is grouped in the valve.
- It is grouped in assembly with the 8 meters long hose in the valve on the single output of water container.
- 6.35 meters long hose of the water container is grouped with water dispenser trigger group.


NOTE: Trial is implemented by quenching into the system. Please ensure that there are no leakages.

11.22. Water system connection

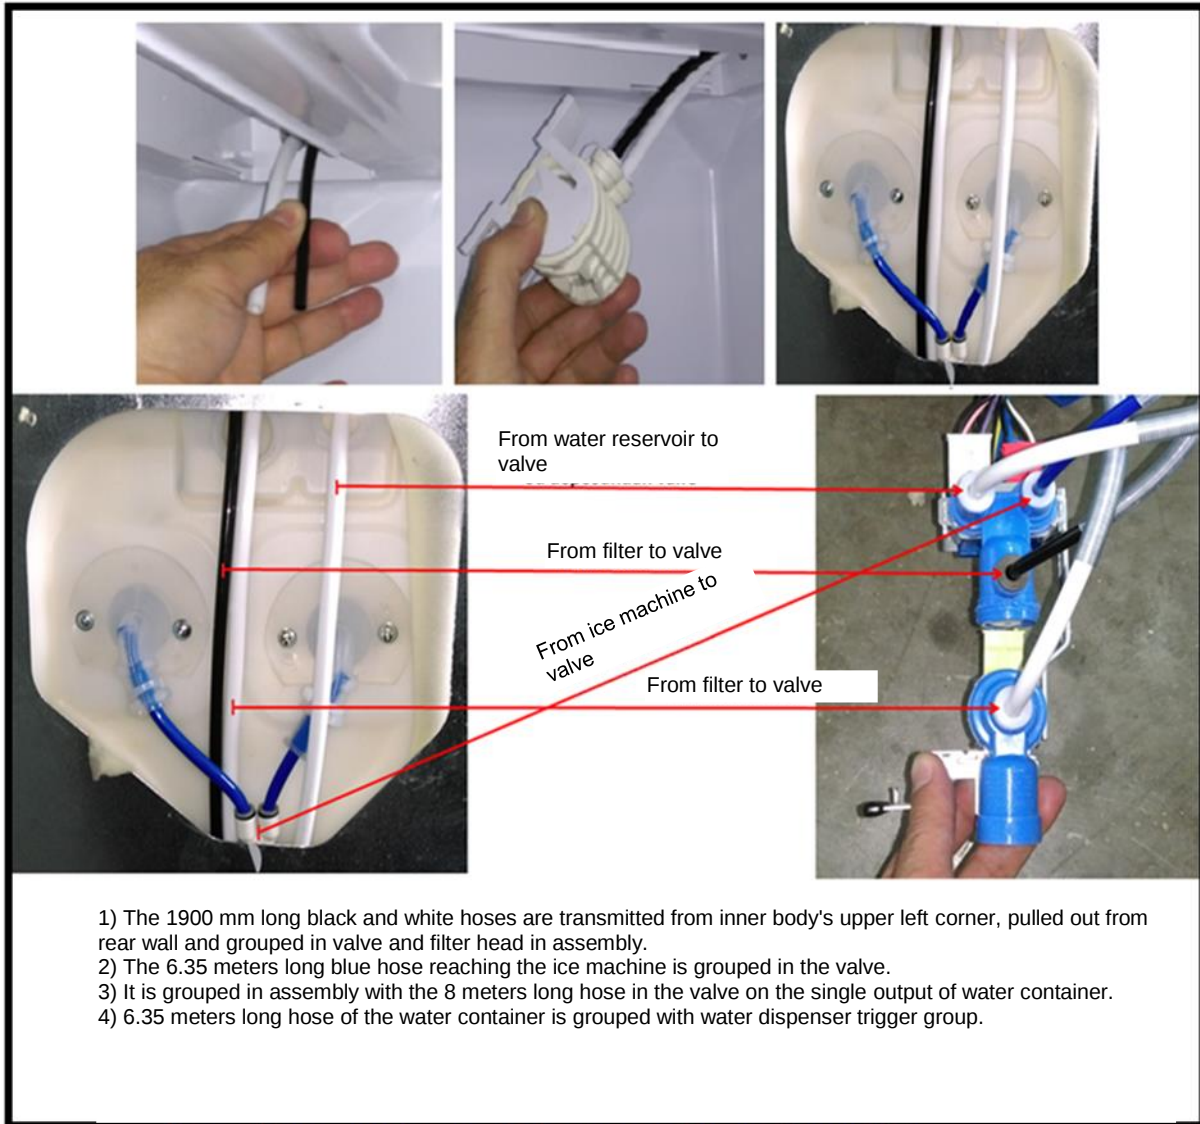

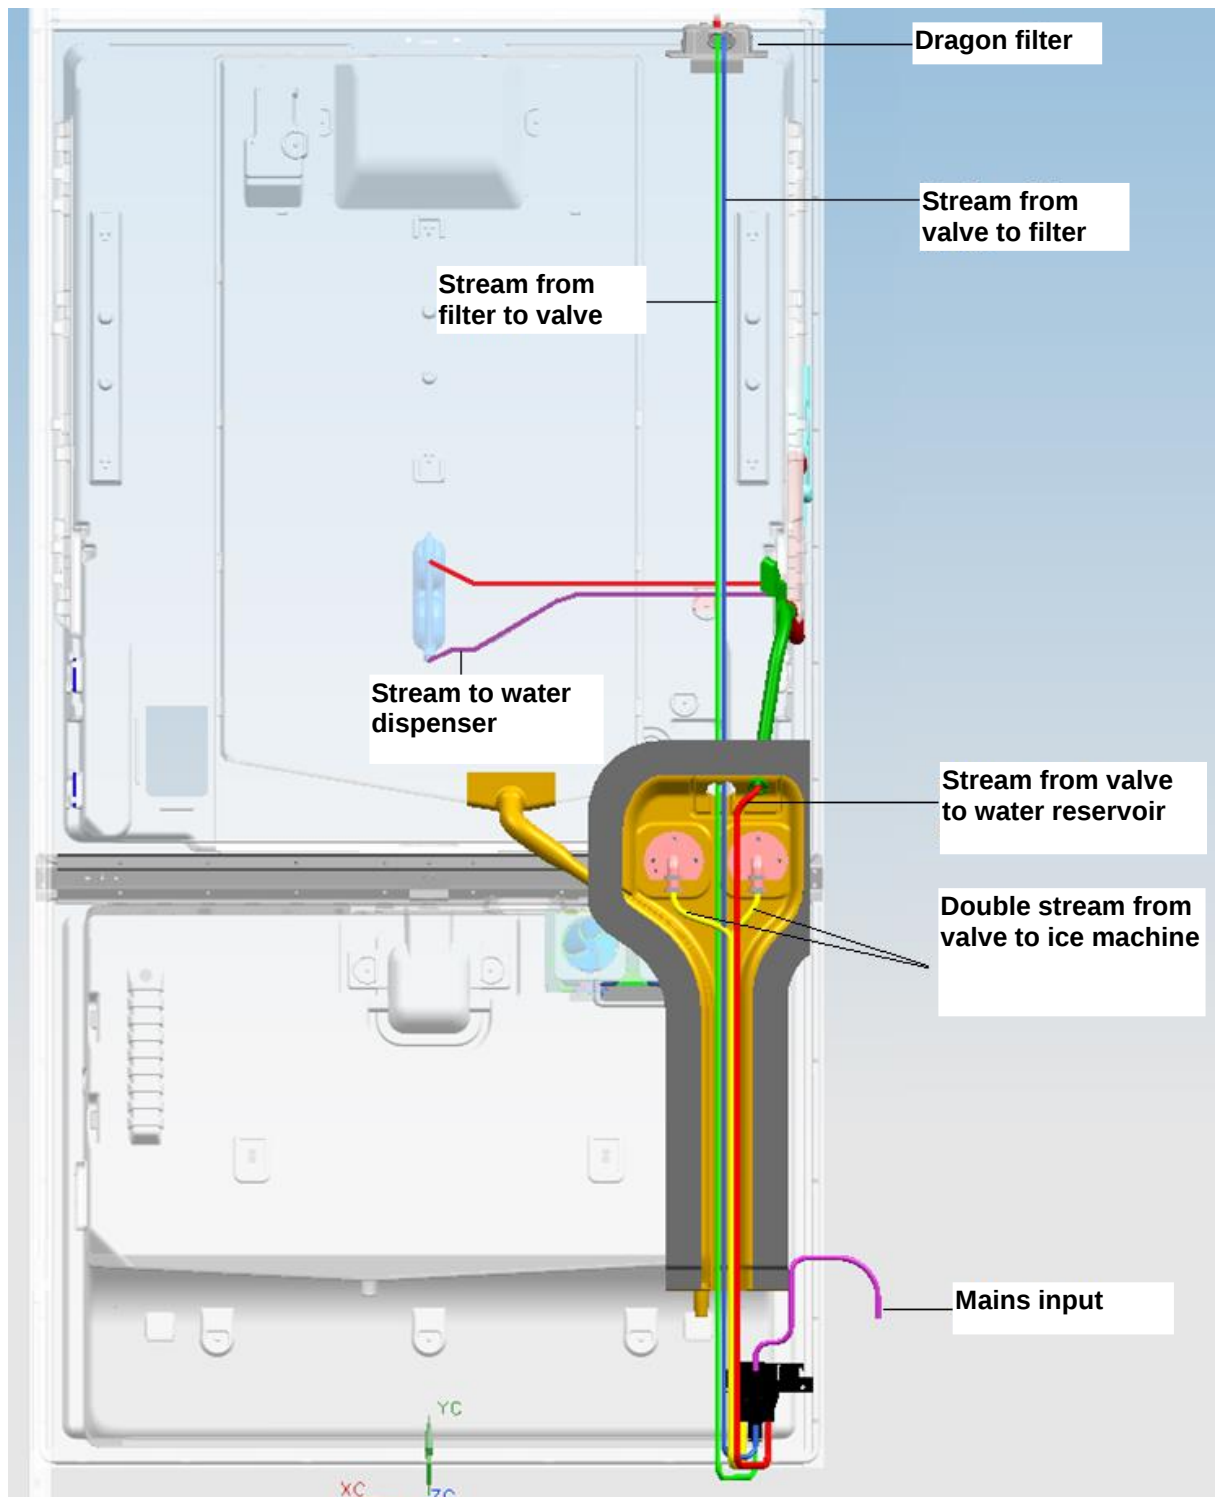

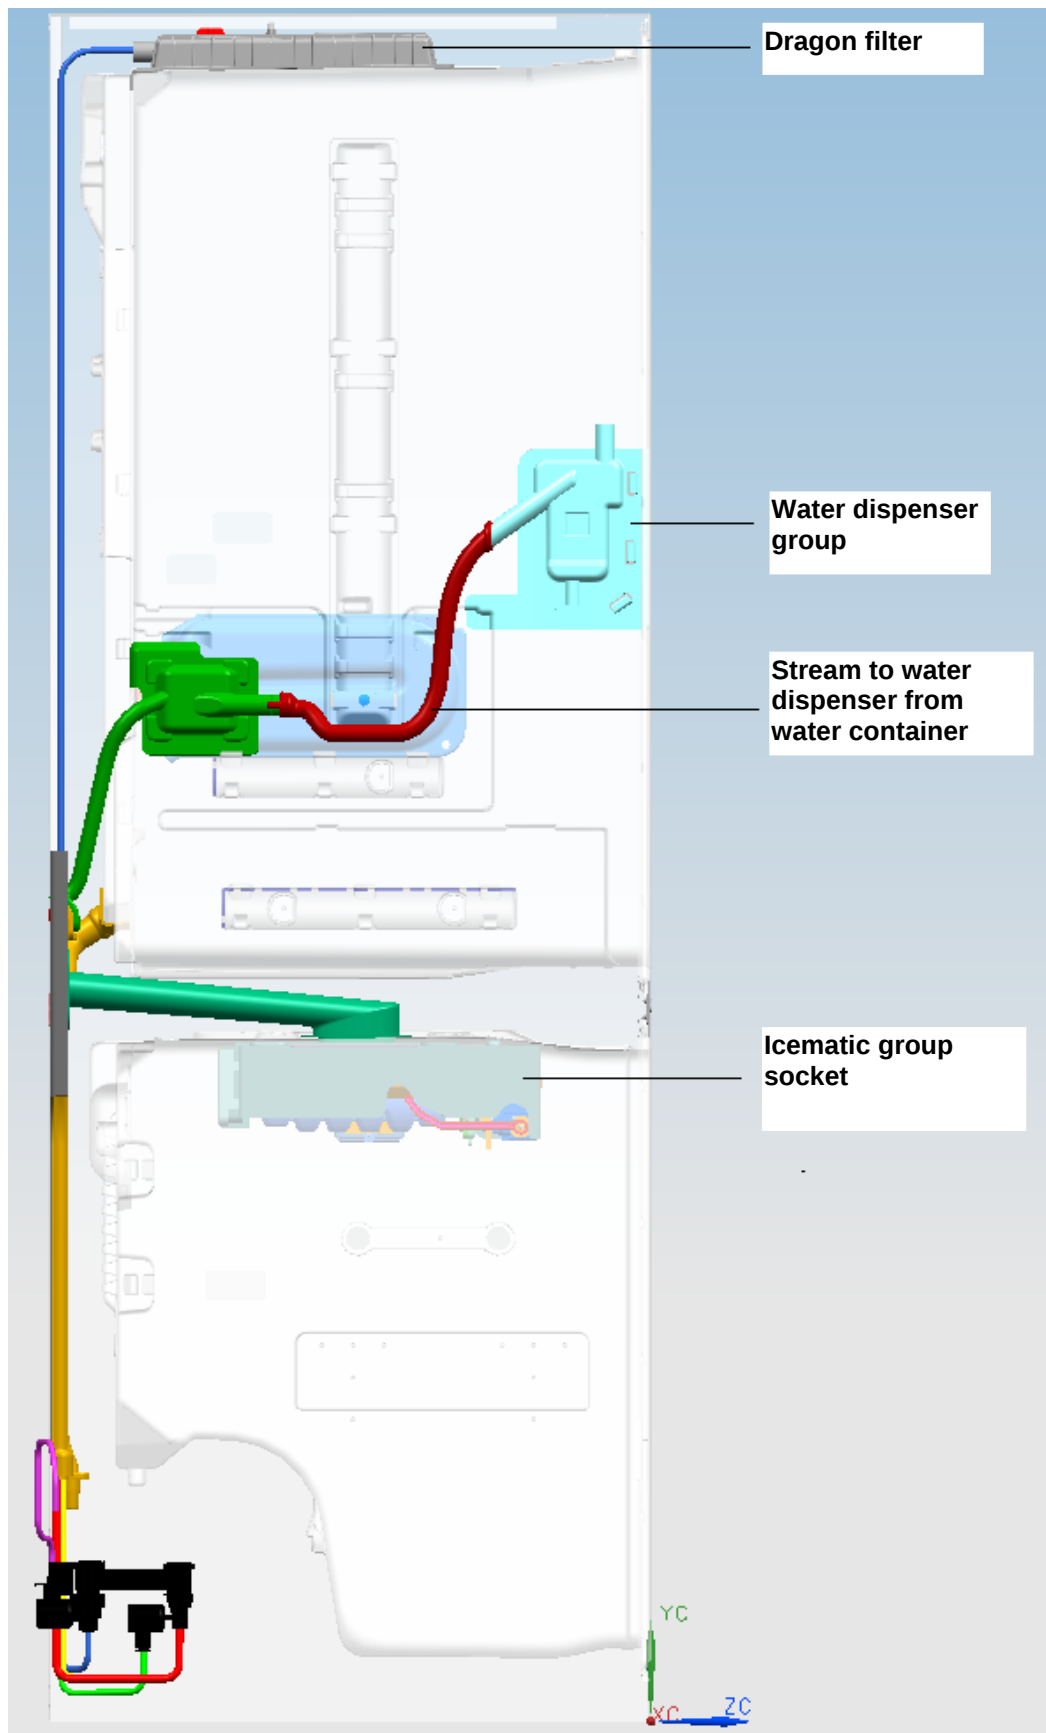

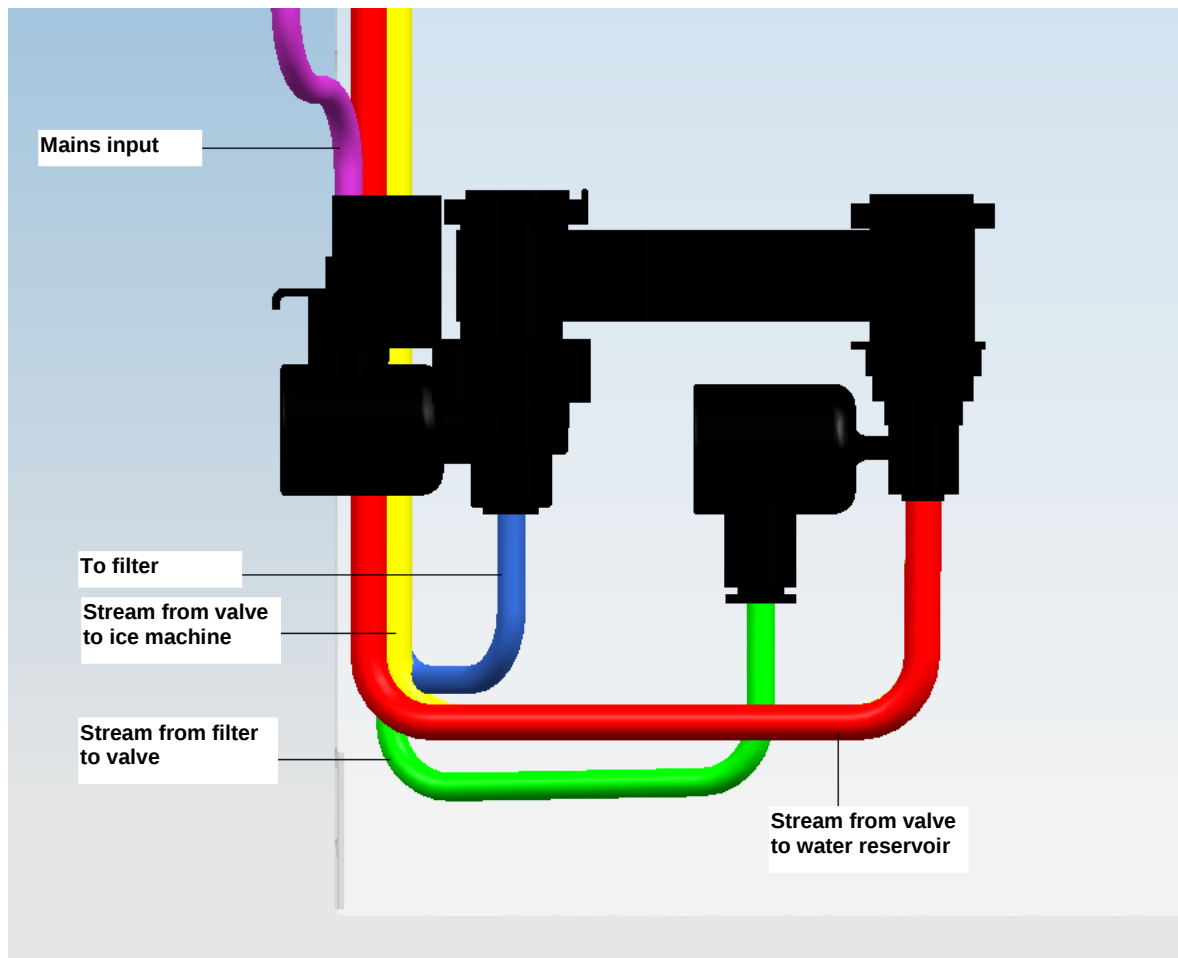

11.23.Crisper rails



- Remove by getting free from bench stops using a thin-edged apparatus.

11.24.Telescopic rail and rail gripper



- Telescopic rails used in chiller, ice drawer and freezer upper drawer are fixed to rail gripper with 3 screws.
- Firstly, the telescopic ray is opened totally ajar for the screws to be completely seen and then they are removed off.
- Afterwards, the rail is closed, the screw on the front is removed of and the is detached from its place.
- The rail gripper which the telescopic rail is fixed is grouped in assembly with the clamps. Remove by getting free from the gripper using a thin-edged apparatus.

11.25.Cooler rear illumination glass group



- The cooling compartment is used in both right and left. This group is fixed on the body by means of clamps.
- Can be removed by using a thin-edged apparatus.
- Socket connection is removed from its housing by disassembling.

11.26.Cooler ceiling illumination glass




- Used on fridge compartment middle shelf. This group is fixed on the body by means of clamps.
- Can be removed by using a thin-edged apparatus.
- The illumination glass is removed from its place and the affixed led card is detached.

11.27.Fridge illumination glass and LED card



- Used in cooling chiller compartment's right and left sides.
- Illumination glass can be removed by using a thin-edged apparatus.
- The led card which is grouped in angled situation can be detached by needle nose pliers.
- When placing the mew led card, firstly the socket part is mounted and then the card is grouped in assembly by the clamps.

11.28.Filter cover group

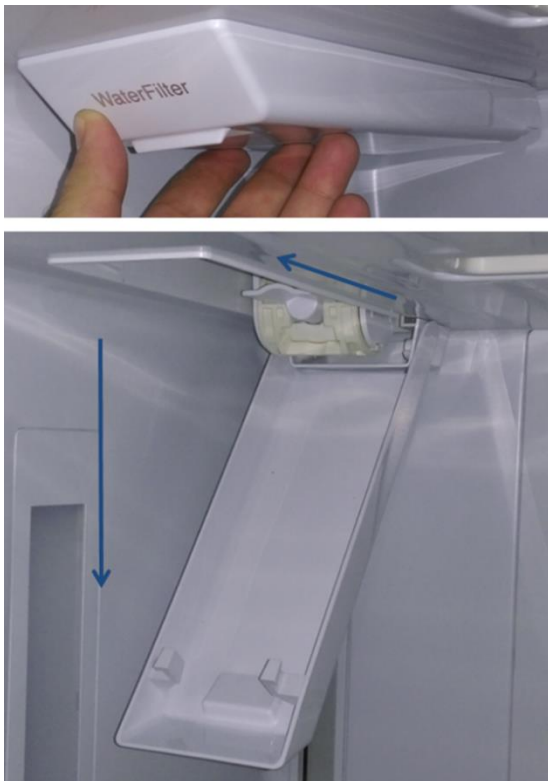

- Filter cover group is used in the upper left corner in freezer compartment.
- The group is pulled on the direction of the arrow and detached by moving downwards.

11.29.Bypass cover / water filter



- Bypass cover grouped in assembly within the filter head is detached.
- Water filter is inserted instead upon preference.

11.30.Filter head



- It is fixed with 1 screw.
- Remove the screws and pipe connections to take the cover out.

11.31.Cooler evaporator cover screw plug



- Two units of eva cover screw plugs are used, one at the right and one at the left side. Remove the pipe holders by using a flat-tipped screwdriver.

11.32.Cooler evaporator cover



- The cooling eva cover is grouped in assembly with the clamps by 2 screws.
- 2 screws are removed off by using a thin-edge apparatus and the eva cover is half-open.
- Eva cover is detached manually by holding from the right and left sides in balance.
- Finally the squared fan socket connection is removed and eva cover is detached from the housing.

11.33.Square fan group




- Four tabs around the fan fixing frame are removed with a flat-tip screwdriver. After the fan and the protective silicon are removed, remove the fan.

11.34. Ioniser group



- Ioniser cooler is used behind the fridge eva cover.
- Can be detached by removing off 1 screw and socket connection.

11.35. Carbon filter cover and carbon filter

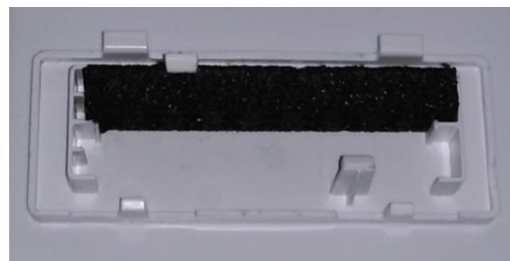

- Fridge eva cover is used on the lower part.
- This group is fixed on the body by means of clamps. Remove by getting free from bench stops using a thin-edged apparatus.

11.36. Ioniser illumination cover (Ion fresh)



- Ioniser illumination cover is fixed at the bottom and top by two clamps.
- Can be detached by slightly pulling with hands.

11.37.Sensor cover



- Sensor cover is mounted with tabs. Remove the pipe holders by using a flat-tipped screwdriver.

11.38.Moving middle compartment group



- Movable middle section group it is used in the fridge's left door.
- It is affixed by 2 screws each in lower hinge and the skid on the lower hinge.
- The skid is removed by slightly sliding on the direction of the arrow after the screws are removed off.
- HAB group is dismantled by disassembling the socket connection.

11.39.Hab guide



- Used on Fridge Compartment Middle Shelf and
- Removed by removing 1 screw.

11.40.Hand plate display group

- The hand plate display group is grouped as to cover the hinges on the upper plate.
- 6 screws are removed off from the upper section and get loosened from the clamps on the hinge.
- Socket connections are dismantled and detached from housing.

11.41.Display group




- It is fixed with 3 screws on the hinge cover.
- Remove the screws and socket connection to detach from housing.

11.42.Display group on door



- Use a thin-edged device to remove the display from the door.
- The socket connection is removed then the display is removed.

11.43.Freezer and multizone compartment drawers

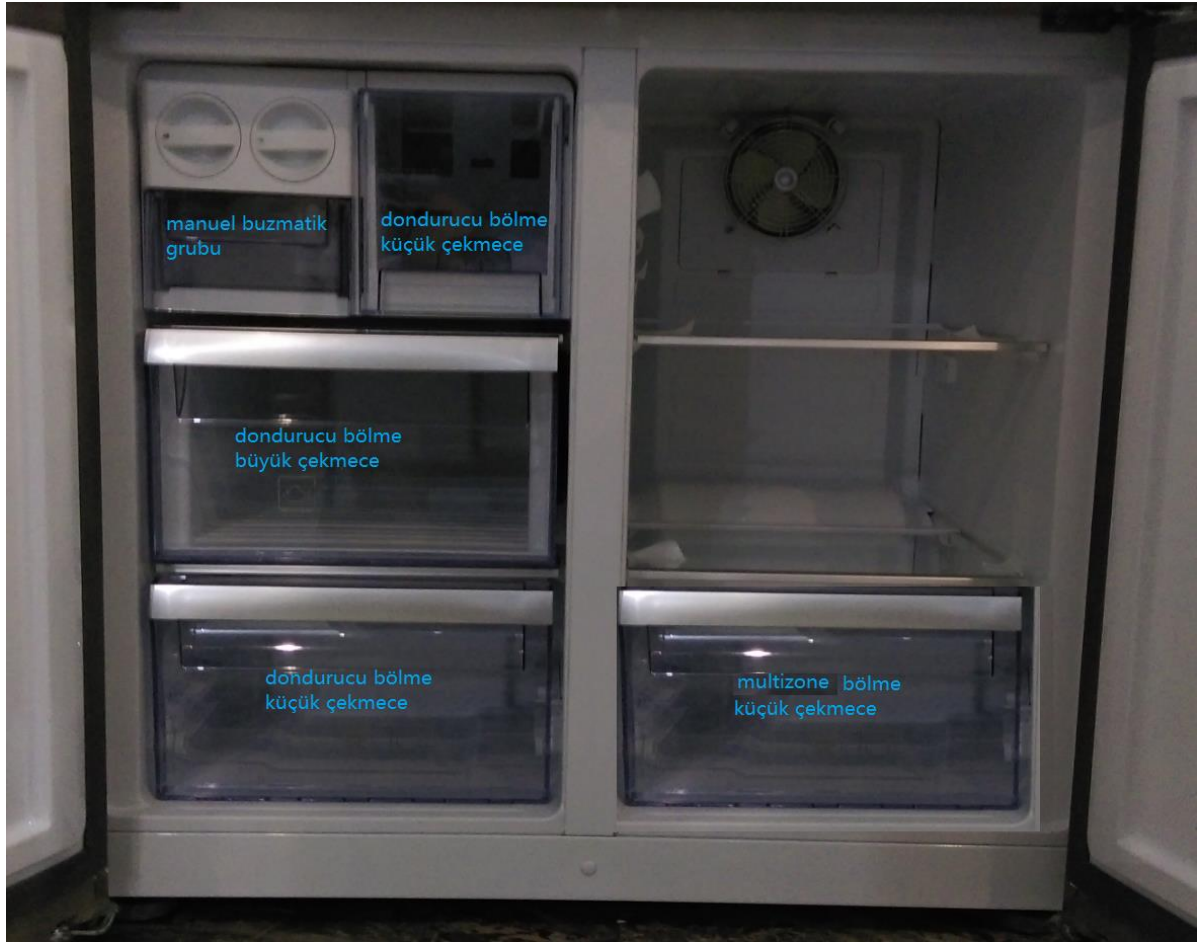


- The drawers are pulled forward and removed by lifting up slightly.

11.44.Manual ice pack




- The manual freezer compartment parts are pulled forward and removed from their place.

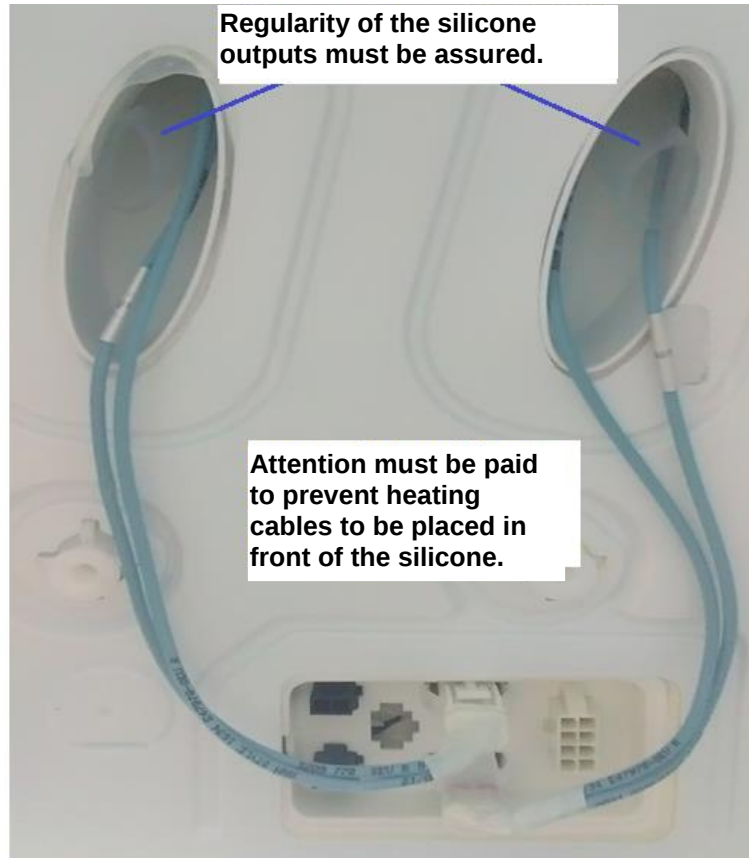

- Icematic group is used in the upper left corner in freezer compartment.
- Can be detached by slightly pulling with hands.
- The icebox group affixed by hanger pins is removed by slightly pulling.

Note: The silicone outputs enabling water inlet are to be checked before placing the icebox group.

11.46.Freezer and multizone evaporator cover

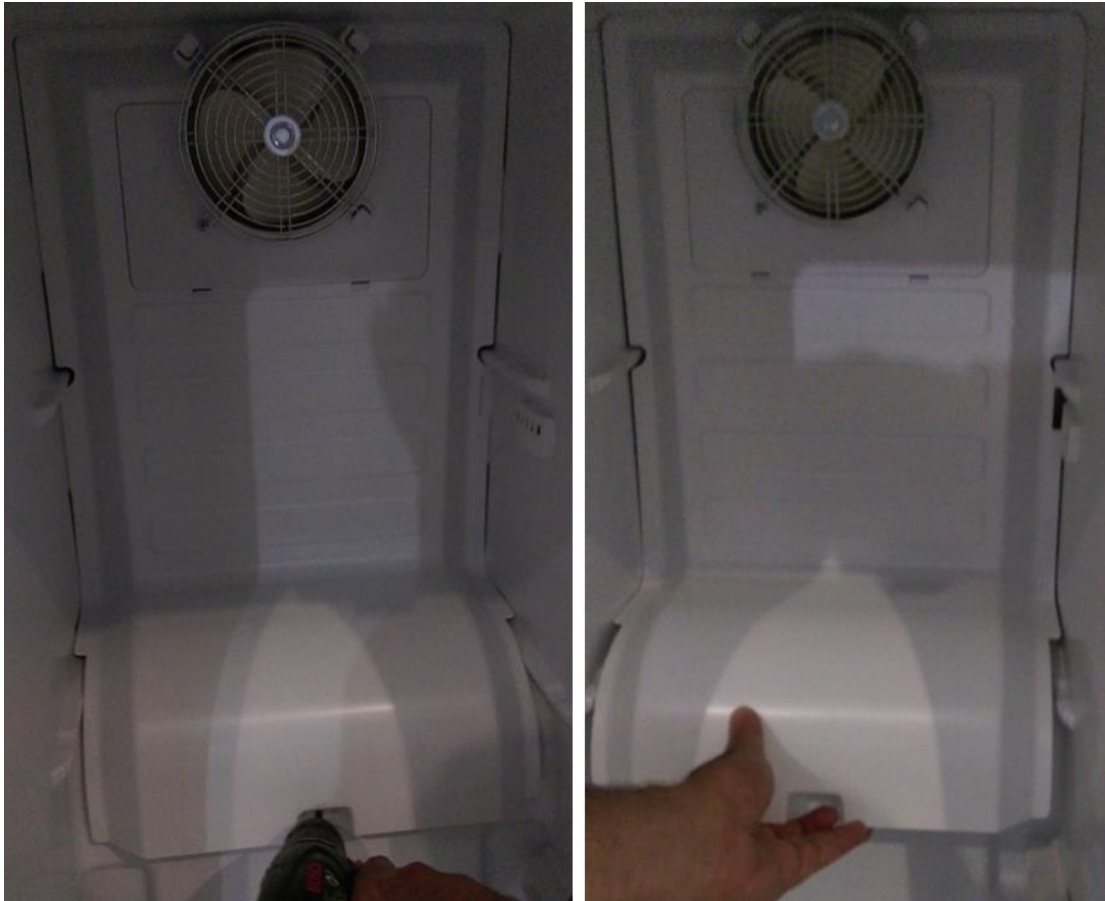

- Evaporator covers are fixed with 1 screw.
- The screws are removed and the covers are removed from their place as shown in the picture

11.47.Wired fan shield



- Removed by turning left on the eva cover.

11.48.Freezer fan group



- Firstly, remove the Freezer eva cover.
- Remove the 2 screws off fixing the fan group.
- Socket connection is removed from its housing by disassembling.


NOTE: Make sure that it is not possible that the cable touches the propeller and the evaporator.

11.49.Thermal fuse



- It is assembled on the return pipe.

11.50.Heated pipe group

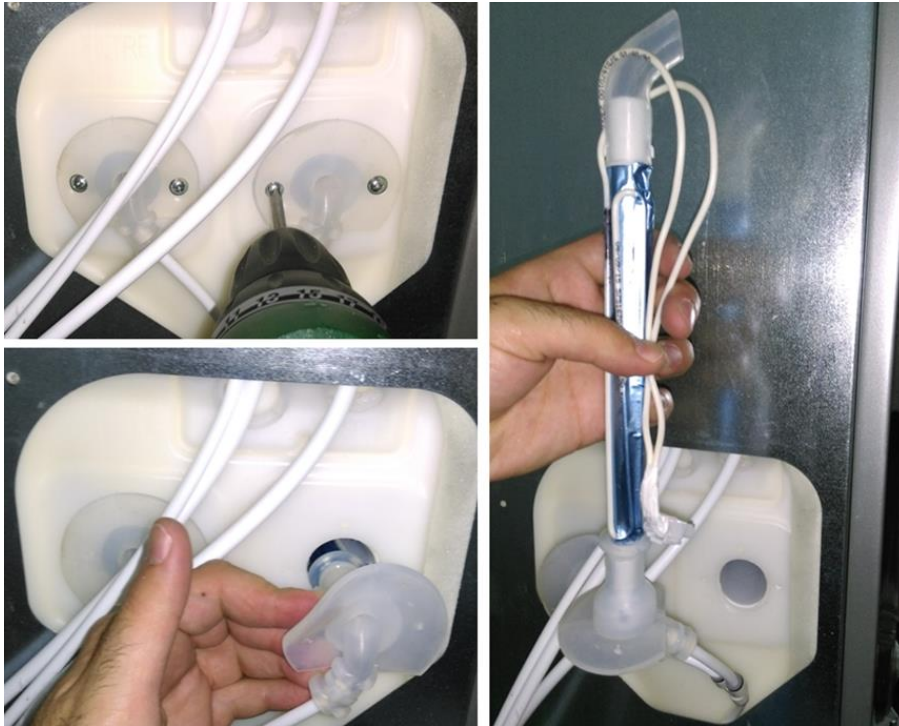

- Once the service hatch is opened, 4 screws on the silicones are removed off and the heating pipe group is pulled as to detach.

11.51.Discharge groups

Freezer draining group



Fridge water drain group



- Freezer draining group is used in between compressor and coil condenser.
- Fridge water drain group is used by the condenser fan.

11.52.Middle hinge group and pin



- It is fixed with 3 screws. Remove the screws to take the cover out.
- Middle hinge pin is detached by pliers.

11.53.The metal door puller mechanism



- It is used under the lower covers of the fridge and freezer doors. It is fixed with two screws. Remove the screws off to take the cover out.

11.54.The condenser fan motor

- It is grouped onto the right side of the coil condenser in the compressor area. It is fixed to steam container with two screws.
- The screws and socket connection are removed, the fan group is dismantled from the housing.

11.55. Sound damper

- Sound damper is assembled onto the pipes of the compressor area and absorbs the sounds and ensures that the refrigerator runs quietly.

11.56. Service hatch

- Terminal cover is mounted to the compressor with tabs.

11.57 Disassembling water dispenser on the door;




- a. Press the bottom part of the display. Take the bottom locking details out and then locking details on both sides.




- b. Take the display out. Turn backwards of the display to see socket and water connections.



- c. Disassemble the socket.

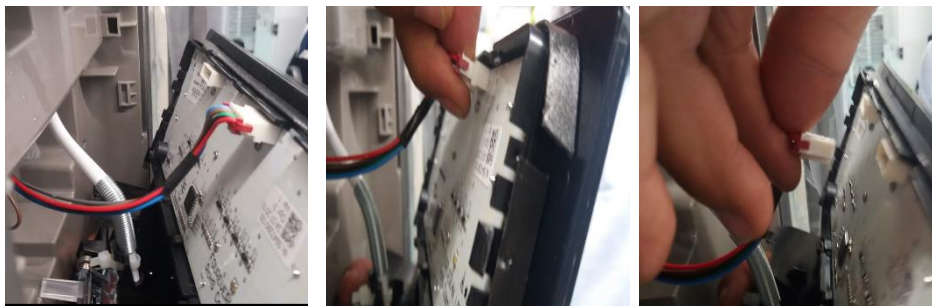


- d. Cut the water hose clamp by sidecutter.

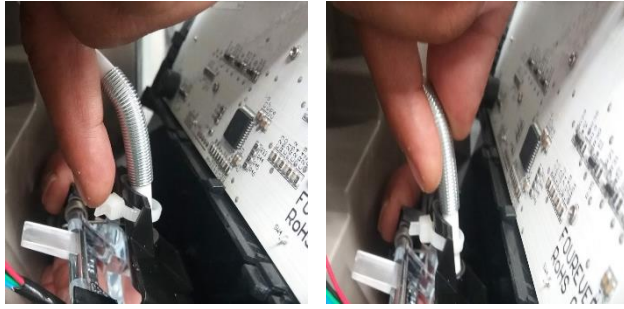

11.57 Assembling water dispenser display:


Disassembling steps will be applied with reverse order.

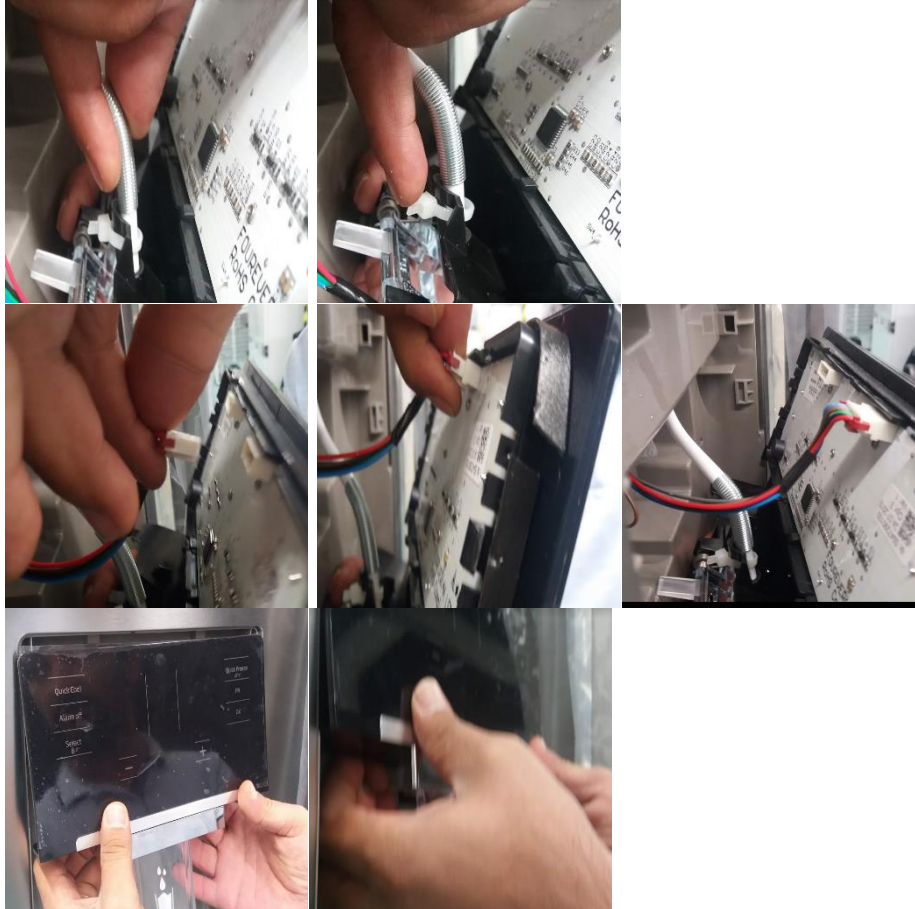

FRV FAZ 2




To get water place a cup under the water fountain.
Get water by pressing on the trigger.

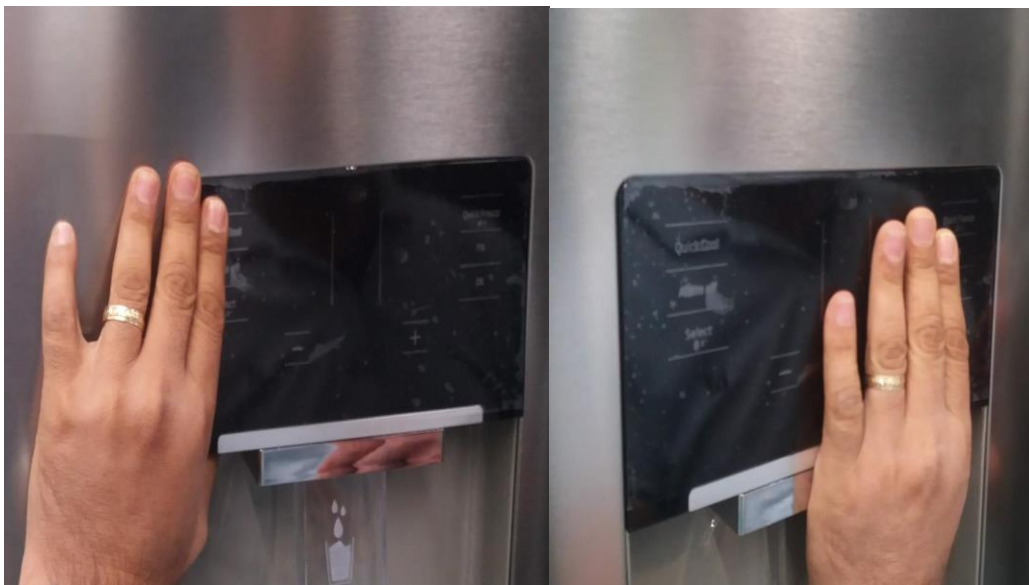


In order to remove the display, remove it from its slot by applying pressure upwards from the bottom of display on the area of left and right tabs.




After removing the tabs from their slots under the display, pull backwards and downwards from the bottom of the display.

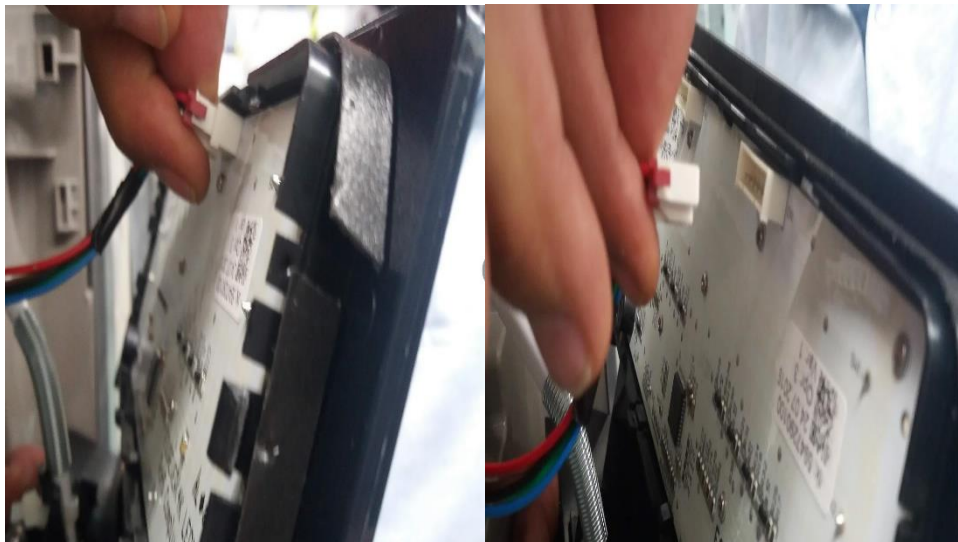

With the removed tabs turn the back of the display and remove the cable socket by pressing on upper tab section and pulling it backwards.

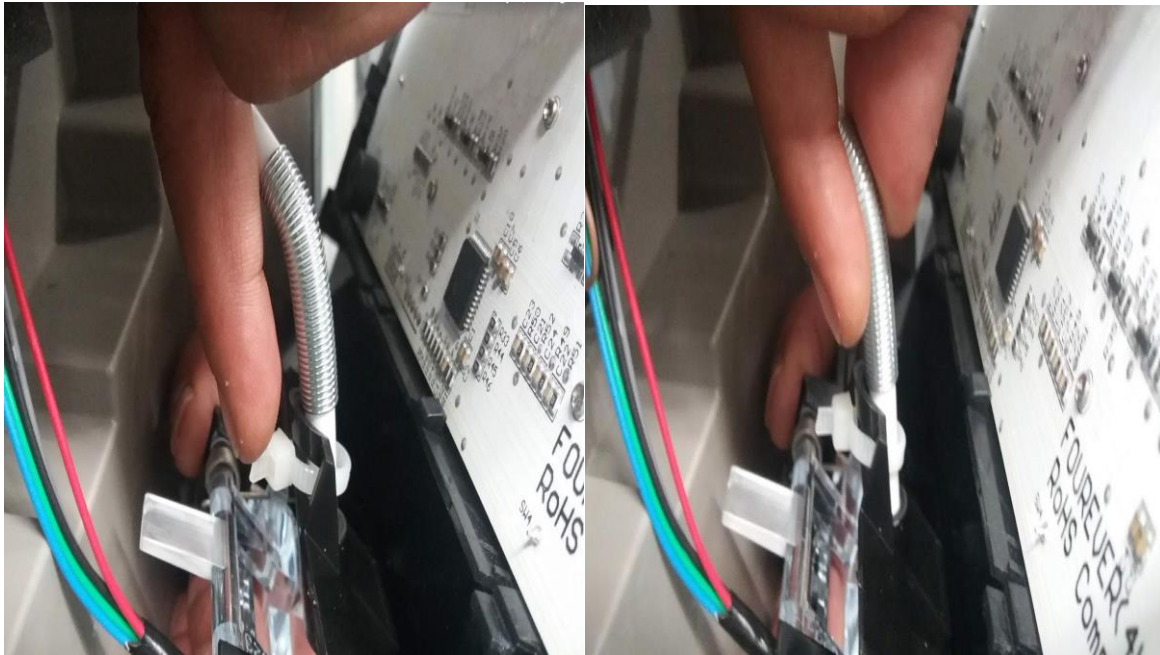

Pull the water hose by breaking off the plastic clamp.

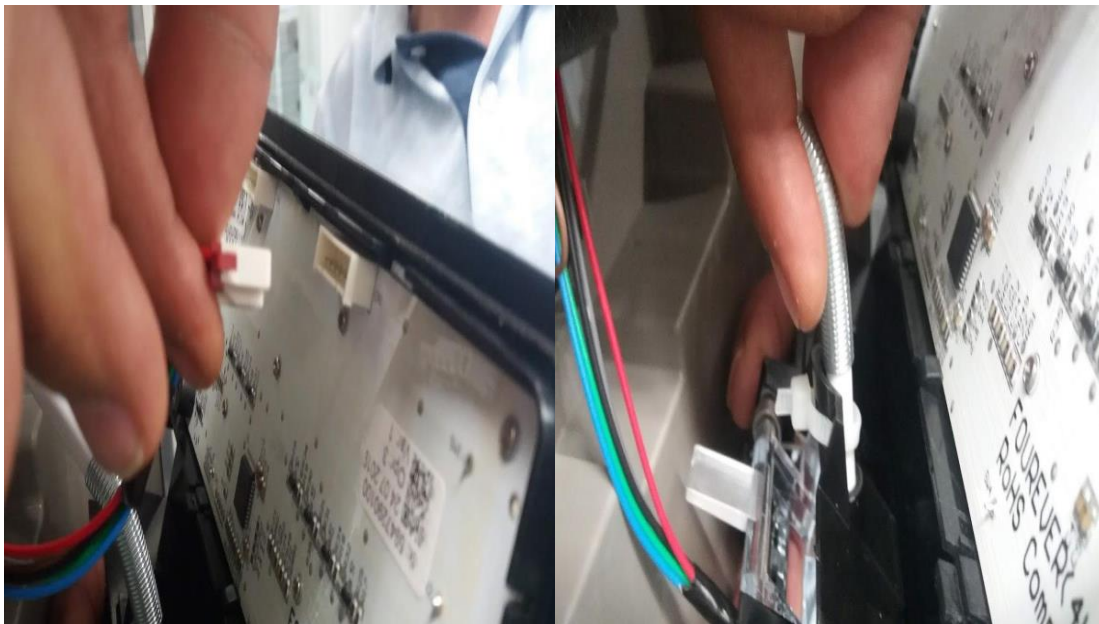

Before installing the display, the socket of the display is installed into its slot and water hose is installed by tightening by means of a clamp.



Side tab slots of the display.



Upper tab slots of the display.



When installing the display, firstly install the upper tabs into their slots and press upwards.




After installing the upper tabs, install the left and right tabs under the display by pressing on them.



Make sure the section under the trigger assembly is placed properly when installing the lower tabs.



View of the grouped display.

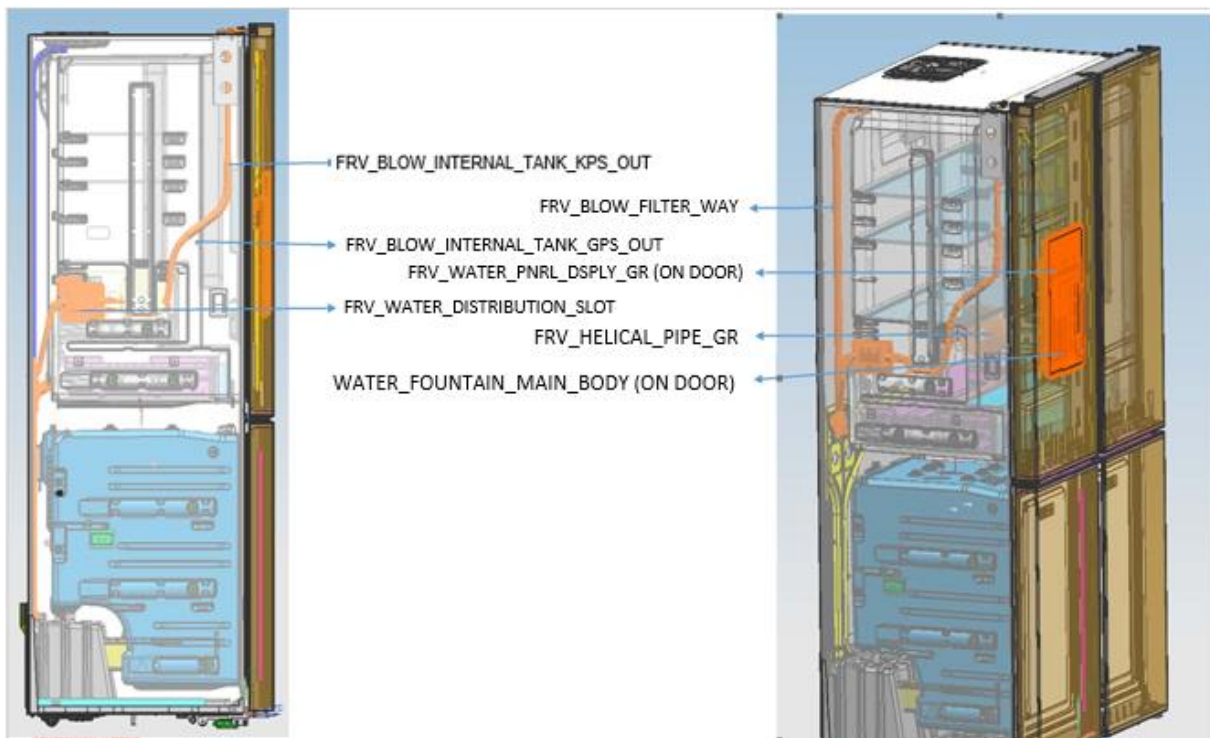

12. Service equipment

1. Blade
2. Different bit set
3. Star bit
4. Torque bit
5. Chargeable gun
6. Flat-tipped screwdriver
7. Phillips screwdriver
8. Side cutter
9. Long nose pliers
10. Box wrench set



13. MAINTENANCE AND CLEANING

Service life of product extends and frequently experienced problems will be reduced if it is cleaned at regular intervals.



WARNING: Before cleaning the unit, unplug it.

- Never use gas, gasoline or similar substances for cleaning purposes.
- Never use any sharp and abrasive tools, soap, household cleaners, detergent and wax polish for cleaning.
- Melt a teaspoon soda in half a litre water. Damp a cloth in this water and wring it well. Wipe inside of the refrigerator with this cloth and then dry it off.
- Make sure that no water enters the lamp housing and other electrical items.
- If the refrigerator is not going to be used for a long period of time, unplug it, remove all food and drinks inside it, clean it and leave its door ajar.
- Check regularly whether the door seals are clean or not. Clean them if necessary.
- To remove door racks, remove all the contents and then simply push the door rack upwards. After you clean and dry them, replace by sliding them from upwards to downwards.

Avoiding bad odours

No materials that may cause odour are used in the production of our refrigerators. However, due to inappropriate food preserving conditions and not cleaning the inner surface of the refrigerator as required can bring forth the odours. Pay attention to following to avoid this problem:

- Keeping your refrigerator clean is important. Food residuals, stains, etc. can cause odour. So, clean the refrigerator with carbonated water in every 15 days. Never use detergents or soap.
- Keep the food in closed containers. Micro-organism spreading out from uncovered containers will cause unpleasant odours.
- Never keep the food that has expired best before dates and spoiled in the refrigerator.



Tea is one of the best deodorants. Open hydroxyl (OH) ends of Catechin substance molecules in the tea hold the odour creating volatile organics to remove unpleasant odours. Put the pulp of the tea you prepared in your refrigerator in an uncovered container and keep it there for maximum 12 hours. If you leave it in the refrigerator for more than 12 hours, it may become the source of the odour as it will collect the micro-organisms that cause the odour.

Protecting the plastic surfaces

Do not put liquid oils or oil-cooked meals in your refrigerator in unsealed containers as they damage the plastic surfaces of the refrigerator. In case of spilling or smearing oil on the plastic surfaces, clean and rinse the relevant part of the surface at once with warm water.