

1. SERVICE NOTE

1-1. Exterior Parts

Be careful to the following points for exterior parts used in this unit.

- Use a piece of cleaning paper or cleaning cloth for cleaning exterior parts. Avoid using chemicals. Even if you have to use chemicals to clean heavy dirt, don't use paint thinner, ketone, nor alcohol.
- Insert the specific screws vertically to the part when installing a exterior part. Be careful not to tighten screws too much.

1-2. SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer.

1. Observe the precautions.
Cautions are indicated on labels or by printing on cabinets, chassis, components, etc. for locations that require attention during service in particular. Be sure to observe these caution statements and cautions in operation manuals.
2. Restore installation of components and arrangement of cables to the previous state.
Be sure to set all components and cables at their original positions.
3. Conduct safety inspection after service.
Check whether removed screws, components, and cables are completely restored to the previous state. Also check for any deteriorations around service locations. Confirm that safety is ensured.

Caution

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.
Dispose of used batteries according to the instructions.

SAFETY-RELATED COMPONENT WARNING!!


COMPONENTS IDENTIFIED BY MARK $\triangle$ OR DOTTED LINE WITH MARK $\triangle$ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

2. REPAIR PARTS LIST

2-1. EXPLODED VIEWS

NOTE:


- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

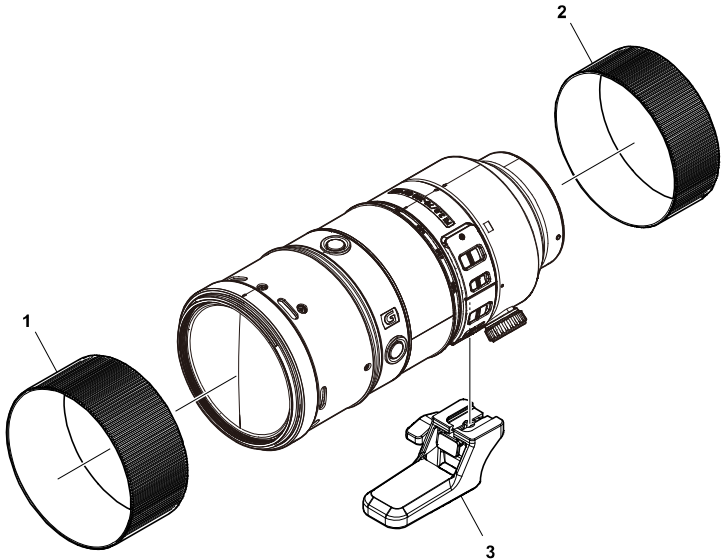

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	4-574-297-01	FOCUS RING RUBBER (9146)			
2	4-574-298-01	ZOOM RING RUBBER (9146)			
3	A-2079-862-A	TIRPOD BASE ASSY(9146)			

SEL70200GM (FE 2.8 / 70-200 GM OSS) (FE 70-200mm F2.8 GM OSS)

ACCESSORIES

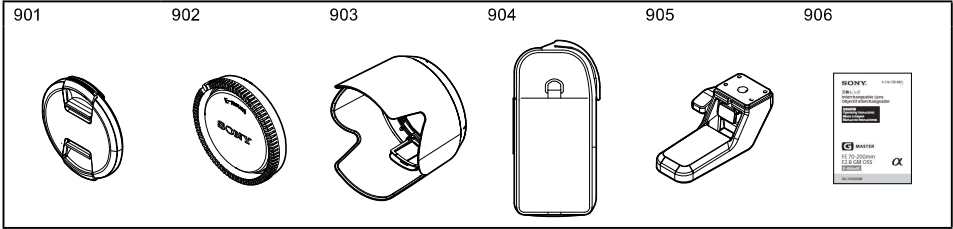

Ref. No.	Part No.	Description
901	X-2592-340-1	Front lens cap
902	4-159-701-03	Rear lens cap
903	X-2592-054-1	Lens hood
904	4-567-615-01	Lens case
905	A-2079-862-A	Tripod collar
* 906	4-576-728-02	Operating Instructions (JAPANESE, ENGLISH, FRENCH, SPANISH)
* 906	4-576-728-12	Operating Instructions (GERMAN, DUTCH, SWEDISH, ITALIAN, PORTUGUESE)
* 906	4-576-728-22	Operating Instructions (RUSSIAN, ARABIC, TRADITIONAL CHINESE, KOREAN, UKRAINIAN)
* 906	4-576-728-32	Operating Instructions (SIMPLIFIED CHINESE)