

SERVICE MANUAL

DISCLAIMER: USE AT OWN RISK.

SONY AND ITS AFFILIATES ARE NOT LIABLE FOR ANY DAMAGE OR INJURY CAUSED TO ANY DIGITAL ELECTRONIC EQUIPMENT, PERSON, OR PROPERTY, WHICH OCCURS DUE TO USE OF THE TOOLS, PARTS, DOCUMENTATION, OR OTHER MATERIALS HEREIN PROVIDED, WHETHER FOR REPAIR, DIAGNOSIS, MAINTENANCE, MODIFICATION, OR OTHERWISE, INCLUDING BUT NOT LIMITED TO: ANY INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES; ANY LOSS OF DATA, PRIVACY OR PROFITS; OR ANY INABILITY TO USE, OR REDUCED FUNCTIONALITY OF, THE DIGITAL ELECTRONIC EQUIPMENT. PLEASE READ ALL INSTRUCTIONS IN THIS MANUAL BEFORE PROCEEDING. PLEASE FOLLOW ALL STEPS IN THE ORDER IN WHICH THEY ARE DESCRIBED. IF YOU DO NOT HAVE ALL TOOLS AND PARTS AVAILABLE TO YOU, OR ARE NOT COMFORTABLE PERFORMING THE REPAIRS DESCRIBED HEREIN, DO NOT PROCEED. FAILURE TO FOLLOW THESE INSTRUCTIONS, OR USE THE PROPER TOOLS AND PARTS, MAY DAMAGE YOUR PRODUCT, LEAD TO PERSONAL INJURY OR CAUSE PROPERTY DAMAGE.

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

IMPORTANT NOTES ON THE WIRELESS TRANSMITTER (WLA-NS7):

The SRS-NS7 comes with the wireless transmitter (WLA-NS7).

The wireless transmitter (WLA-NS7) also exist as a singly sold WLA-NS7.

The specifications of the WLA-NS7 that comes with the SRS-NS7 and the WLA-NS7 that is singly sold are different.

For singly sold WLA-NS7, refer to the separately issued service manual.

SRS-NS7

SRS-NS7/WLA-NS7

SERVICE MANUAL

US Model

COMPONENT MODEL NAME (SRS-NS7)

Wireless Neckband Speaker	SRS-NS7R
Wireless Transmitter	WLA-NS7


IMPORTANT NOTE:

The SRS-NS7 comes with the wireless transmitter (WLA-NS7).
 The wireless transmitter (WLA-NS7) also exist as a singly sold WLA-NS7.
 The specifications of the WLA-NS7 that comes with the SRS-NS7 and the WLA-NS7 that is singly sold are different.
 For singly sold WLA-NS7, refer to the separately issued service manual.

- The service policy of this model is Product Exchange.
 The following parts are available for service parts of this model.

PARTS LIST

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
	503042711	OPERATING INSTRUCTIONS (ENGLISH, FRENCH, SPANISH, ARABIC, THAI, INDONESIAN, TRADITIONAL CHINESE)		501	930100861	OPTICAL CABLE (Optical digital cable (optical rectangular plug ↔ optical rectangular plug))	
				502	930100862	USB TYPE-C CABLE (USB-A to USB-C/Max. 1.5 A) (Long: 1 m) (for WLA-NS7)	
				503	930101088	USB TYPE-C CABLE (USB-A to USB-C/Max. 1.5 A) (Short: 20 cm) (for SRS-NS7R)	

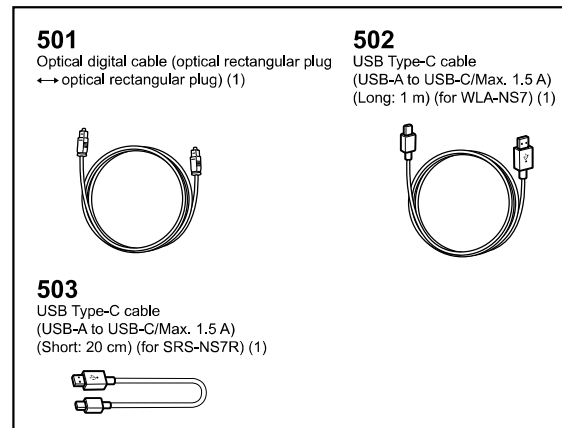


MODEL IDENTIFICATION

When identifying the destination, refer to the model number notation on the bottom side of the neckband.

Note 1: The contents of model number notation might be changed in the midway of production.

SRS-NS7R
 – Bottom side –

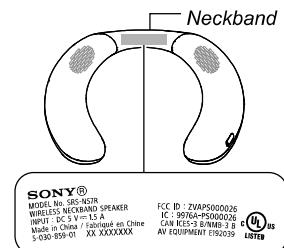

Note 2: This model number notation indicates that it is SRS-NS7 for US.
 If the model number notation is other than this, it is SRS-NS7 with a destination other than US.

SRS-NS7/NS7R
WIRELESS NECKBAND SPEAKER
 WLA-NS7
WIRELESS TRANSMITTER