

# WH-CH710N

## SERVICE MANUAL

**DISCLAIMER: USE AT OWN RISK.**

SONY AND ITS AFFILIATES ARE NOT LIABLE FOR ANY DAMAGE OR INJURY CAUSED TO ANY DIGITAL ELECTRONIC EQUIPMENT, PERSON, OR PROPERTY, WHICH OCCURS DUE TO USE OF THE TOOLS, PARTS, DOCUMENTATION, OR OTHER MATERIALS HEREIN PROVIDED, WHETHER FOR REPAIR, DIAGNOSIS, MAINTENANCE, MODIFICATION, OR OTHERWISE, INCLUDING BUT NOT LIMITED TO: ANY INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES; ANY LOSS OF DATA, PRIVACY OR PROFITS; OR ANY INABILITY TO USE, OR REDUCED FUNCTIONALITY OF, THE DIGITAL ELECTRONIC EQUIPMENT. PLEASE READ ALL INSTRUCTIONS IN THIS MANUAL BEFORE PROCEEDING. PLEASE FOLLOW ALL STEPS IN THE ORDER IN WHICH THEY ARE DESCRIBED. IF YOU DO NOT HAVE ALL TOOLS AND PARTS AVAILABLE TO YOU, OR ARE NOT COMFORTABLE PERFORMING THE REPAIRS DESCRIBED HEREIN, DO NOT PROCEED. FAILURE TO FOLLOW THESE INSTRUCTIONS, OR USE THE PROPER TOOLS AND PARTS, MAY DAMAGE YOUR PRODUCT, LEAD TO PERSONAL INJURY OR CAUSE PROPERTY DAMAGE.

**CAUTION**

Danger of explosion if battery is incorrectly replaced.  
Replace only with the same or equivalent type.

# WH-CH710N

## SERVICE MANUAL

US Model

 
- **Color variations**

(B) Black, (H) Gray, (L) Blue, (W) White

- The service policy of this model is Product Exchange.  
The following parts are available for service parts of this model.

### PARTS LIST


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
	501389211	GUIDE, REFERENCE (ENGLISH, SPANISH, FRENCH)		1	930100203	CABLE, USB (USB Type-C® cable (USB-A to USB-C®) (approx. 20 cm))	
	501389511	MANUAL, INSTRUCTION		2	930100373	CABLE (WITH PLUG) (Headphone cable (approx. 1.2 m))	
				3	930100369	EARPAD (B) (1 piece) (for Black)	
				3	930100370	EARPAD (L) (1 piece) (for Blue)	
				3	930100371	EARPAD (W) (1 piece) (for White)	
				3	930100372	EARPAD (H) (1 piece) (for Gray)	

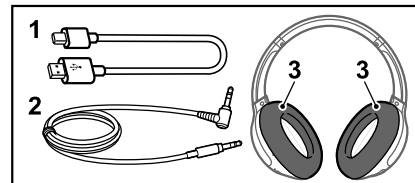

### MODEL IDENTIFICATION

When identifying the destination, refer to the model number notation on the inside of the right slider.

 
**Note 1:** The contents of model number notation might be changed in the midway of production.

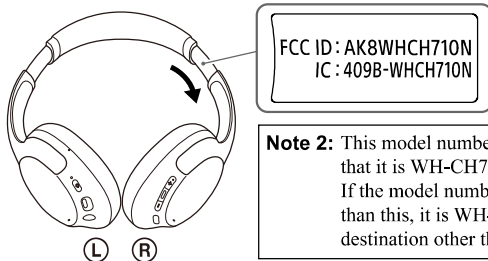

**Note 2:** This model number notation indicates that it is WH-CH710N for US.  
If the model number notation is other than this, it is WH-CH710N with a destination other than US.

### CHECKING METHOD OF SERIAL NUMBER

 When checking the serial number, refer to the serial number label affixed on the inside of the left side hanger.

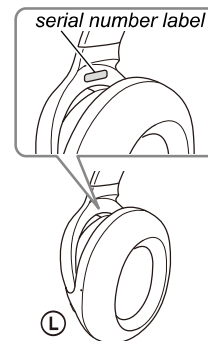

## WIRELESS NOISE CANCELLING STEREO HEADSET