


EXPLODED VIEW


INTRODUCTION (I)

For Model	Product Code
LRG3093ST / 00	FG4134ES.FSTELGA
LRG3093ST / 01	FG4134ES.FS1ELGA

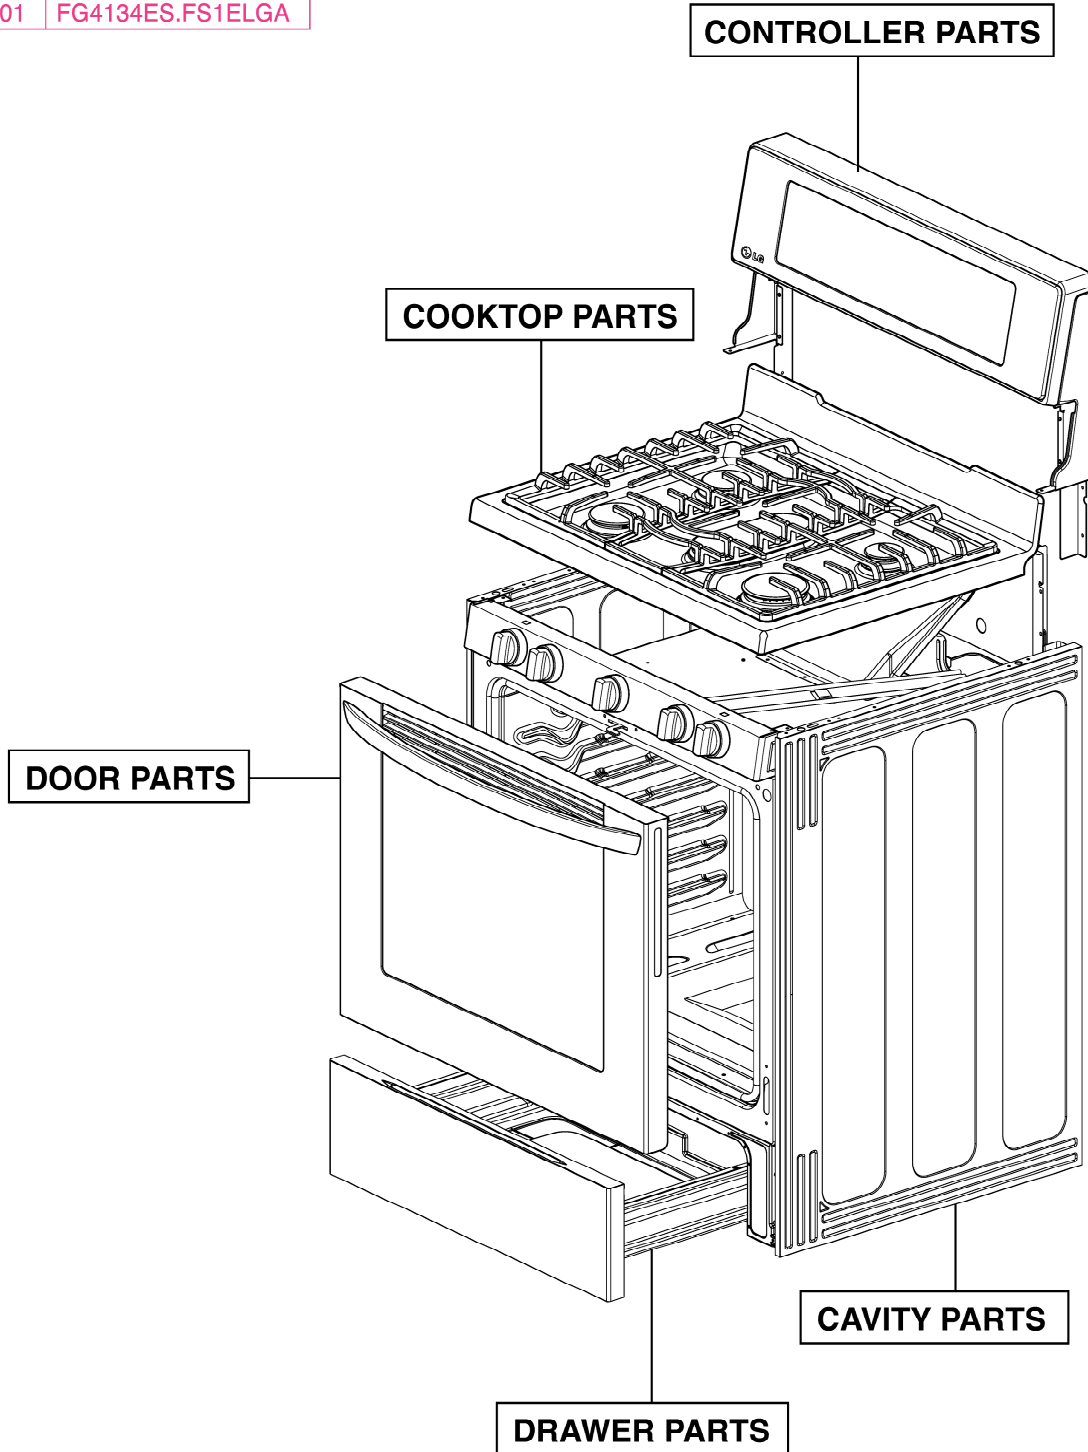


DOOR PARTS (I)

For Model	Product Code
LRG3093ST / 00	FG4134ES.FSTELGA
LRG3093ST / 01	FG4134ES.FS1ELGA

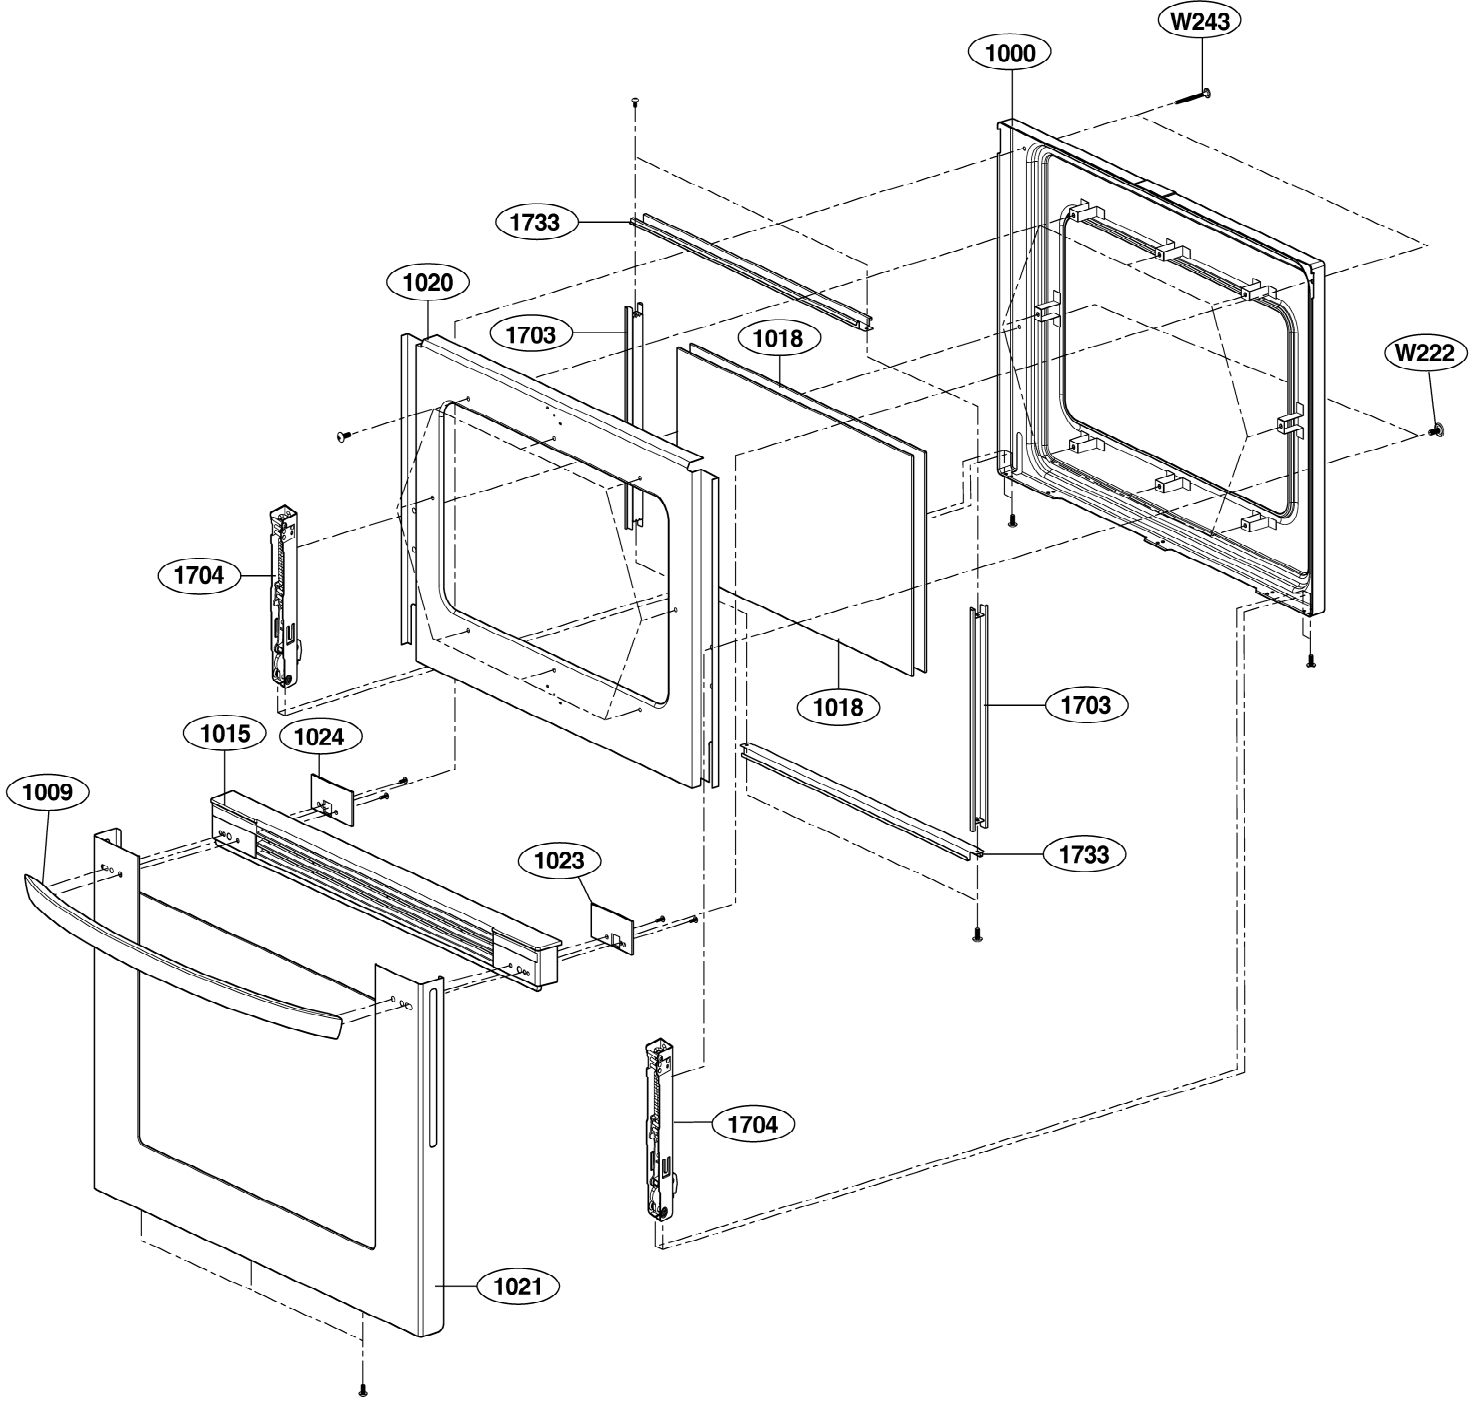


CONTROLLER PARTS (I)

For Model	Product Code
LRG3093ST / 00	FG4134ES.FSTELGA
LRG3093SB / 00	FG4134EB.FBKELGA
LRG3093SW / 00	FG4134EW.FWHELGA

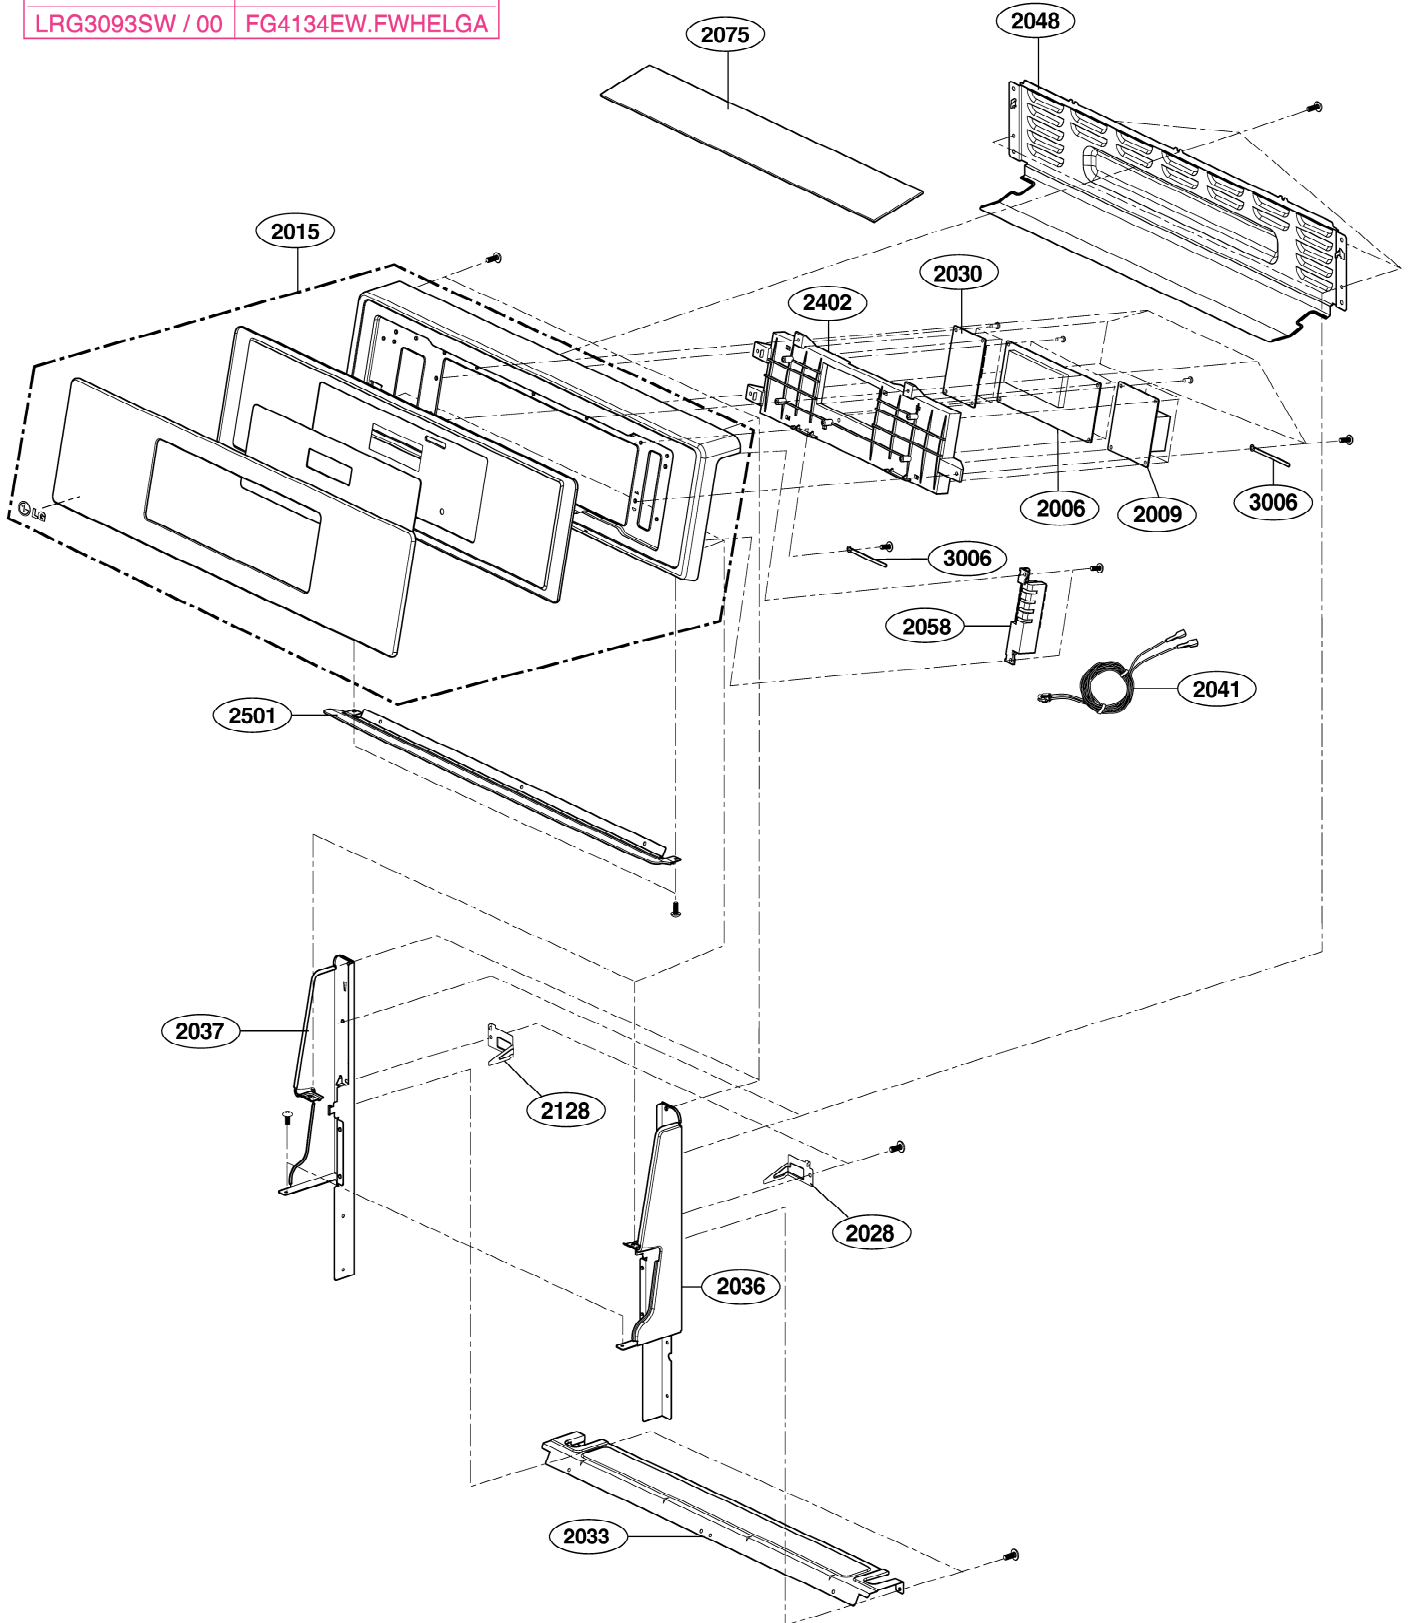


COOKTOP PARTS (I)

For Model	Product Code
LRG3093ST / 00	FG4134ES.FSTELGA
LRG3093SB / 00	FG4134EB.FBKELGA
LRG3093SW / 00	FG4134EW.FWHELGA

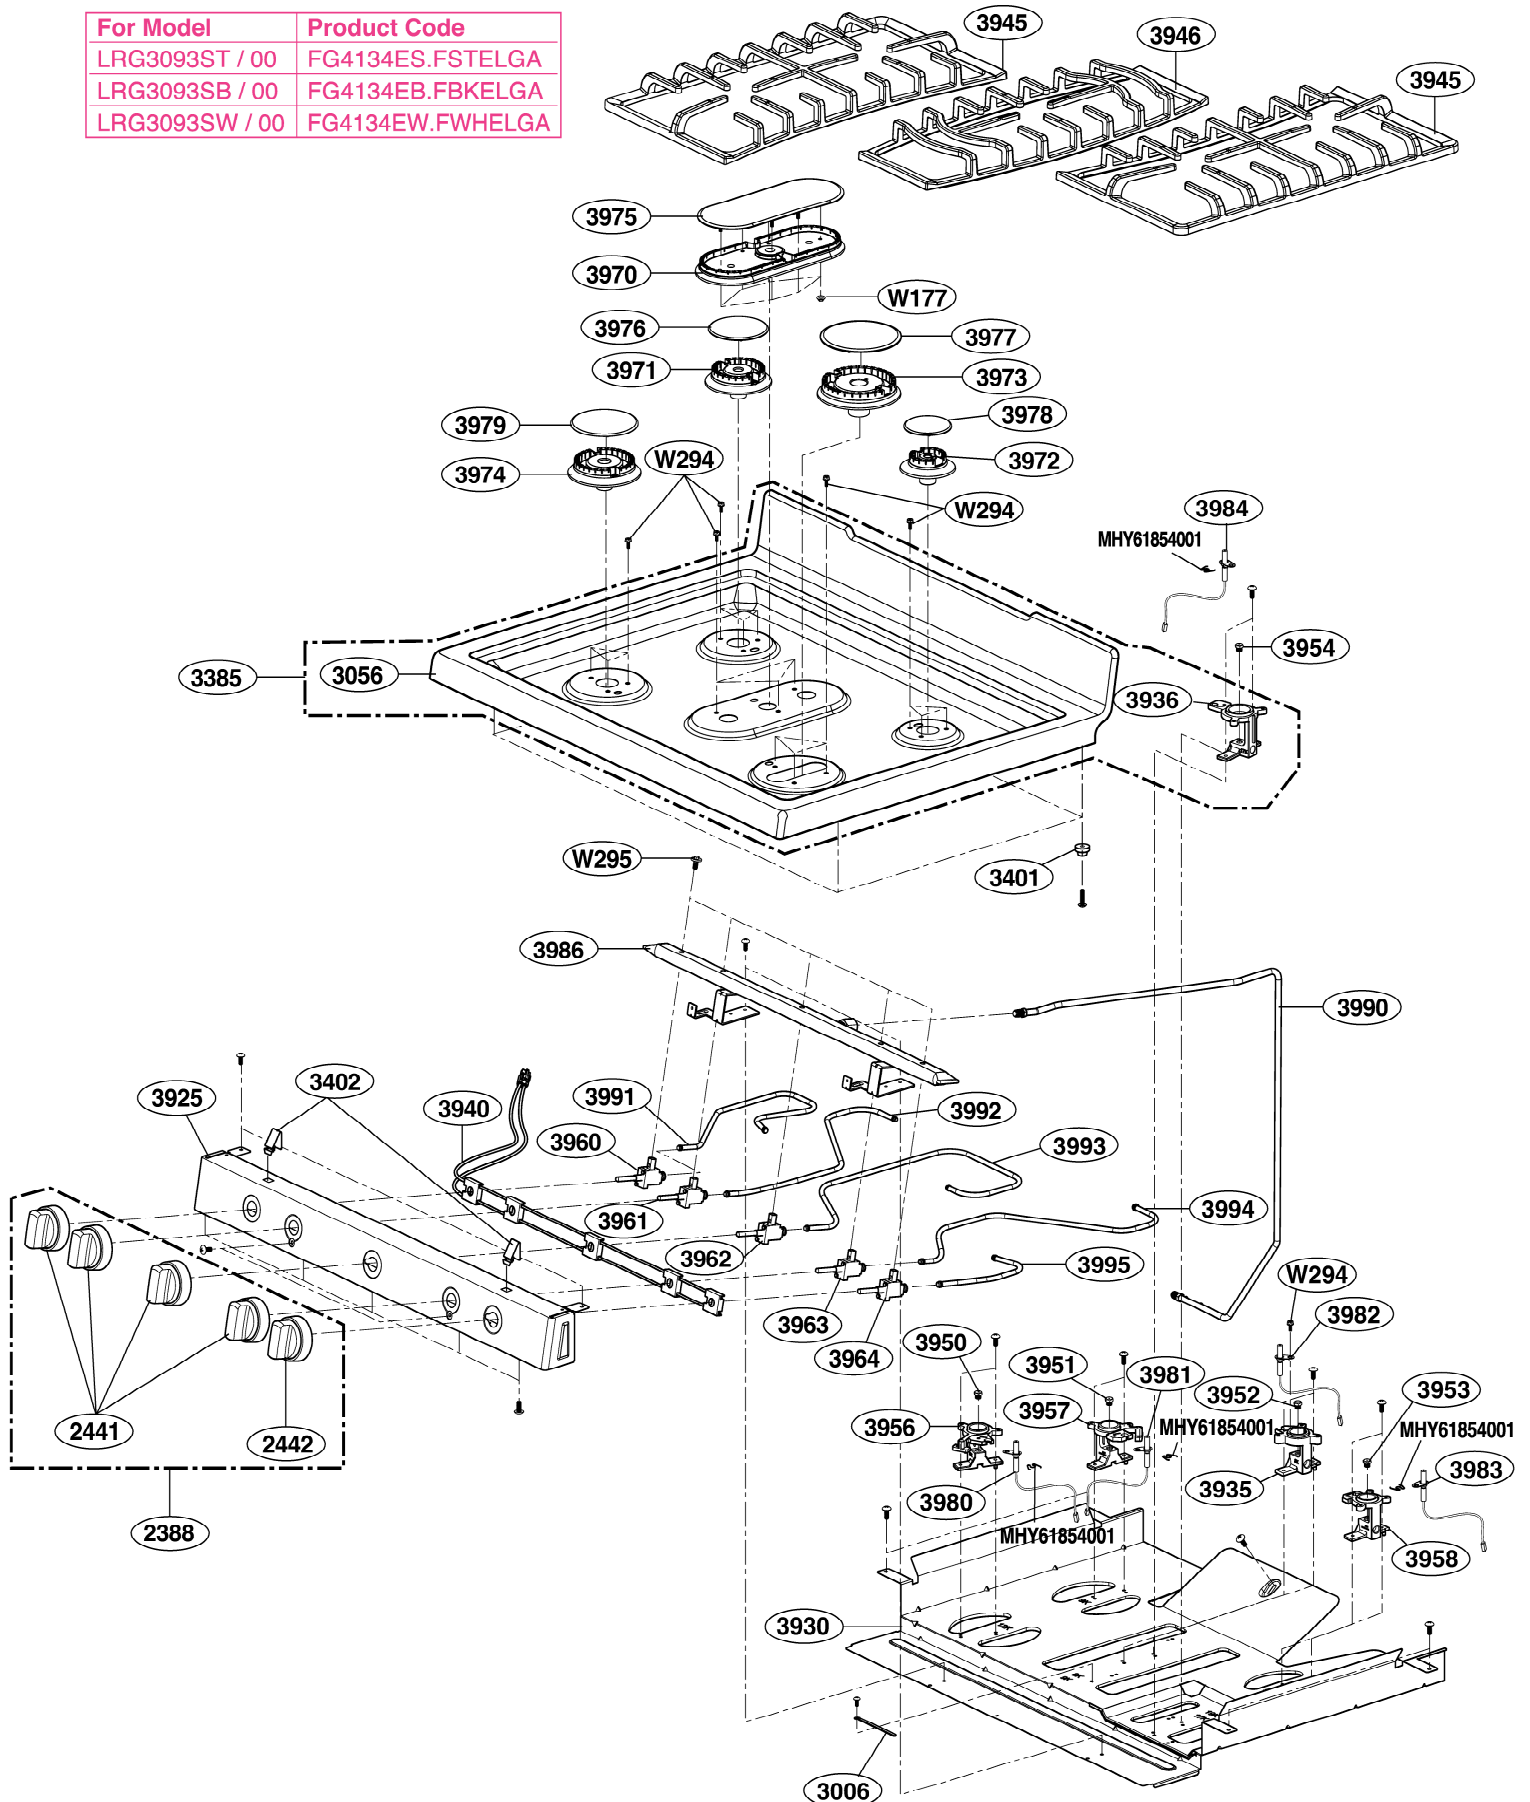

DRAWER PARTS (I)

For Model	Product Code
LRG3093ST / 00	FG4134ES.FSTELGA
LRG3093SB / 00	FG4134EB.FBKELGA
LRG3093SW / 00	FG4134EW.FWHELGA

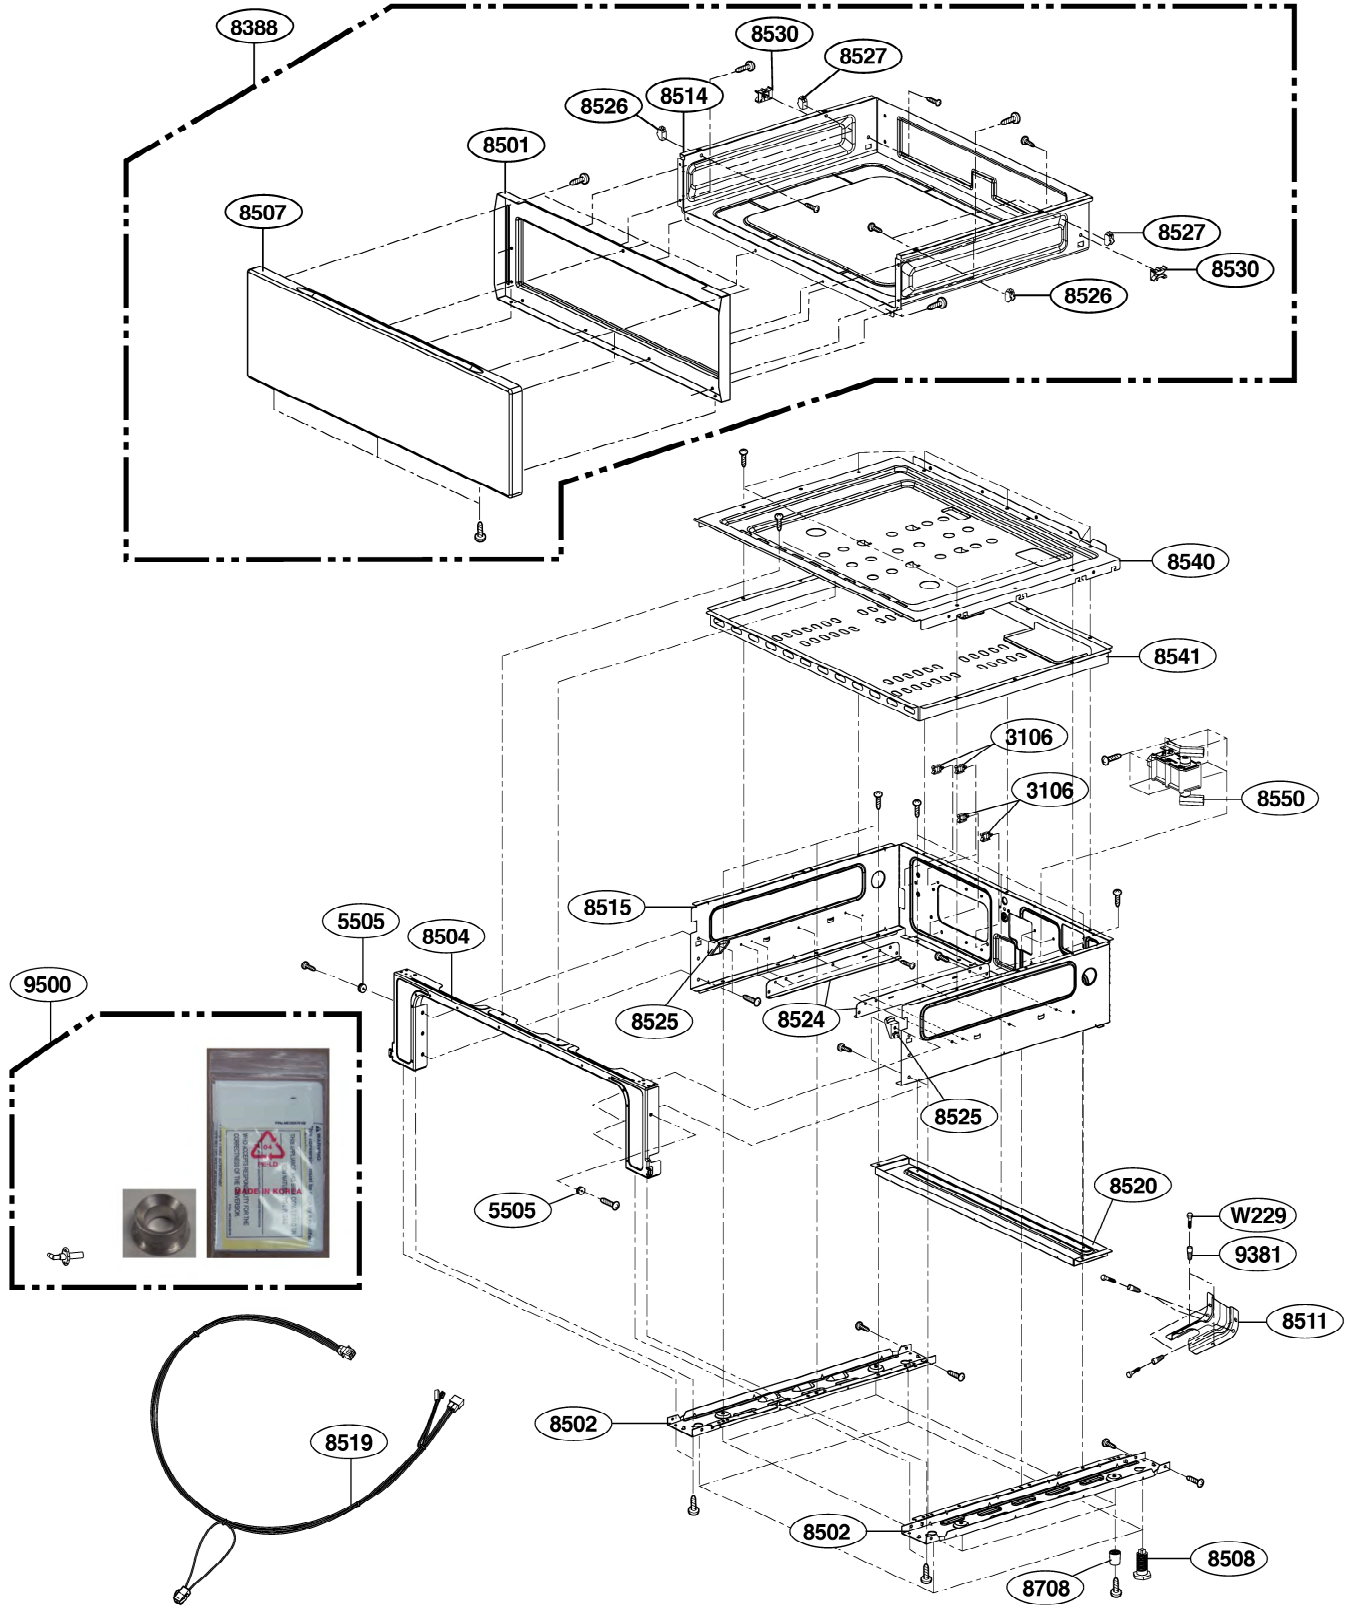

CAVITY PARTS (I)

For Model	Product Code
LRG3093ST / 00	FG4134ES.FSTELGA

