



LG

Life's Good

LED TV


SERVICE MANUAL

CHASSIS : UA13D

MODEL : 55UQ7070ZUE
55UQ7590PUB

CAUTION

BEFORE SERVICING THE CHASSIS, READ THE SAFETY PRECAUTIONS IN THIS MANUAL.

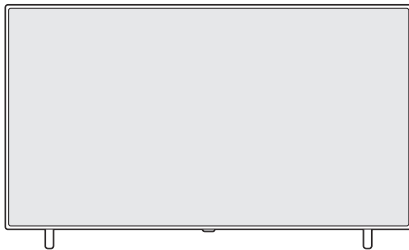

P/NO : MFL71912215 (2205-REV01)

Any reproduction, duplication, distribution (including by way of email, facsimile or other electronic means), publication, modification, copying or transmission of this Service Manual is **STRICTLY PROHIBITED** unless you have obtained the prior written consent of the LG Electronics entity from which you received this Service Manual. The material covered by this prohibition includes, without limitation, any text, graphics or logos in this Service Manual.

CONTENTS

CONTENTS	2
SAFETY PRECAUTIONS	3
SERVICING PRECAUTIONS.....	4
SPECIFICATION	6
SOFTWARE UPDATE	10
BLOCK DIAGRAM.....	12
EXPLODED VIEW	13
ASSEMBLY / DISASSEMBLY GUIDE	14
TROUBLE SHOOTING GUIDE	APPENDIX
webOS22 new features & Usability	APPENDIX

SAFETY PRECAUTIONS

IMPORTANT SAFETY NOTICE

Many electrical and mechanical parts in this chassis have special safety-related characteristics. These parts are identified by $\triangle$ in the Exploded View.

It is essential that these special safety parts should be replaced with the same components as recommended in this manual to prevent Shock, Fire, or other Hazards.

Do not modify the original design without permission of manufacturer.

General Guidance

An **isolation Transformer should always be used** during the servicing of a receiver whose chassis is not isolated from the AC power line. Use a transformer of adequate power rating as this protects the technician from accidents resulting in personal injury from electrical shocks.

It will also protect the receiver and its components from being damaged by accidental shorts of the circuitry that may be inadvertently introduced during the service operation.

If any fuse (or Fusible Resistor) in this TV receiver is blown, replace it with the specified.

When replacing a high wattage resistor (Oxide Metal Film Resistor, over 1 W), keep the resistor 10 mm away from PCB.

Keep wires away from high voltage or high temperature parts.

Before returning the receiver to the customer,

always perform an **AC leakage current check** on the exposed metallic parts of the cabinet, such as antennas, terminals, etc., to be sure the set is safe to operate without damage of electrical shock.

Leakage Current Cold Check(Antenna Cold Check)

With the instrument AC plug removed from AC source, connect an electrical jumper across the two AC plug prongs. Place the AC switch in the on position, connect one lead of ohm-meter to the AC plug prongs tied together and touch other ohm-meter lead in turn to each exposed metallic parts such as antenna terminals, phone jacks, etc.

If the exposed metallic part has a return path to the chassis, the measured resistance should be between 1 M Ω and 5.2 M Ω .

When the exposed metal has no return path to the chassis the reading must be infinite.

An other abnormality exists that must be corrected before the receiver is returned to the customer.

Leakage Current Hot Check (See below Figure)

Plug the AC cord directly into the AC outlet.

Do not use a line Isolation Transformer during this check.


Connect 1.5 K / 10 watt resistor in parallel with a 0.15 μ F capacitor between a known good earth ground (Water Pipe, Conduit, etc.) and the exposed metallic parts.

Measure the AC voltage across the resistor using AC voltmeter with 1000 ohms/volt or more sensitivity.

Reverse plug the AC cord into the AC outlet and repeat AC voltage measurements for each exposed metallic part. Any voltage measured must not exceed 0.75 volt RMS which corresponds to 0.5 mA.

In case any measurement is out of the limits specified, there is possibility of shock hazard and the set must be checked and repaired before it is returned to the customer.

Leakage Current Hot Check circuit

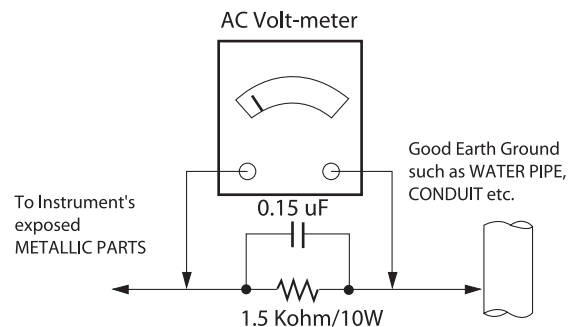

When 25A is impressed between Earth and 2nd Ground for 1 second, Resistance must be less than 0.1 Ω

*Base on Adjustment standard

SERVICING PRECAUTIONS

CAUTION: Before servicing receivers covered by this service manual and its supplements and addenda, read and follow the **SAFETY PRECAUTIONS** on page 3 of this publication.

NOTE: If unforeseen circumstances create conflict between the following servicing precautions and any of the safety precautions on page 3 of this publication, always follow the safety precautions. Remember: Safety First.

General Servicing Precautions

1. Always unplug the receiver AC power cord from the AC power source before;
 - a. Removing or reinstalling any component, circuit board module or any other receiver assembly.
 - b. Disconnecting or reconnecting any receiver electrical plug or other electrical connection.
 - c. Connecting a test substitute in parallel with an electrolytic capacitor in the receiver.**CAUTION:** A wrong part substitution or incorrect polarity installation of electrolytic capacitors may result in an explosion hazard.
2. Test high voltage only by measuring it with an appropriate high voltage meter or other voltage measuring device (DVM, FET-VOM, etc) equipped with a suitable high voltage probe. Do not test high voltage by "drawing an arc".
3. Do not spray chemicals on or near this receiver or any of its assemblies.
4. Unless specified otherwise in this service manual, clean electrical contacts only by applying the following mixture to the contacts with a pipe cleaner, cotton-tipped stick or comparable non-abrasive applicator; 10 % (by volume) Acetone and 90 % (by volume) isopropyl alcohol (90 % - 99 % strength)
CAUTION: This is a flammable mixture.
Unless specified otherwise in this service manual, lubrication of contacts is not required.
5. Do not defeat any plug/socket B+ voltage interlocks with which receivers covered by this service manual might be equipped.
6. Do not apply AC power to this instrument and/or any of its electrical assemblies unless all solid-state device heat sinks are correctly installed.
7. Always connect the test receiver ground lead to the receiver chassis ground before connecting the test receiver positive lead.
Always remove the test receiver ground lead last.
8. Use with this receiver only the test fixtures specified in this service manual.
CAUTION: Do not connect the test fixture ground strap to any heat sink in this receiver.

Electrostatically Sensitive (ES) Devices

Some semiconductor (solid-state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component damage caused by static by static electricity.

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed to prevent potential shock reasons prior to applying power to the unit under test.

2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static type solder removal device. Some solder removal devices not classified as "anti-static" can generate electrical charges sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.
CAUTION: Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.
8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ES device.)

General Soldering Guidelines

1. Use a grounded-tip, low-wattage soldering iron and appropriate tip size and shape that will maintain tip temperature within the range of 500 °F to 600 °F.
2. Use an appropriate gauge of RMA resin-core solder composed of 60 parts tin/40 parts lead.
3. Keep the soldering iron tip clean and well tinned.
4. Thoroughly clean the surfaces to be soldered. Use a mall wire-bristle (0.5 inch, or 1.25 cm) brush with a metal handle. Do not use freon-propelled spray-on cleaners.
5. Use the following unsoldering technique
 - a. Allow the soldering iron tip to reach normal temperature. (500 °F to 600 °F)
 - b. Heat the component lead until the solder melts.
 - c. Quickly draw the melted solder with an anti-static, suction-type solder removal device or with solder braid.
CAUTION: Work quickly to avoid overheating the circuit board printed foil.
6. Use the following soldering technique.
 - a. Allow the soldering iron tip to reach a normal temperature (500 °F to 600 °F)
 - b. First, hold the soldering iron tip and solder the strand against the component lead until the solder melts.
 - c. Quickly move the soldering iron tip to the junction of the component lead and the printed circuit foil, and hold it there only until the solder flows onto and around both the component lead and the foil.
CAUTION: Work quickly to avoid overheating the circuit board printed foil.
 - d. Closely inspect the solder area and remove any excess or splashed solder with a small wire-bristle brush.

IC Remove/Replacement

Some chassis circuit boards have slotted holes (oblong) through which the IC leads are inserted and then bent flat against the circuit foil. When holes are the slotted type, the following technique should be used to remove and replace the IC. When working with boards using the familiar round hole, use the standard technique as outlined in paragraphs 5 and 6 above.

Removal

1. Desolder and straighten each IC lead in one operation by gently prying up on the lead with the soldering iron tip as the solder melts.
2. Draw away the melted solder with an anti-static suction-type solder removal device (or with solder braid) before removing the IC.

Replacement

1. Carefully insert the replacement IC in the circuit board.
2. Carefully bend each IC lead against the circuit foil pad and solder it.
3. Clean the soldered areas with a small wire-bristle brush. (It is not necessary to reapply acrylic coating to the areas).

"Small-Signal" Discrete Transistor

Removal/Replacement

1. Remove the defective transistor by clipping its leads as close as possible to the component body.
2. Bend into a "U" shape the end of each of three leads remaining on the circuit board.
3. Bend into a "U" shape the replacement transistor leads.
4. Connect the replacement transistor leads to the corresponding leads extending from the circuit board and crimp the "U" with long nose pliers to insure metal to metal contact then solder each connection.

Power Output, Transistor Device

Removal/Replacement

1. Heat and remove all solder from around the transistor leads.
2. Remove the heat sink mounting screw (if so equipped).
3. Carefully remove the transistor from the heat sink of the circuit board.
4. Insert new transistor in the circuit board.
5. Solder each transistor lead, and clip off excess lead.
6. Replace heat sink.

Diode Removal/Replacement

1. Remove defective diode by clipping its leads as close as possible to diode body.
2. Bend the two remaining leads perpendicular y to the circuit board.
3. Observing diode polarity, wrap each lead of the new diode around the corresponding lead on the circuit board.
4. Securely crimp each connection and solder it.
5. Inspect (on the circuit board copper side) the solder joints of the two "original" leads. If they are not shiny, reheat them and if necessary, apply additional solder.

Fuse and Conventional Resistor

Removal/Replacement

1. Clip each fuse or resistor lead at top of the circuit board hollow stake.
2. Securely crimp the leads of replacement component around notch at stake top.

3. Solder the connections.

CAUTION: Maintain original spacing between the replaced component and adjacent components and the circuit board to prevent excessive component temperatures.

Circuit Board Foil Repair

Excessive heat applied to the copper foil of any printed circuit board will weaken the adhesive that bonds the foil to the circuit board causing the foil to separate from or "lift-off" the board. The following guidelines and procedures should be followed whenever this condition is encountered.

At IC Connections

To repair a defective copper pattern at IC connections use the following procedure to install a jumper wire on the copper pattern side of the circuit board. (Use this technique only on IC connections).

1. Carefully remove the damaged copper pattern with a sharp knife. (Remove only as much copper as absolutely necessary).
2. Carefully scratch away the solder resist and acrylic coating (if used) from the end of the remaining copper pattern.
3. Bend a small "U" in one end of a small gauge jumper wire and carefully crimp it around the IC pin. Solder the IC connection.
4. Route the jumper wire along the path of the out-away copper pattern and let it overlap the previously scraped end of the good copper pattern. Solder the overlapped area and clip off any excess jumper wire.

At Other Connections

Use the following technique to repair the defective copper pattern at connections other than IC Pins. This technique involves the installation of a jumper wire on the component side of the circuit board.

1. Remove the defective copper pattern with a sharp knife. Remove at least 1/4 inch of copper, to ensure that a hazardous condition will not exist if the jumper wire opens.
2. Trace along the copper pattern from both sides of the pattern break and locate the nearest component that is directly connected to the affected copper pattern.
3. Connect insulated 20-gauge jumper wire from the lead of the nearest component on one side of the pattern break to the lead of the nearest component on the other side. Carefully crimp and solder the connections.

CAUTION: Be sure the insulated jumper wire is dressed so the it does not touch components or sharp edges.

SPECIFICATION

NOTE : Specifications and others are subject to change without notice for improvement.

1. Application range

This specification is applied to the LED TV used UA13D chassis.

2. Test condition

Each part is tested as below without special appointment.

(1) Temperature: 25 °C ± 5 °C, CST: 40 °C ± 2 °C

(2) Relative Humidity: 65 % ± 10 %

(3) Power Voltage

: Standard input voltage (AC 100-240 V~, 50/60 Hz)

* Standard Voltage of each products is marked by models.

(4) Specification and performance of each parts are followed each drawing and specification by part number in accordance with BOM.

(5) The receiver must be operated for about 5 minutes prior to the adjustment.

3. Test method

(1) Performance: LGE TV test method followed

(2) Demanded other specification

- Safety : CE, IEC specification

- EMC : CE, IEC

4. General Specification

No	Item			Specification	Remark
1	Market			North America	
2	Broadcasting system			ATSC / NTSC-M, 64 & 256 QAM	
3	Available Channel			VHF : 02~13	
				UHF : 14~69	
				DTV : 02-69	
				CATV : 01~135	
				CADTV : 01~135	
4	Receiving system			Digital : ATSC, 64 & 256 QAM Analog : NTSC-M	
5	HDMI Input	UHD	HDMI 1	PC / DTV format	Support 6Gbps
			HDMI 2	PC / DTV format	Support 6Gbps, Support ARC
			HDMI 3	PC / DTV format	Support 6Gbps
6	SPDIF out			Optical Audio out	Rear (1EA)
7	USB Input			EMF, DivX HD, For SVC (download)	JPEG, MP3, DivX HD

5. External Input Support Format

5.1. HDMI Input (PC/DTV)

No.	Resolution	H-freq(kHz)	V-freq.(kHz)	Pixel clock(MHz)	Proposed	Remarks
	PC					
1	640*350	31.46	70.09	25.17	EGA	
2	720*400	31.46	70.08	28.32	DOS	
3	640*480	31.46	59.94	25.17	VESA(VGA)	
4	800*600	37.87	60.31	40	VESA(SVGA)	
5	1024*768	48.36	60	65	VESA(XGA)	
6	1360*768	47.71	60.01	84.75	VESA(WXGA)	
7	1152*864	54.34	60.05	80	VESA	
8	1280*1024	63.98	60.02	109	SXGA	Support to HDMI-PC, Not Support for FHD.
9	1920*1080	67.5	60	158.4	WUXGA(Reduced Blanking)	
10	1920*1080	134.86	119.88	296.7	UDTV 2160P	Not Support for FHD.
11	1920*1080	135	120	297	UDTV 2160P	Not Support for FHD
12	3840*2160	53.95	23.98	296.7	UDTV 2160P	Not Support for FHD
13	3840*2160	54	24	297	UDTV 2160P	Not Support for FHD
14	3840*2160	56.25	25	297	UDTV 2160P	Not Support for FHD
15	3840*2160	61.43	29.97	296.7	UDTV 2160P	Not Support for FHD
16	3840*2160	67.5	30	297	UDTV 2160P	Not Support for FHD
17	3840*2160	112.5	50	594	UDTV 2160P	Not Support for FHD
18	3840*2160	134.86	59.94	593.4	UDTV 2160P	Not Support for FHD
19	3840*2160	135	60	594	UDTV 2160P	Not Support for FHD
20	4096*2160	53.95	23.98	296.7	UDTV 2160P	Not Support for FHD
21	4096*2160	54	24	297	UDTV 2160P	Not Support for FHD
22	4096*2160	56.25	25	297	UDTV 2160P	Not Support for FHD
23	4096*2160	61.43	29.97	296.7	UDTV 2160P	Not Support for FHD
24	4096*2160	67.5	30	297	UDTV 2160P	Not Support for FHD
25	4096*2160	112.5	50	594	UDTV 2160P	Not Support for FHD
26	4096*2160	134.86	59.94	593.4	UDTV 2160P	Not Support for FHD
27	4096*2160	135	60	594	UDTV 2160P	(UHD 60Hz models only), Support only when UHD DeepColor is On
28	2560*1440	88.78	59.95	241.5	3K	(UHD, 8K 120Hz models only), Support only when UHD DeepColor is On
29	2560*1440	182.99	119.99	497.7	3K	


No.	Resolution	H-freq(kHz)	V-freq.(kHz)	Pixel clock(MHz)	Proposed	Remarks
	DTV					
1	640*480	31.46	59.94	25.12	SDTV 480P	
2	640*480	31.5	60	25.12	SDTV 480P	
3	720*480	31.47	59.94	27	SDTV 480P	
4	720*480	31.5	60	27.02	SDTV 480P	
5	720*576	31.25	50	27	SDTV 576P	
6	1280*720	44.96	59.94	74.17	HDTV 720P	
7	1280*720	45	60	74.25	HDTV 720P	
8	1280*720	37.5	50	74.25	HDTV 720P	
9	1920*1080	28.12	50	74.25	HDTV 1080I	
10	1920*1080	33.72	59.94	74.17	HDTV 1080I	
11	1920*1080	33.75	60	74.25	HDTV 1080I	
12	1920*1080	26.97	23.97	63.29	HDTV 1080P	
13	1920*1080	27	24	63.36	HDTV 1080P	
14	1920*1080	33.71	29.97	79.12	HDTV 1080P	
15	1920*1080	33.75	30	79.2	HDTV 1080P	
16	1920*1080	56.25	50	148.5	HDTV 1080P	
17	1920*1080	67.43	59.94	148.35	HDTV 1080P	
18	1920*1080	67.5	60	148.5	HDTV 1080P	
19	1920*1080	112.5	100	297	UDTV 2160P	Not Support for FHD.
20	1920*1080	134.86	119.88	296.7	UDTV 2160P	Not Support for FHD.
21	1920*1080	135	120	297	UDTV 2160P	Not Support for FHD.
22	3840*2160	53.95	23.98	296.7	UDTV 2160P	Not Support for FHD.
23	3840*2160	54	24	297	UDTV 2160P	Not Support for FHD.
24	3840*2160	56.25	25	297	UDTV 2160P	Not Support for FHD.
25	3840*2160	61.43	29.97	296.7	UDTV 2160P	Not Support for FHD.
26	3840*2160	67.5	30	297	UDTV 2160P	Not Support for FHD.
27	3840*2160	112.5	50	594	UDTV 2160P	Not Support for FHD.
28	3840*2160	134.86	59.94	593.4	UDTV 2160P	Not Support for FHD.
29	3840*2160	135	60	594	UDTV 2160P	Not Support for FHD.
30	3840*2160	225	100	1188	UDTV 2160P	4K120 model (LM21U HDMI port, O20N) or 8K model
31	3840*2160	269.73	119.88	1186.8	UDTV 2160P	
32	3840*2160	270	120	1188	UDTV 2160P	
33	4096*2160	53.95	23.98	296.7	UDTV 2160P	Not Support for FHD.
34	4096*2160	54	24	297	UDTV 2160P	Not Support for FHD.
35	4096*2160	56.25	25	297	UDTV 2160P	Not Support for FHD.
36	4096*2160	61.43	29.97	296.7	UDTV 2160P	Not Support for FHD.
37	4096*2160	67.5	30	297	UDTV 2160P	Not Support for FHD.
38	4096*2160	112.5	50	594	UDTV 2160P	Not Support for FHD.
39	4096*2160	134.86	59.94	593.4	UDTV 2160P	Not Support for FHD.
40	4096*2160	135	60	594	UDTV 2160P	Not Support for FHD.

No.	Resolution	H-freq(kHz)	V-freq.(kHz)	Pixel clock(MHz)	Proposed	Remarks
	DTV					
41	4096*2160	225	100	1188	UDTV 2160P	4K120 model (LM21U HDMI port, O20N) or 8K model
42	4096*2160	269.73	119.88	1186.8	UDTV 2160P	
43	4096*2160	270	120	1188	UDTV 2160P	
44	7680*4320	107.89	23.98	1188	8K	8K Model Only.
45	7680*4320	108	24	1188	8K	8K Model Only.
46	7680*4320	110	25	1188	8K	8K Model Only.
47	7680*4320	131.87	29.97	1188	8K	8K Model Only.
48	7680*4320	132	30	1188	8K	8K Model Only.
49	7680*4320	220	50	2376	8K	8K Model Only.
50	7680*4320	263.74	59.94	2376	8K	8K Model Only.
51	7680*4320	264	60	2376	8K	8K Model Only.


SOFTWARE UPDATE

1. USB DOWNLOAD

- (1) Plug in the USB to the TV
- (2) If there are update-able files in the USB, the TV would ask that the user want to process the SW upper version update.

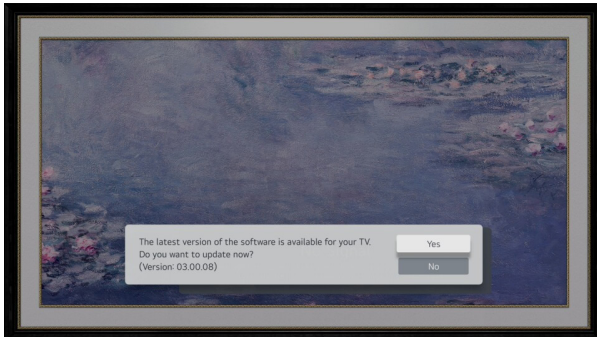


- (3) Click "Yes" button : Start Update

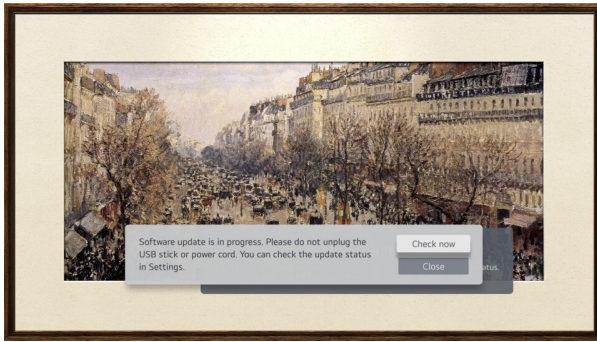

- (4) Click "Check Now" : Go to SW Update menu for monitoring
- (5) TV has been starting SW update



- (6) After finishing the update, it will show a pop-up below the picture.

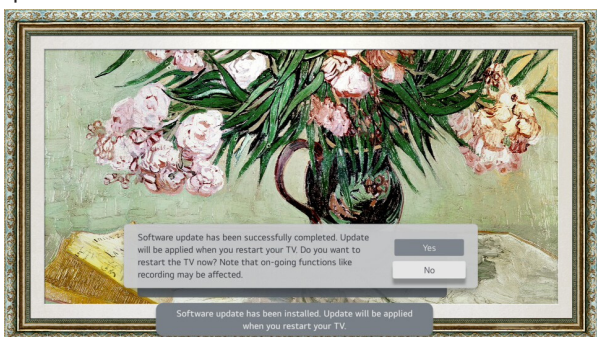


- (7) Click "Yes" : Tv will be turn off and on itself

2. NSU DOWNLOAD

(This Function is needed to connect to the internet.)

Case 1) Auto Update On


- (1) Go to Menu → All Settings → Support → Software Update, then check Auto update is turned on.

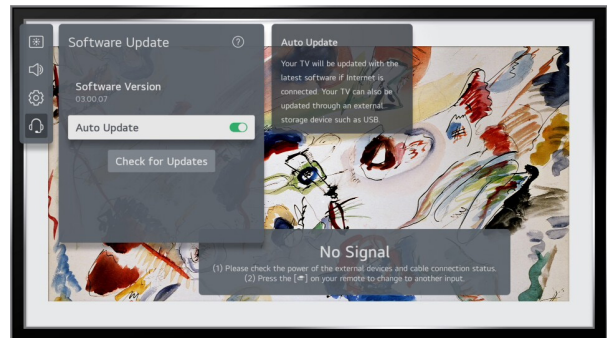


- (2) After the update complete, the user can check a pop-up below the picture, which indicated update is complete and the new version will be applied after the TV turn off and on.



- (3) If the user want to check the process of updating [Menu → All Settings → Support → Software Update]

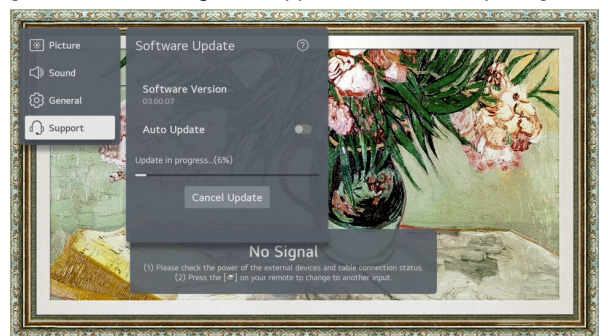


(4) If it needs to cancel the update, click “cancel update” button

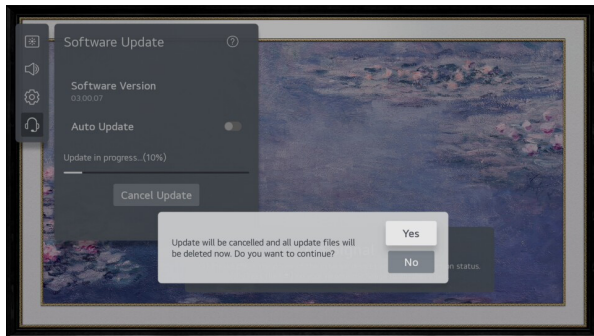

(5) [“No”] : update continue
[“Yes”] : update cancel


(4) If the user started the update, the TV shows a pop-up below the picture.

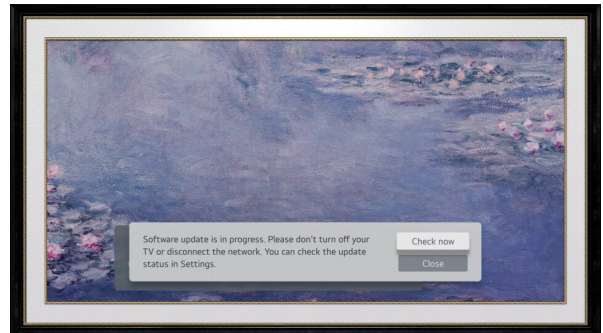


(5) [CHECK NOW] : Just start the update
[Close] : Close the pop-up

Case 2) NOT Allow Automatic Updates Toggle Item

(1) Go to Menu → All Settings → Support → Software Update

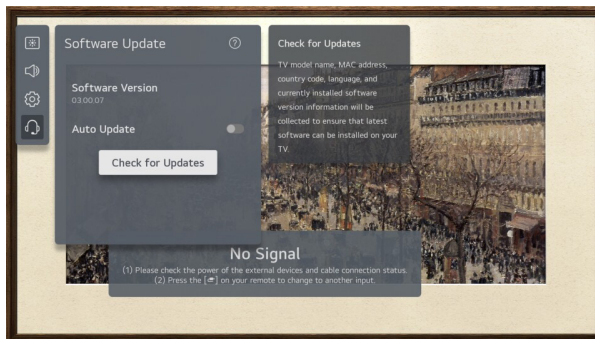


(2) If it found upper version SW than the TV SW version, TV would show a pop-up like below the picture.
“The latest version of the SW is available for your TV. Do you want to update now”

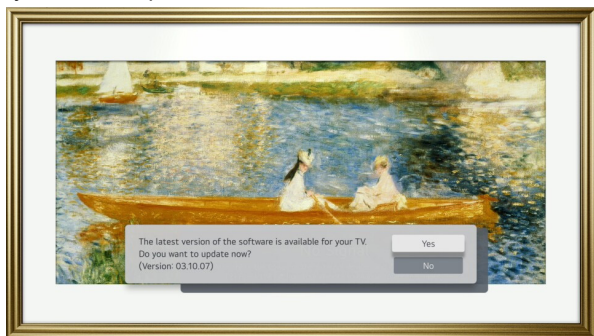

(3) [Yes] : update starts.
[No] : Close the pop-up, check out later




BLOCK DIAGRAM

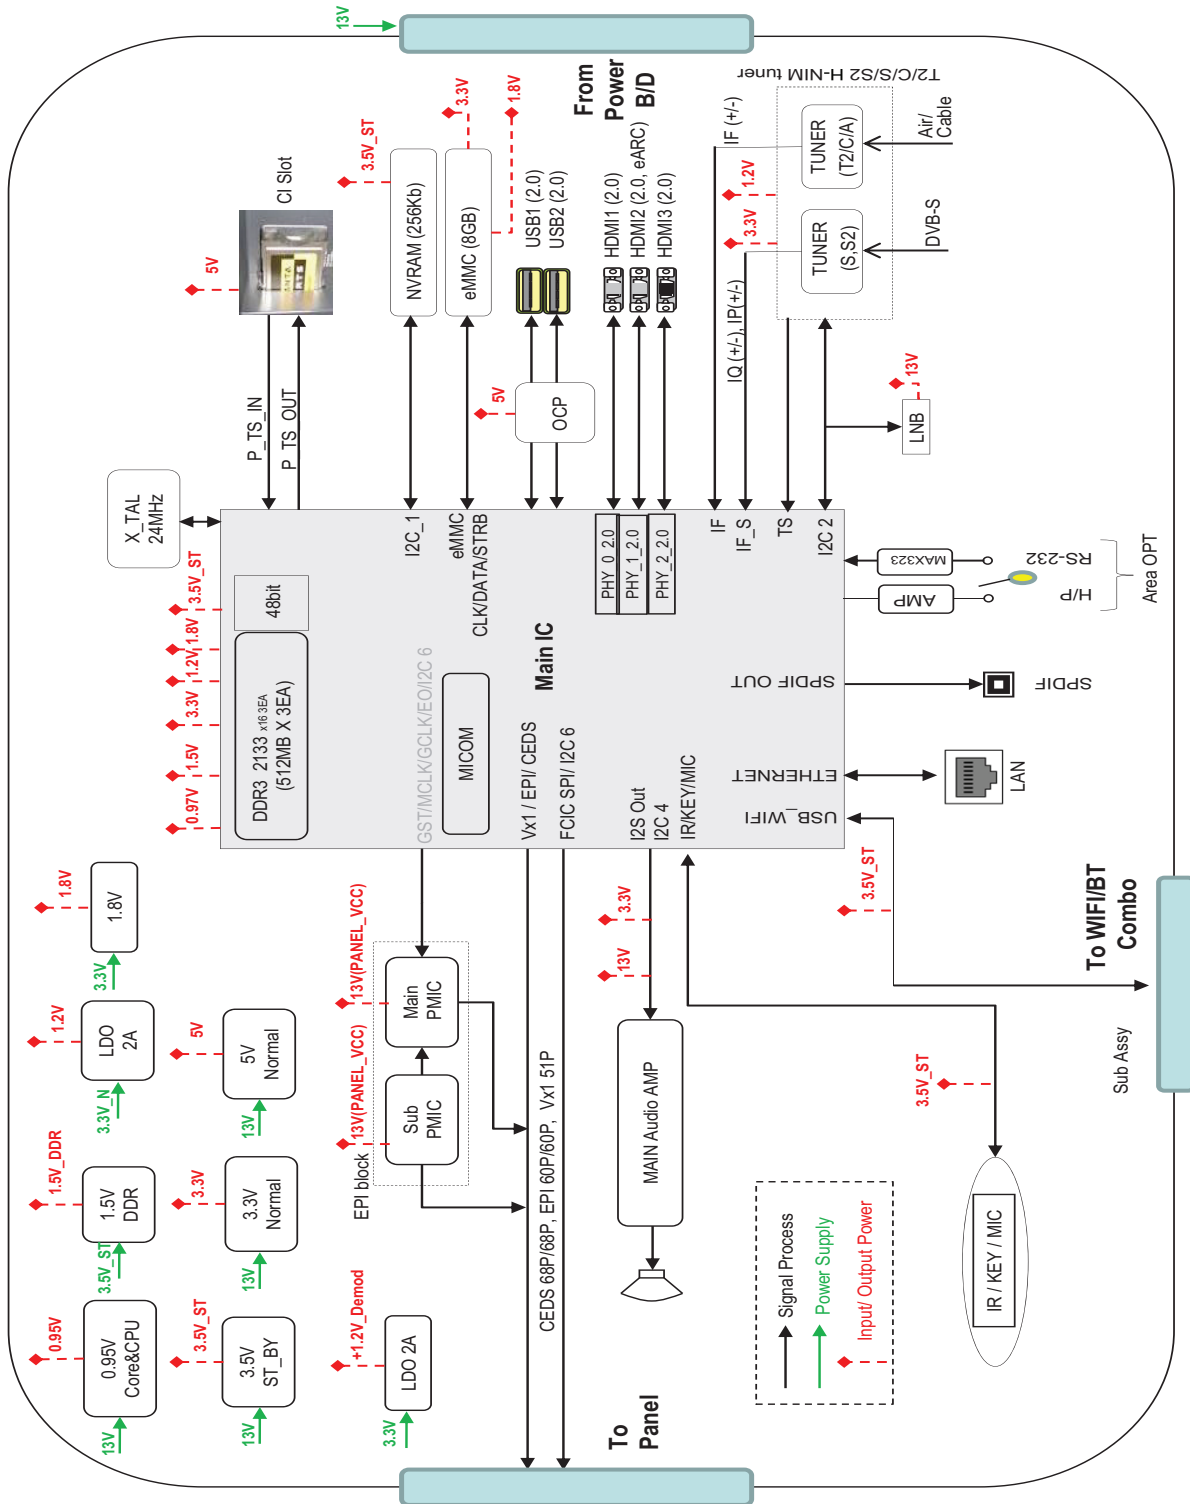

EXPLODED VIEW

IMPORTANT SAFETY NOTICE

Many electrical and mechanical parts in this chassis have special safety-related characteristics. These parts are identified by Δ in the EXPLODED VIEW. It is essential that these special safety parts should be replaced with the same components as recommended in this manual to prevent Shock, Fire, or other Hazards. Do not modify the original design without permission of manufacturer.

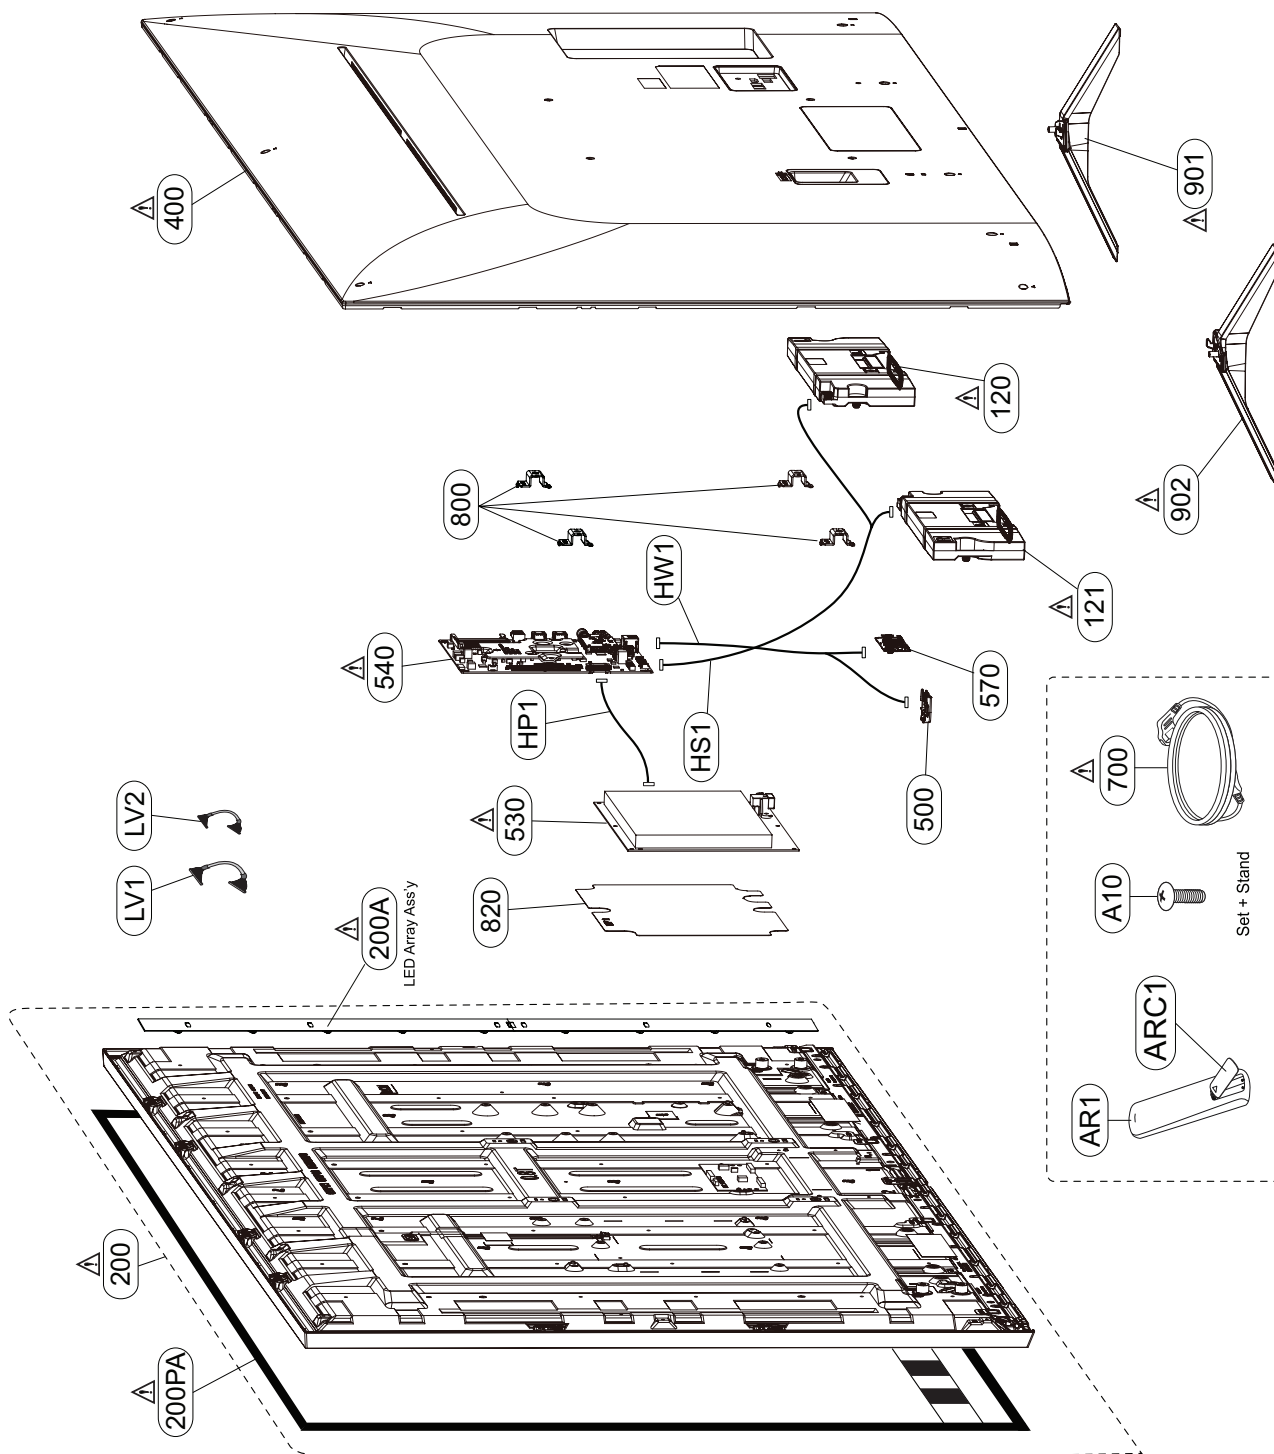


ASSEMBLY / DISASSEMBLY GUIDE (SET)

■ Disassemble

1. After Screw & Holder Disassemble, please remove Cover Assy., Rear from Module.

(1) Remove the screw.

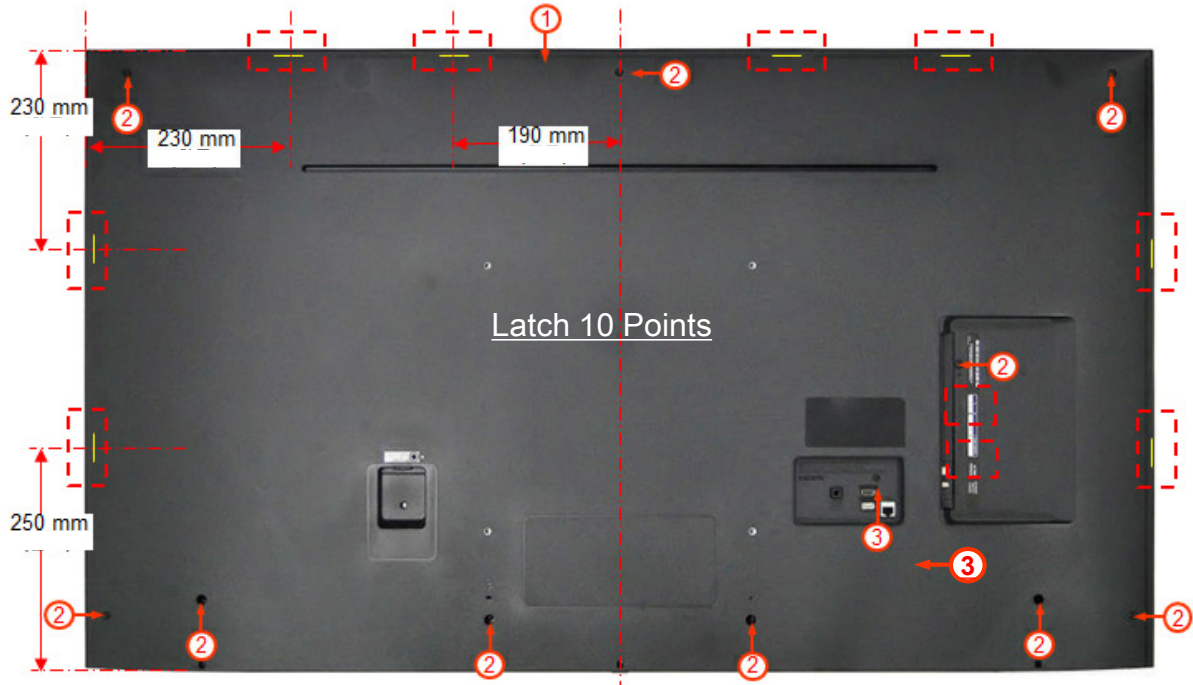

② Screw 10EA(M3*5.5)

③ Screw 2EA(P4*10)



(2) Remove Latch(Holder)





It is easy to pull it to put your finger in the groove.

An illustrative photograph


* Remove both the right side latch and left side latch.
Hold the Right(Left) bottom handle and lift the B/C.
At the same time, gently pushing the push points.
(Separate the B/C from bottom to top direction)
(first lower side, and then the upper side.)

* If push with strong force from left side, Side Latch will break.

Step1) Lower Right(Left) Side

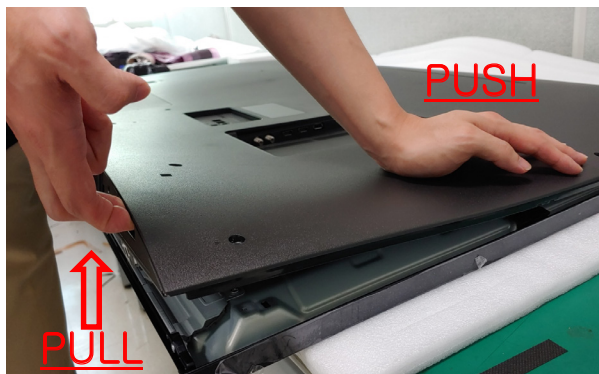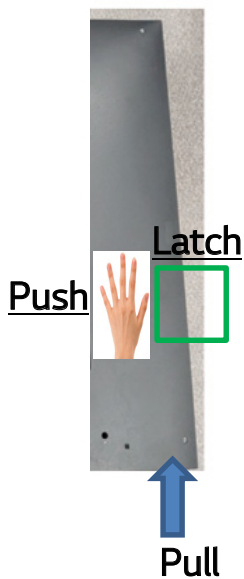


Step2) Upper Right(Left) Side

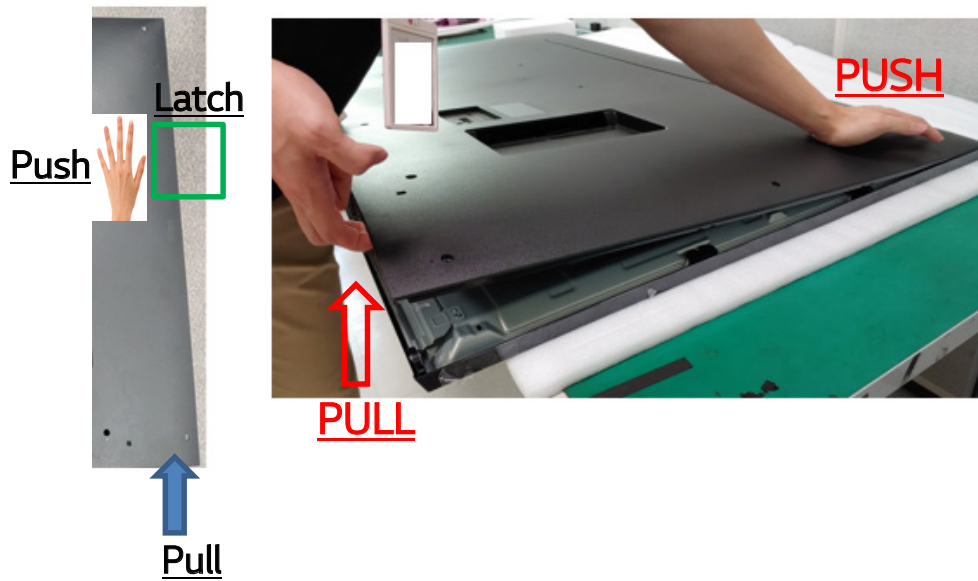


* After holding the mark(O) and lift the bottom of the B/C, push the B/C in the upward direction .

* Caution : Latch can be separated on the top position, don't pull it hard for upward. Latch can be have damage.
Must be refer to disassembly Video

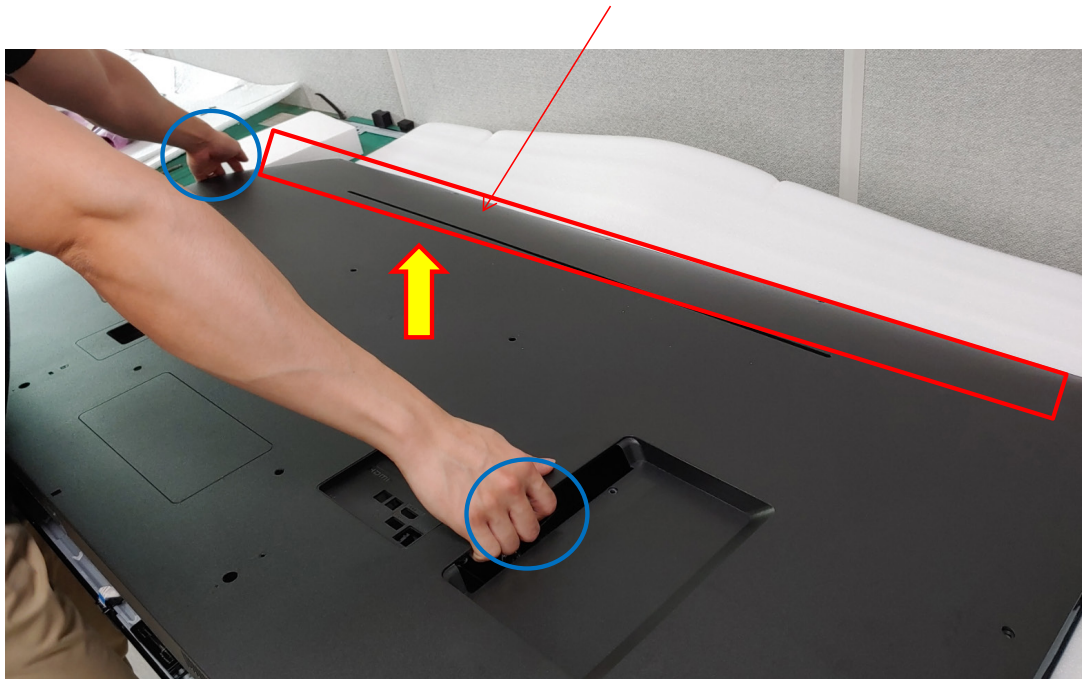


2. Detach Tape.

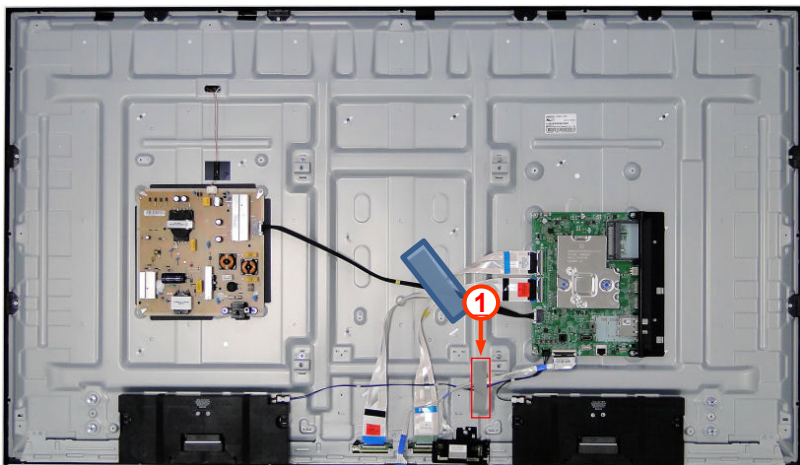


None Use


3. After Screw Disassemble, please remove IR&WIFI bracket and Harness.

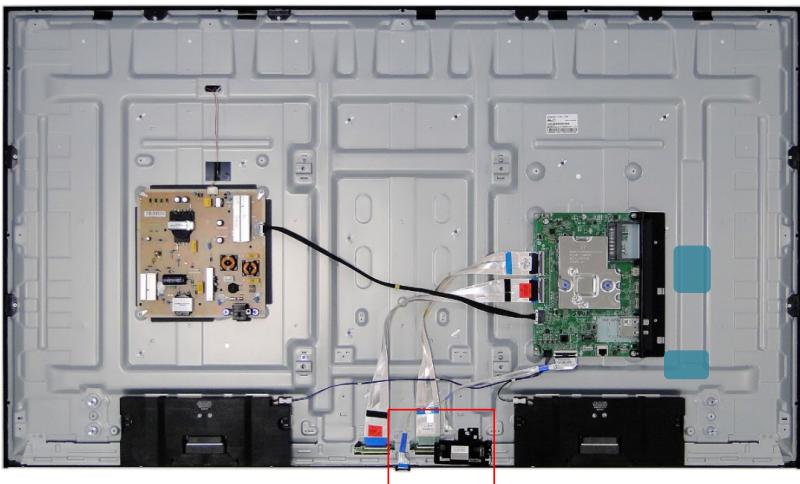


② Screw 1EA(M3*5.5)

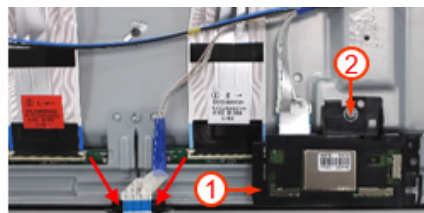

4. Remove all sort of cable

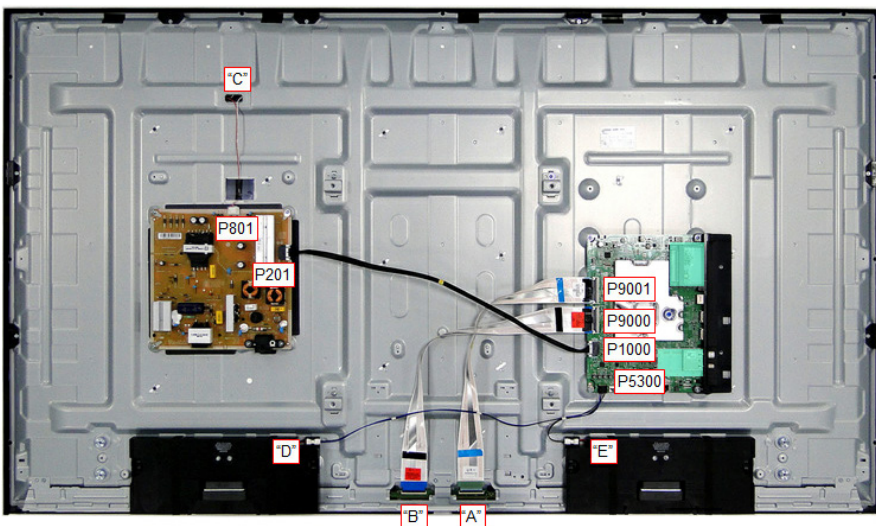


5. After Screw Disassemble, remove POWER / MAIN PCB.

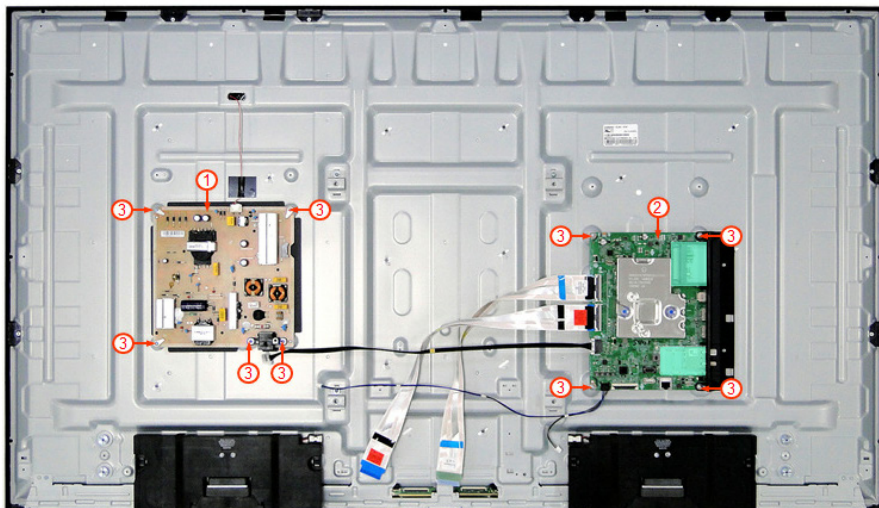


③ Screw 9EA(M3*5.5)

***SCREW TORQUE**
NO3 SCREW : 5 ~ 7Kgf.cm

6. Remove Speaker.

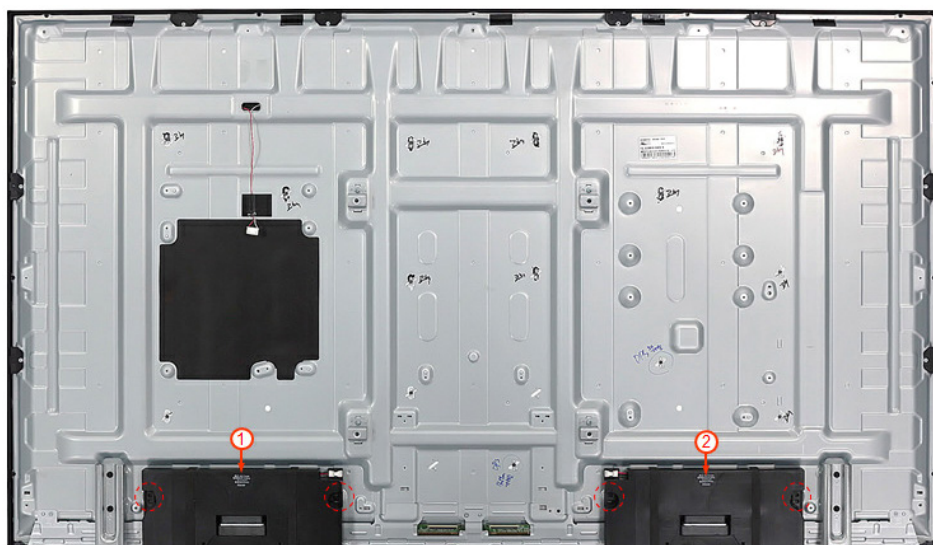

7. After Screw Disassemble, remove the Vesa SUPPORTER and 2Pole Supporter.

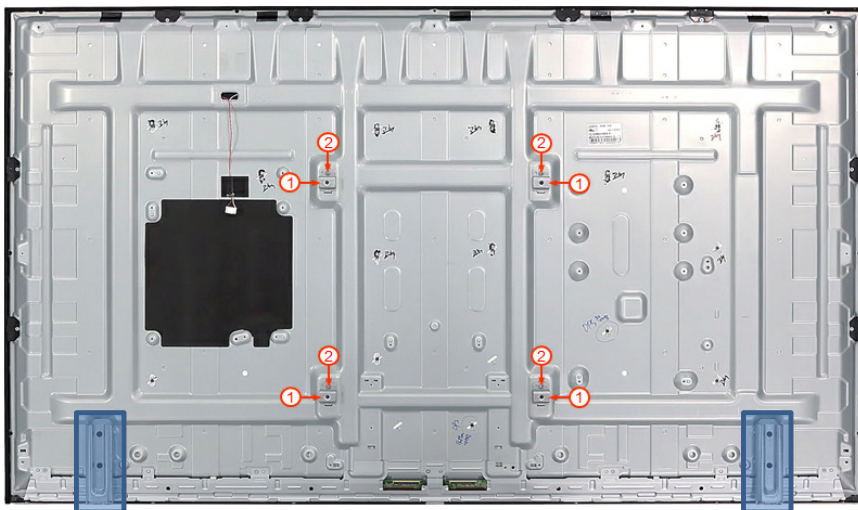

② Screw 4EA(M3*5.5)

*SCREW TORQUE


NO2 SCREW : 5 ~ 7Kgf.cm

NO4 SCREW : 8 ~ 12Kgf.cm




None Use

8. Remove Insulator


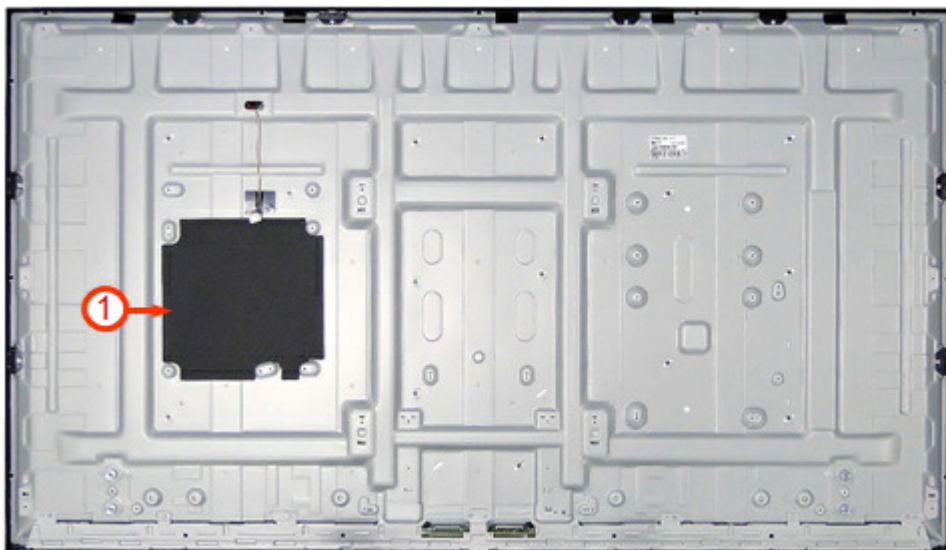


■ Assemble

1. Attach the INSULATOR.

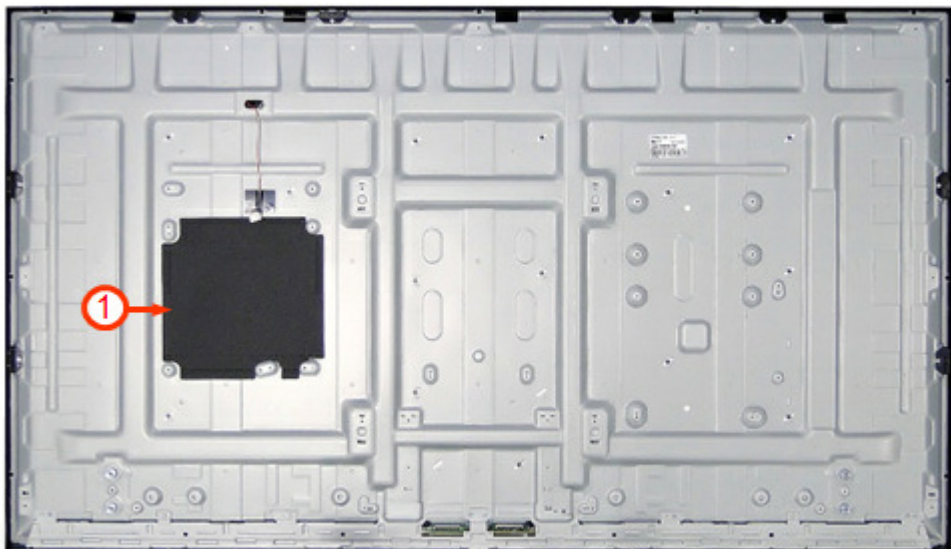

2. Assemble/Fix the Vesa SUPPORTER.

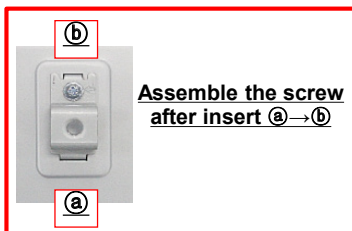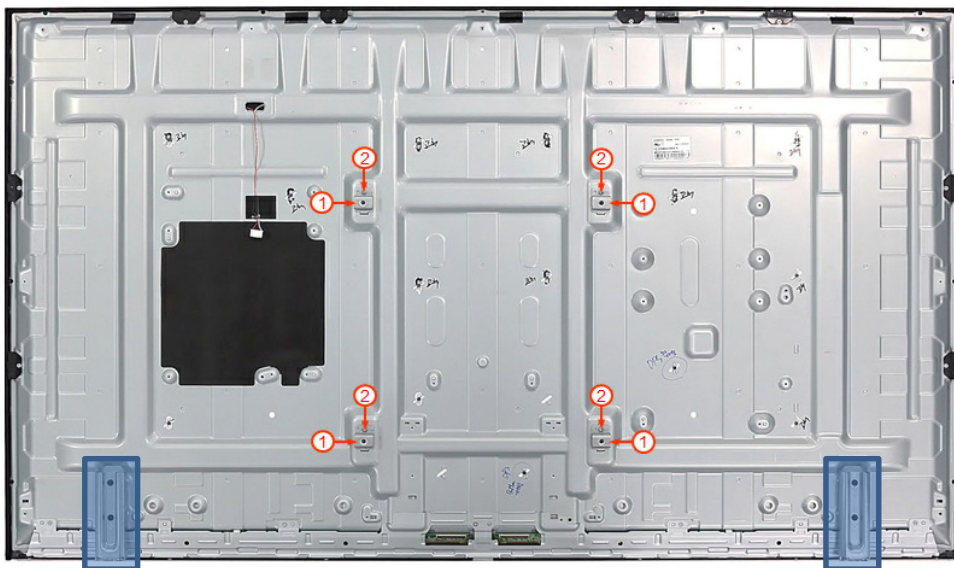


② Screw 4EA(M3*5.5)

***SCREW TORQUE**
NO2 SCREW : 5 ~ 7Kgf.cm



None Use


3. Assemble SPEAKER.

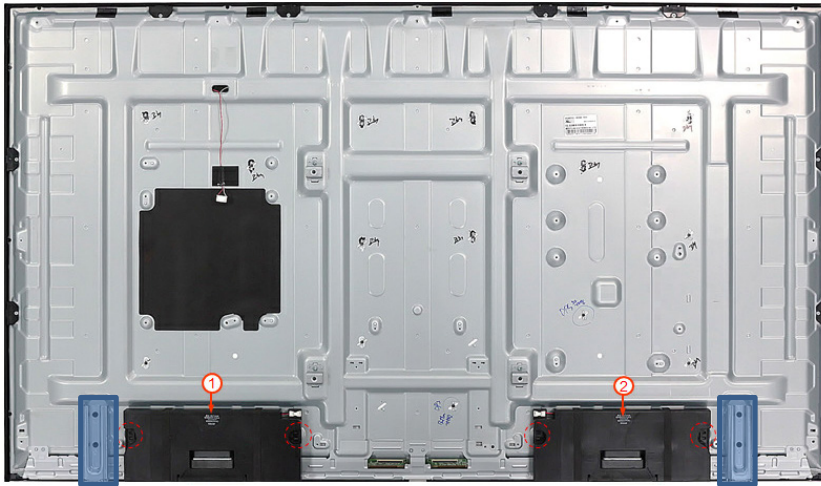

Press the  edge of mark rubbing it using palm to insert Rubber

 None Use


4. Assemble/Fix the POWER / MAIN PCB.

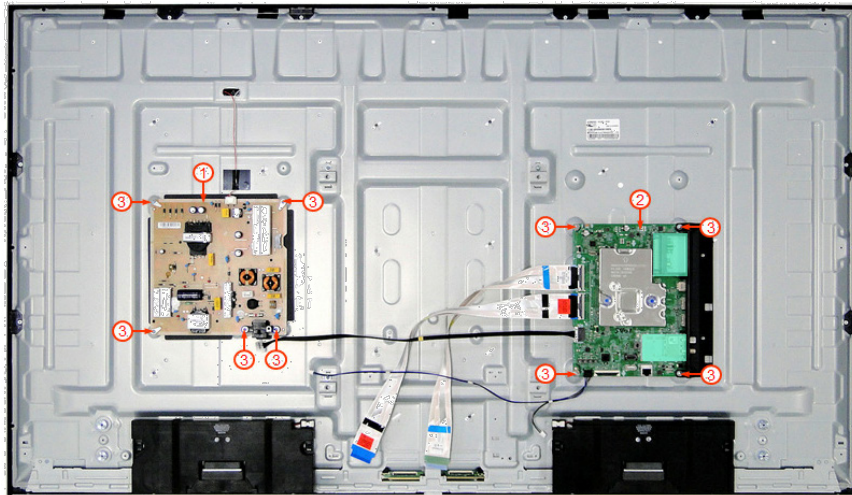

③ Screw 9EA(M3*5.5)

*SCREW TORQUE
NO3 SCREW : 5 ~ 7Kgf.cm


5. Insert the HARNESS

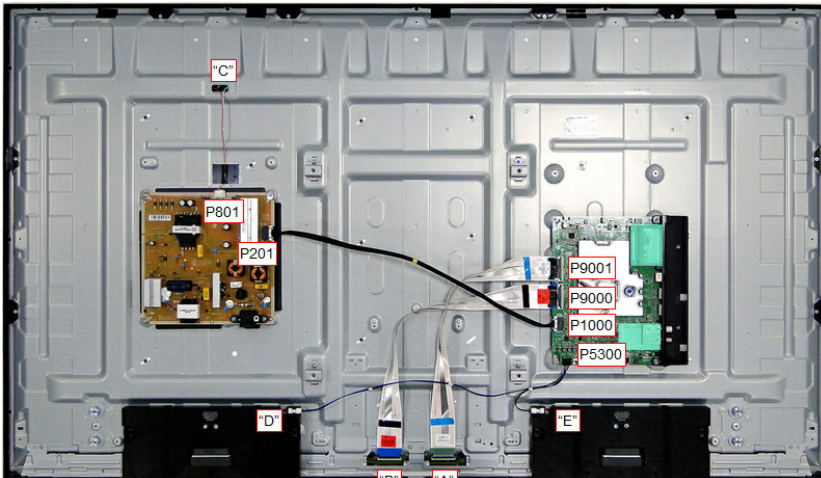

1.Insert the HARNESS

- 1) MAIN P9101 -> MODULE "A"
- 2) MAIN P9100 -> MODULE "B"
- 3) MODULE "C" -> POWER P801
- 4) MAIN P1000 -> POWER P201
- 5) MAIN P5300 -> SPEAKER "D"
SPEAKER "E"

6. Assemble /Fix the IR&WIFI BRACKET and HARNESS

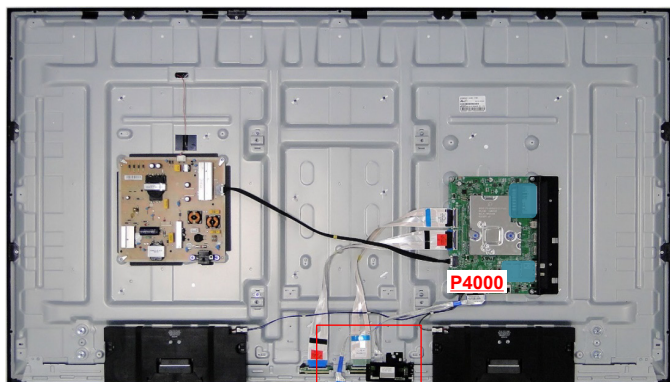


② Screw 1EA(M3*5.5)


*SCREW TORQUE
NO2 SCREW : 5 ~ 7Kgf.cm

* Insert the HARNESS

1)BRACKET HARNESS -> MAIN P4000

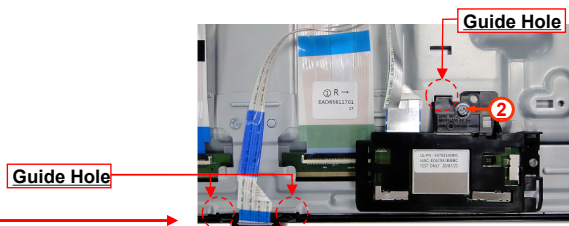


7. Arrange the harness[Attach the Tape]

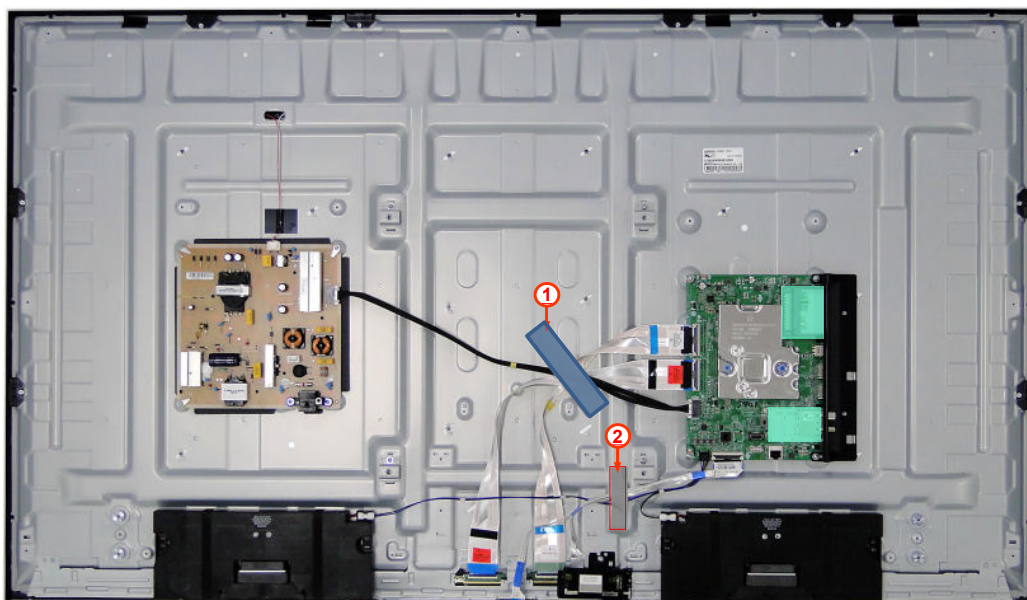

None Use

8. Assemble/Fix the COVER Assy., REAR

Press the  edge of mark rubbing it using palm to insert CLIP.

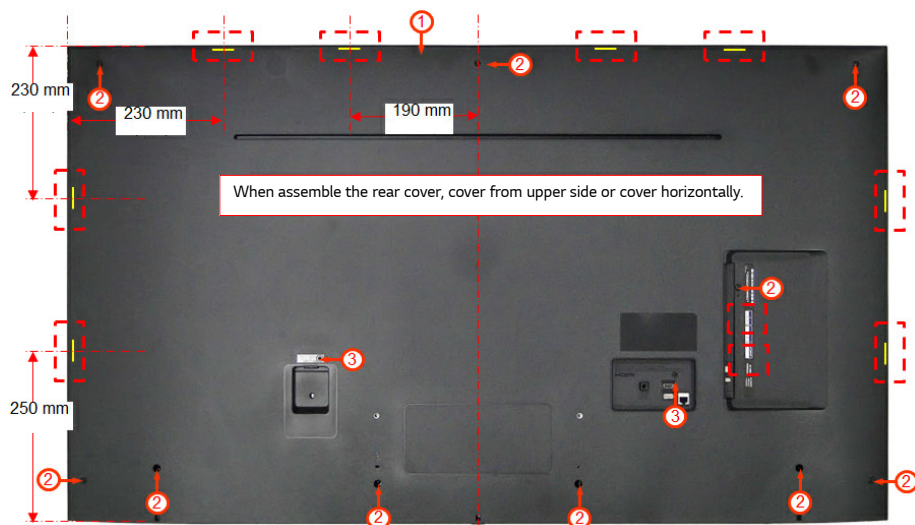

② Screw 10EA(M3*5.5)

③ Screw 2EA(P4*10)

*SCREW TORQUE
NO2, 3 SCREW : 5 ~ 7Kgf.cm



※ Caution
Latch is not assembled properly.
If the latch is not assembled properly,
the latch must be pressed again.

ASSEMBLY / DISASSEMBLY GUIDE (MODULE)


■ LCM Service Assembly / Disassembly Guide

(1) LCM status


- Panel face on flat surface LCM located to floor (such as a table where the entire outside of C/Top can be supported)



(2) Disassemble SPCB Cover shield screws 5ea. (Use General Screw Driver)

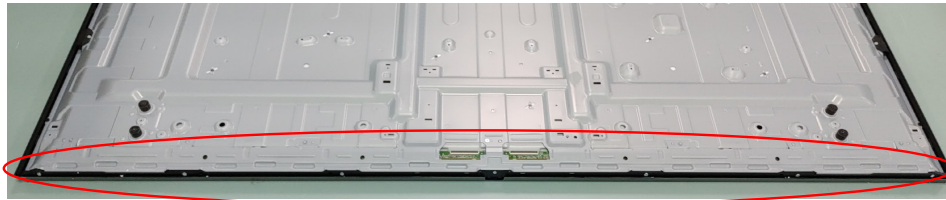


(3) Disassemble the screw, and then move each SPCB cover field L/R upward to disassemble it.

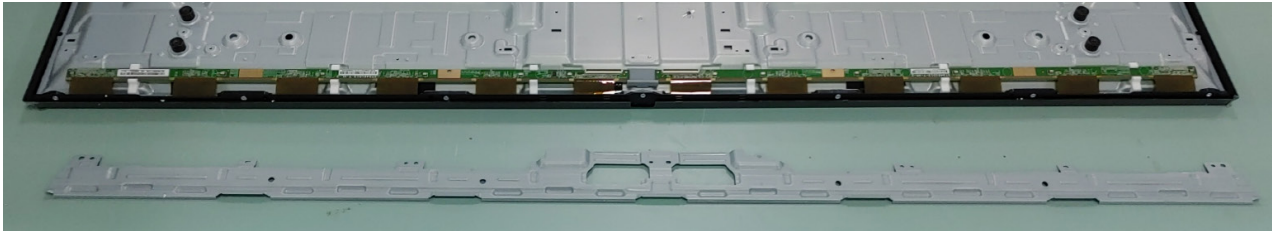

(4) Loosen the Guide Panel tightening screw.(Guide Panel Back 3-sided)

- Screw Spec : M3*5.0mm Tapping Screw(BLACK)
- Location : Up(5ea)/Left(3ea)/Right(3ea)
- Driver : Normal size screw TIP Driver is available.

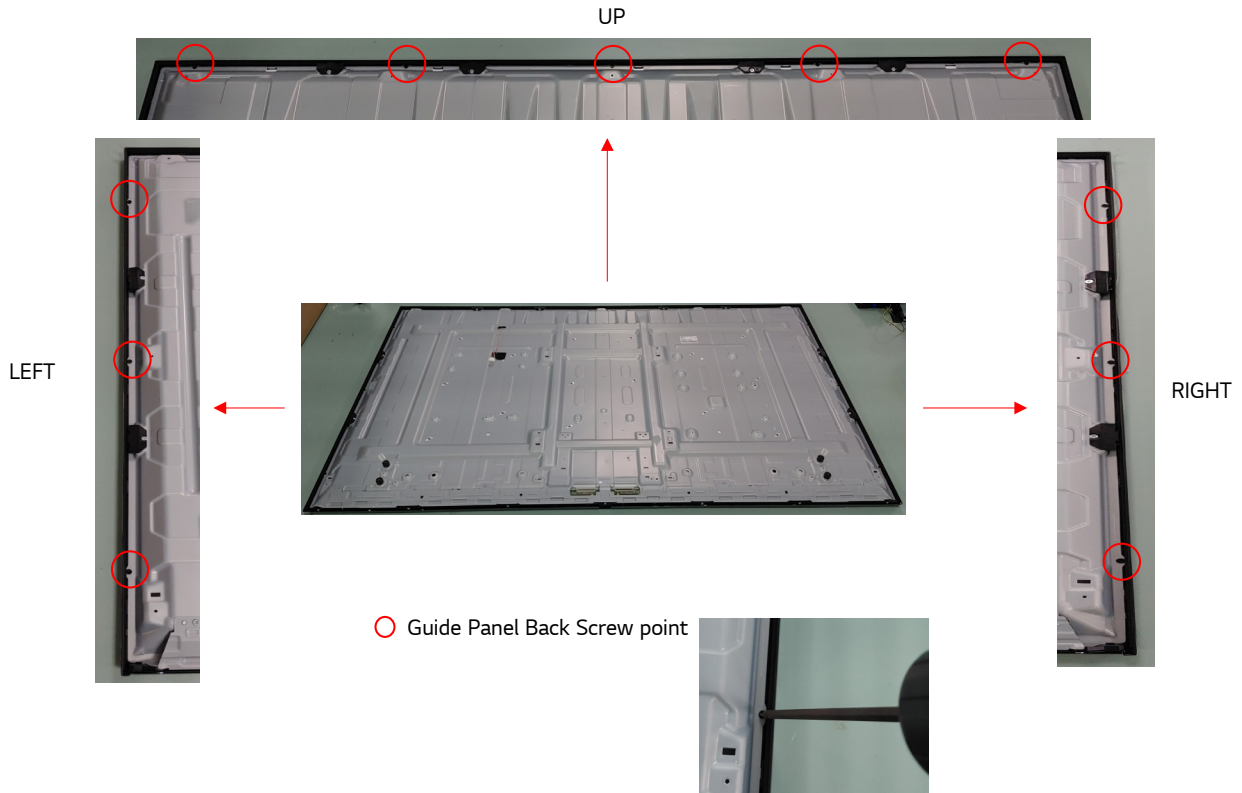



(5) Disassemble 7screws on the lower side of the C/top.

- Screw Spec: M3*8 (Silver)
- Driver : Normal size screw TIP Driver is available.




(6) Disassemble Panel SPCB L/R from the SPCB Holder.

- Grasp the top side of the SPCB and pull it to release the top side hook of the holder, and then disassemble the SPCB from the bottom side of the hook of the holder.

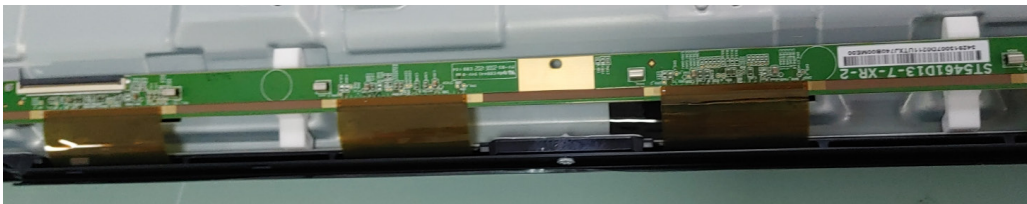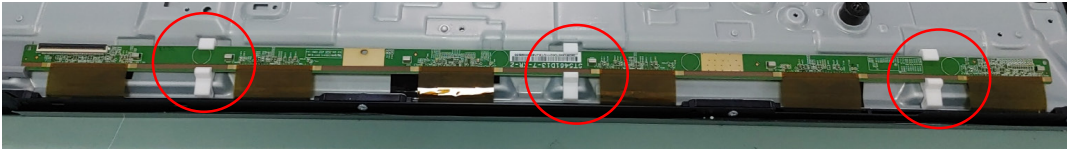

(7) Reverse LCM.

- Must be worked more than two people, one on the left and one on the right side with both hands reverse 180 degrees.

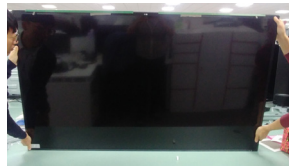


(Case Top down Screw already released, so be caution Case top down falling when Reverse LCM)

(8) Case Top Down release


- Disassembly horizontally side direction



(9) Release sequence : Right UP Corner Hook → UP Hook → Left UP Corner Hook → Left Hook → Right Hook → Left Down (From outside to Inner) → Right Down (From outside to Inner)

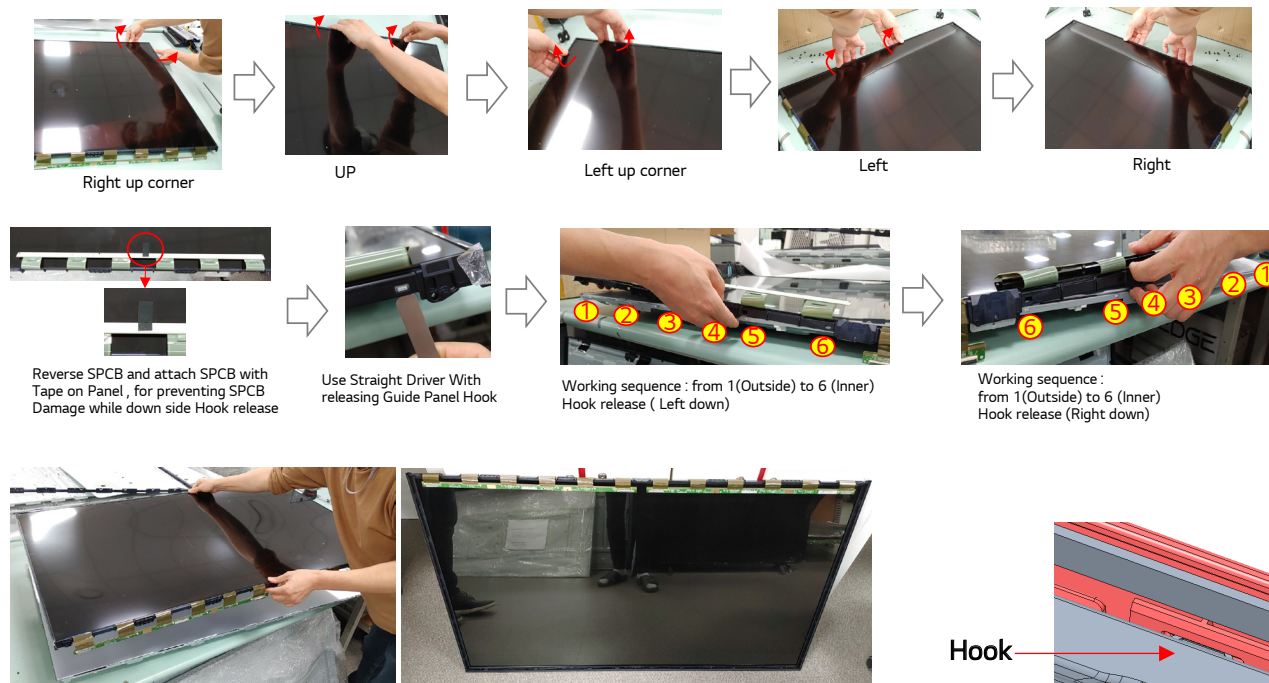


After Releasing Guide Panel all rounded hook,
Remove Guide Panel-Board assy with UP Direction

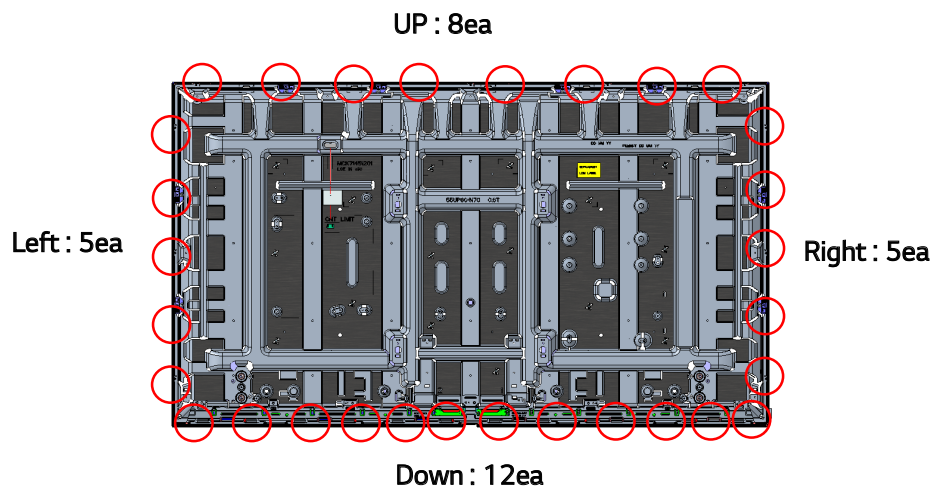



(10) Disassemble Sheet (1 sheet) and Diffuser Plate.

- Remove 1 sheets and one Diffuser Plate by lifting them at the same time.
- Assembly direction is divided by the chamfer shape of the Sheets/Diffuser Plate on the front left down side of SET. (other than that, the corners are Rounded)

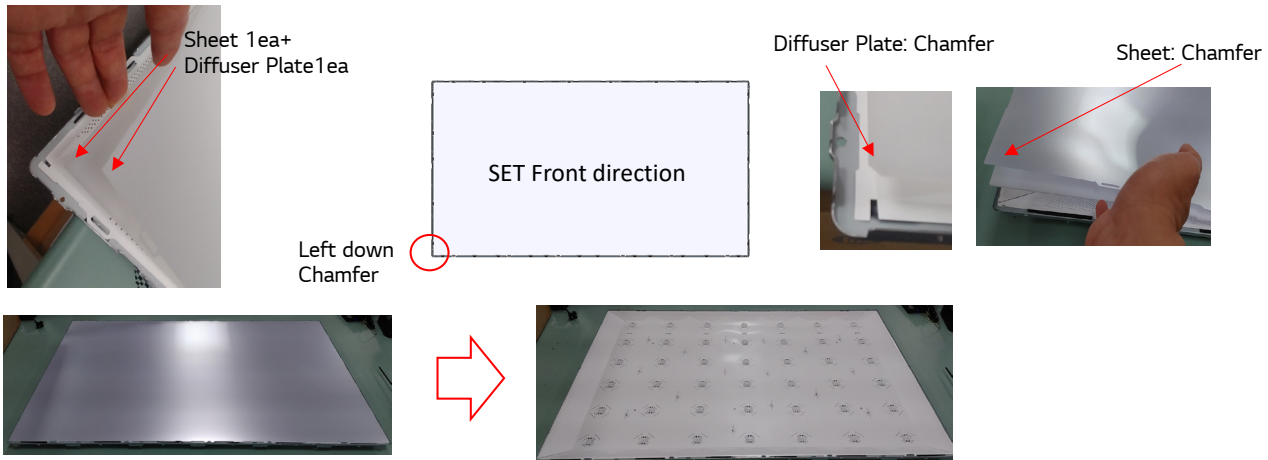


(11) Disassembly of 16 Support Diffuser Plates.

- Rotate the Support DP counterclockwise 45 degrees to align it to the assembly hole and lift it upwards to disassemble. (Total 16 EA)

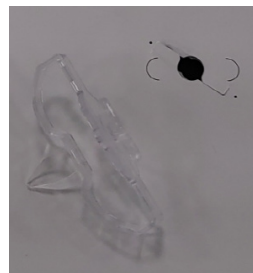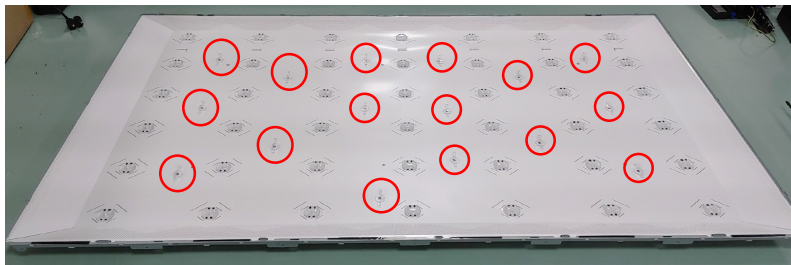





(12) Disassemble the Reflector Sheet.

- As the reflector hole is fixed to the lens, disassemble the reflector by release the the fixation of lens from the end on the right.

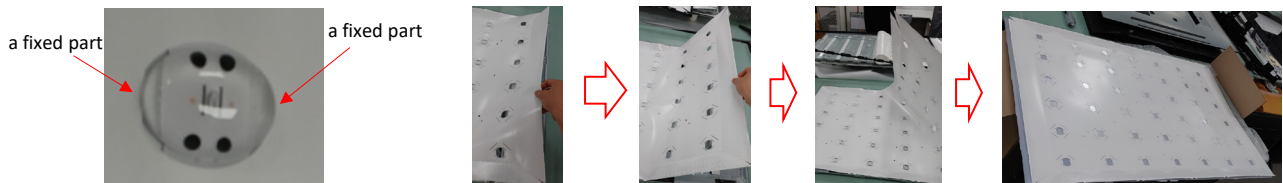

(13) Release the Led array connector.


- Press the left/right locking part of the wire connector at the same time and lift it up and release it. (Total 7 EA)

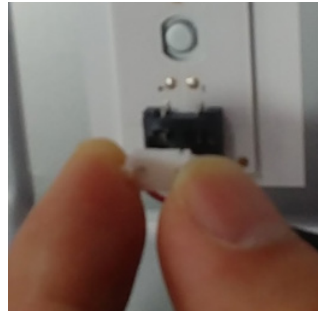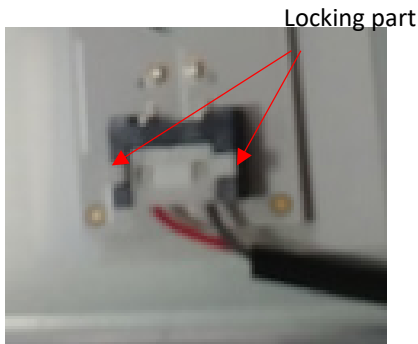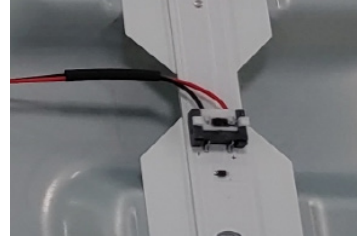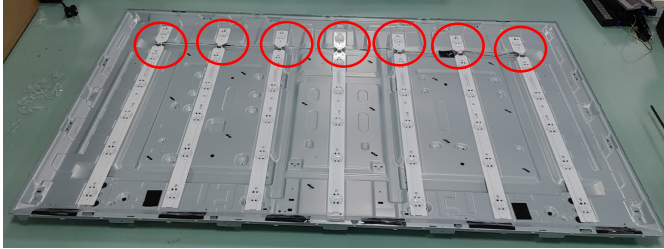

(14) Disassemble the Led Array and Attach the New Led Array.


- Disassemble the Led Array Bar (Led Array and Cover Bottom are fixed with two-sided tape, so use appropriate force to cover the Led Array.
Take it off and attach a new Led Array.

(15) Assembly of the Led array connector- Attach the connector on the wire ass'y by pushing it upward and downward.

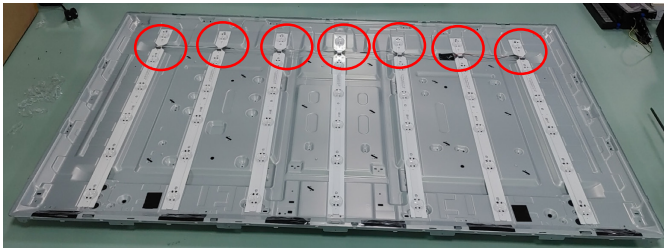



(16) Attach the reflector sheet.

- Check Down side Sheet hanger position.

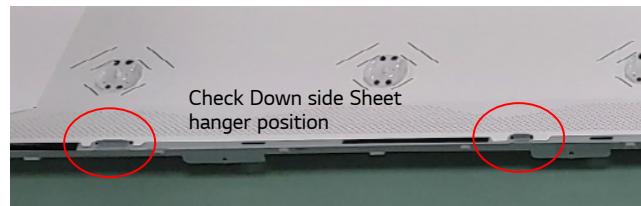


(17) Position the Reflector sheet

- Align the reflector with the reflector guide hole at 6ea locations on the center/bottom of the reflector and assemble two support plates first.

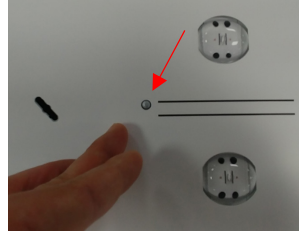
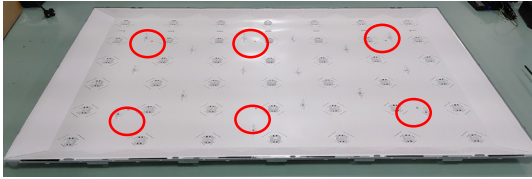


(18-1) Fixing the Reflector Lens Hole


- Tighten the reflector hole to the lens in order of No. 1 → 2 → 3 → 4 in the figure below. (Use Card or nail to insert the reflector sheet into the bottom of the lens.)
It is recommended to push the reflector sheet into the bottom of the lens using tools such as a card, as it may be difficult to tighten when using nails

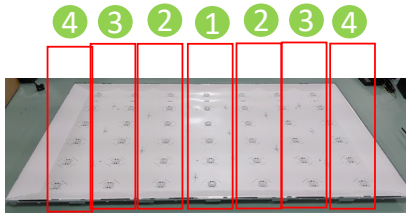

Using tools

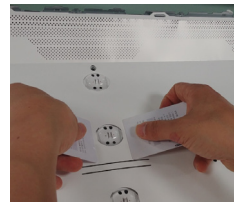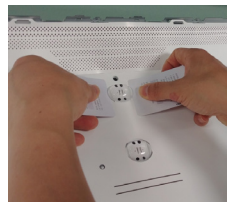


Using nails

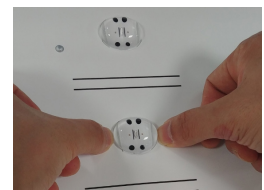


(18-2) Assembly of 16 Support Diffuser Plates

- Insert the Support DP into the Support DP Hole on the Cover Bottom and rotate it clockwise 45 degrees (total 16ea), After assembly, the Support DP is vertical Position to the LCM.

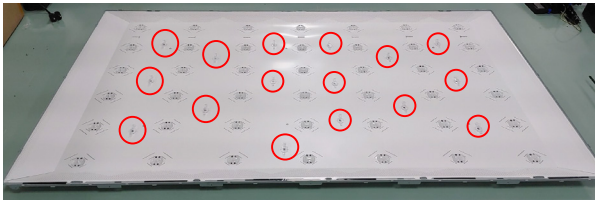

(19) Assembly of Sheet (1 sheets) and Diffuser Plate

- Place 1 sheets + 1 Diffuser Plate on top of Cover Bottom
- Assemble the sheet shape (Chamfer) on the front left side of the SET.

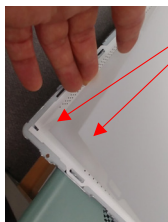

Sheet 1ea+
Diffuser Plate 1ea



The Left down
Chamfer




Diffuser Plate: Chamfer



Sheet: Chamfer

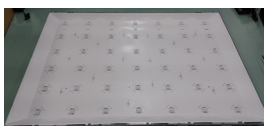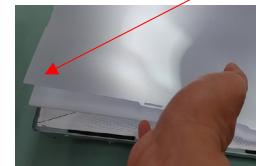


- Precautions: Check that the sheet hanging hole on the upper/lower/left/right outer is properly seated on the cover Bottom Sheet hanging.

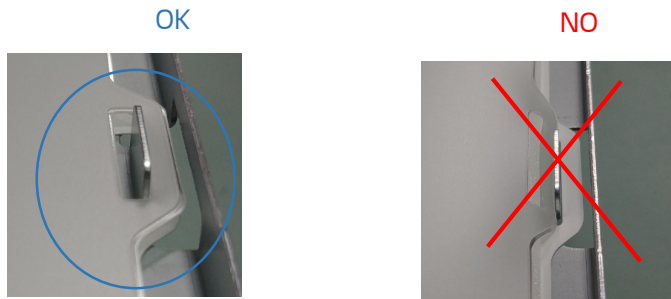

(20) Assembly the Guide Panel

- Press the guide panel 4 side down in the upper and lower direction in line with the cover Bottom face to tighten it, and then tighten it in order of 2 and 3.
- Check Hook fastening. (Gap of Sheet and guide panel)

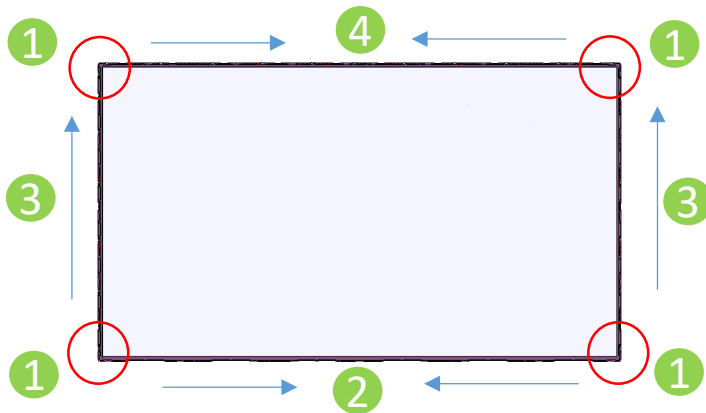


(21) Case Top Down assembly

- Insert Side direction.



(22) C/Top Lower side Screw 9ea assemble

- Screw Spec: M3*8 (Silver)
- Driver : M3 Screw Module Driver available.
- * Caution : While Screw assembly, be care SPCB COF damage from driver Tip.




(23) Reverse LCM.

- Must be worked more than 2 people, one on the left and one on the right side with both hands reverse 180 degrees.




(24) Assemble the Panel SPCB L/R to the SPCB Holder.

- First, enter the upper part of the holder and then press the lower part of the holder to tighten the SPCB.

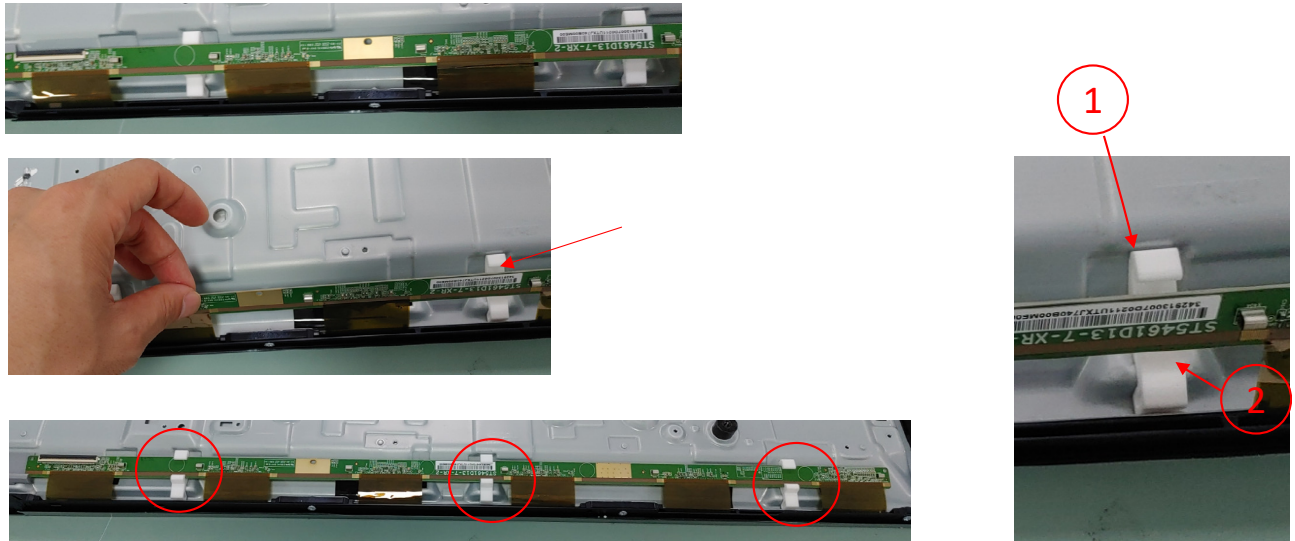


(25) Assembly the Guide Panel tightening screw.(Guide Panel Back 3-sided)

- Screw Spec : M3*5.0mm Tapping Screw(BLACK)
- Location : Up(5ea)/Left(3ea)/Right(3ea)
- Driver : Normal size screw TIP Driver is available.

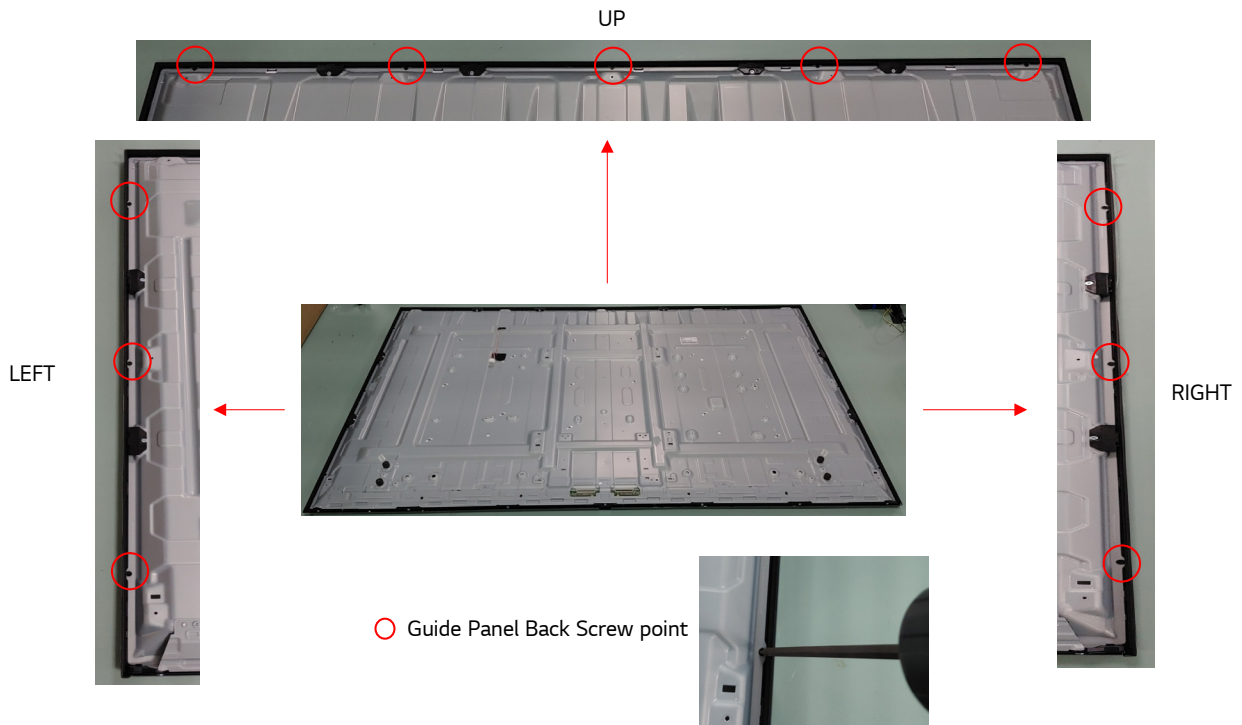

(26) Assemble SPCB Cover shield to Cover Bottom.

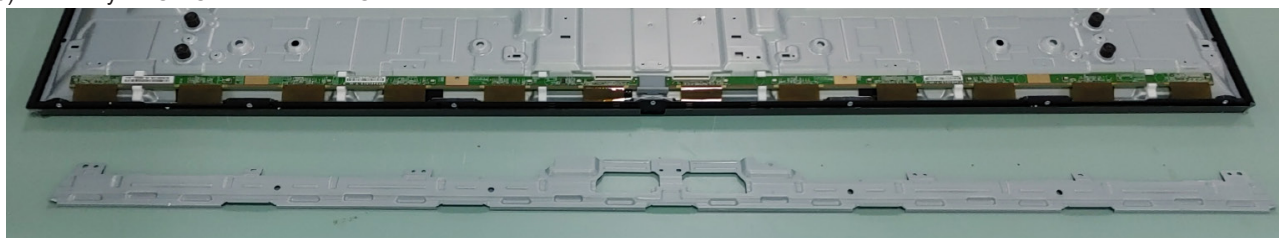

(27) Assemble SPCB Cover shield screws 5ea. (Use M3 Screw module Driver)




M3 Screw 5ea

FINISH



■ LED Array disassemble

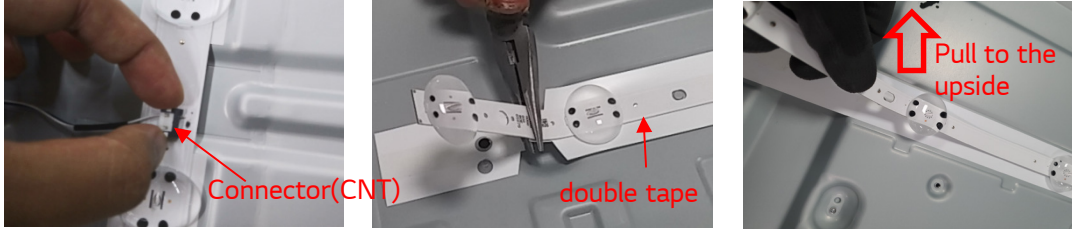

- (1) Disassemble the CNT form LED Array.
 - (2) Separate the LED Array from Cover Bottom.
 - (3) Remove the double tape form Cover Bottom.
- * After removing LED array once, You should not use it again.


■ LED Array assemble

Step 1. Attach the Double Tape.



- (1) Attach the double tape to the round hole on Cover Bottom embo.
 - (2) Remove the protect film of Double Tape with taking off the handler.
- * Required LED Array Quantity : 7 EA

Step 2. Attach the LED Array on the double tape.

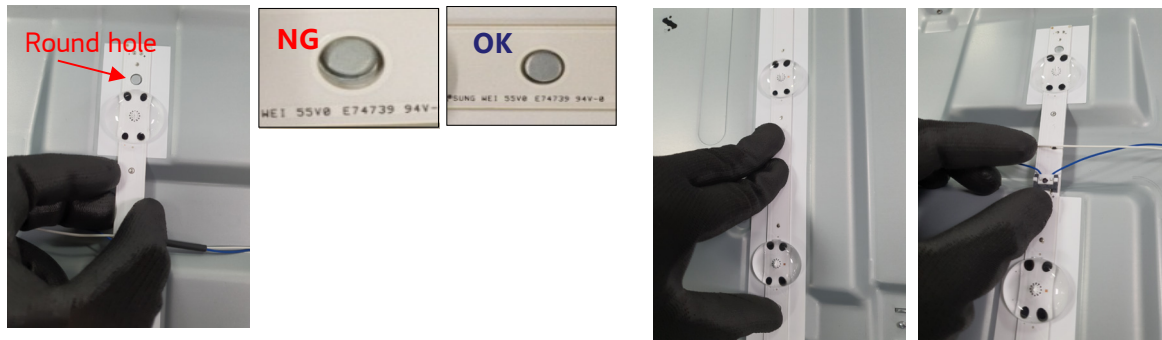

- (1) Attach LED Array to the round hole on Cover Bottom embo.
- (2) Press LED Array on the surface of Cover Bottom.
- (3) Connect the CNT to the LED Array.



* Finish the Attached LED Array (7ea)

TROUBLE SHOOTING GUIDE


Contents of Standard Repair Process

No.	Error symptom (High category)	Error symptom (Mid category)	Page	Remarks
1	A. Video error	No video/Normal audio	1	
2		No video/No audio	2	
3		Picture broken/ Freezing	3	
4		Color error	4	
5		Vertical/Horizontal bar, residual image, light spot, external device color error	5	
6	B. Power error	No power	6	
7		Off when on, off while viewing, power auto on/off	7-8	
8	C. Audio error	No audio/Normal video	9	
9		Wrecked audio/discontinuation/noise	10	
10	D. Function error	Remote control & Local switch checking	11	
11		MR22 operating checking	12	
12		Wifi operating checking	13	
13		External device recognition error	14	
14	E. Noise	Circuit noise, mechanical noise	15	
15	F. Exterior error	Exterior defect	16	

First of all, Check whether there is SVC Bulletin in GSCS System for these model.

	Error symptom	A. Video error	Established date		
		No video/ Normal audio	Revised date		


**First of all, Check whether all of cables between board is inserted properly or not.
(Main B/D↔ Power B/D, LVDS or EPI or CEDS Cable, Speaker Cable, IR B/D Cable,,,))**

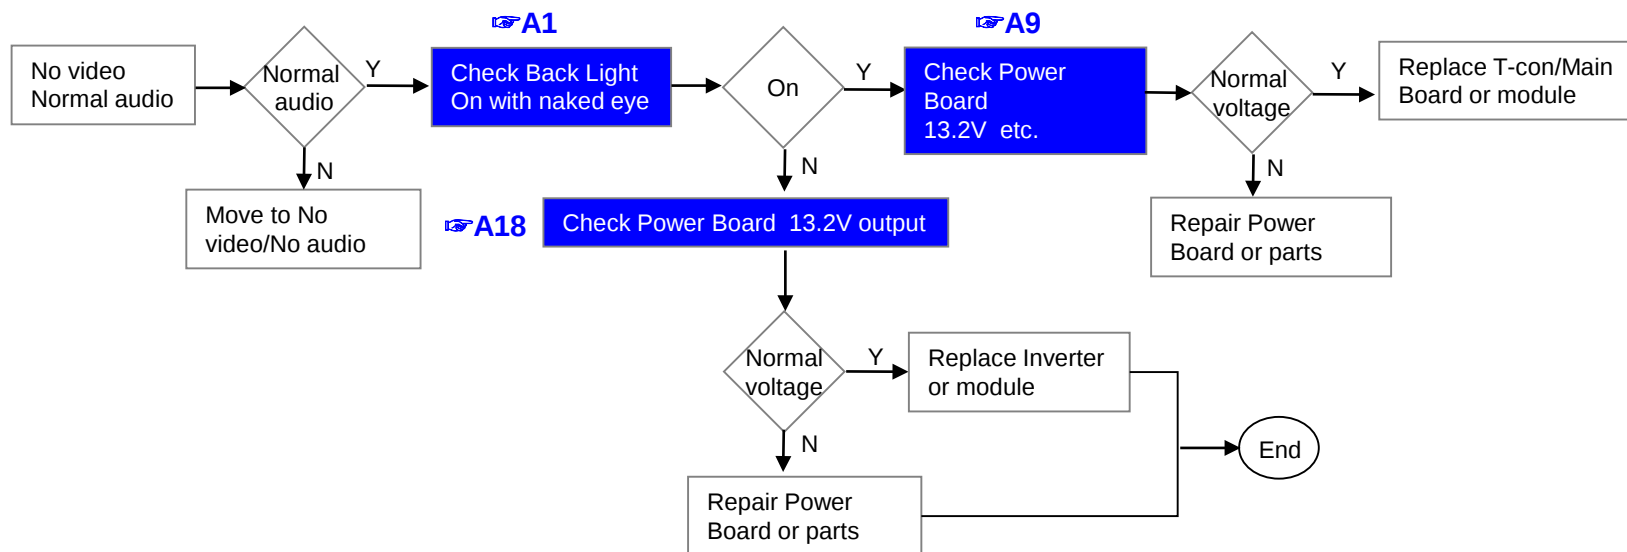

※Precaution A4 & A2



	Error symptom	A. Video error	Established date		
		No video/ No audio	Revised date		

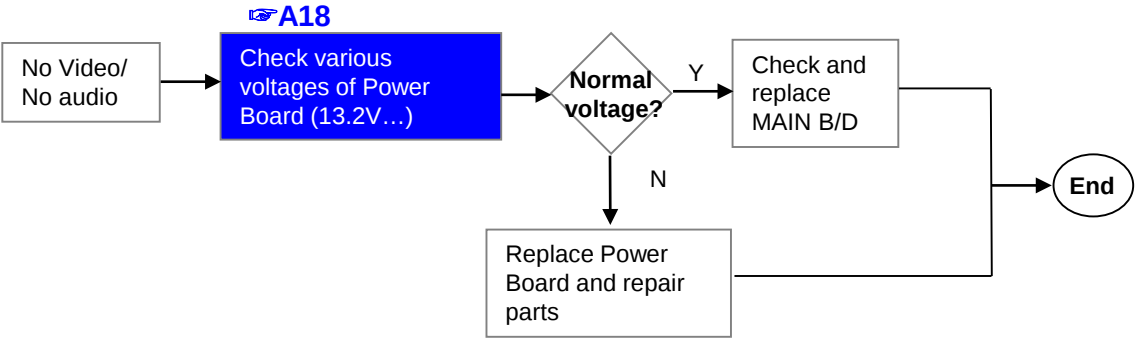


	Error symptom	A. Video error	Established date		
		Picture broken/ Freezing	Revised date		


 A3

Check RF Signal level

- . By using Digital signal level meter
- . By using Diagnostics menu on OSD
(Advanced → Channels → Channel Tuning → Manual Tuning → Check the Signal)
- Signal strength (Normal : over 50%)
- Signal Quality (Normal: over 50%)

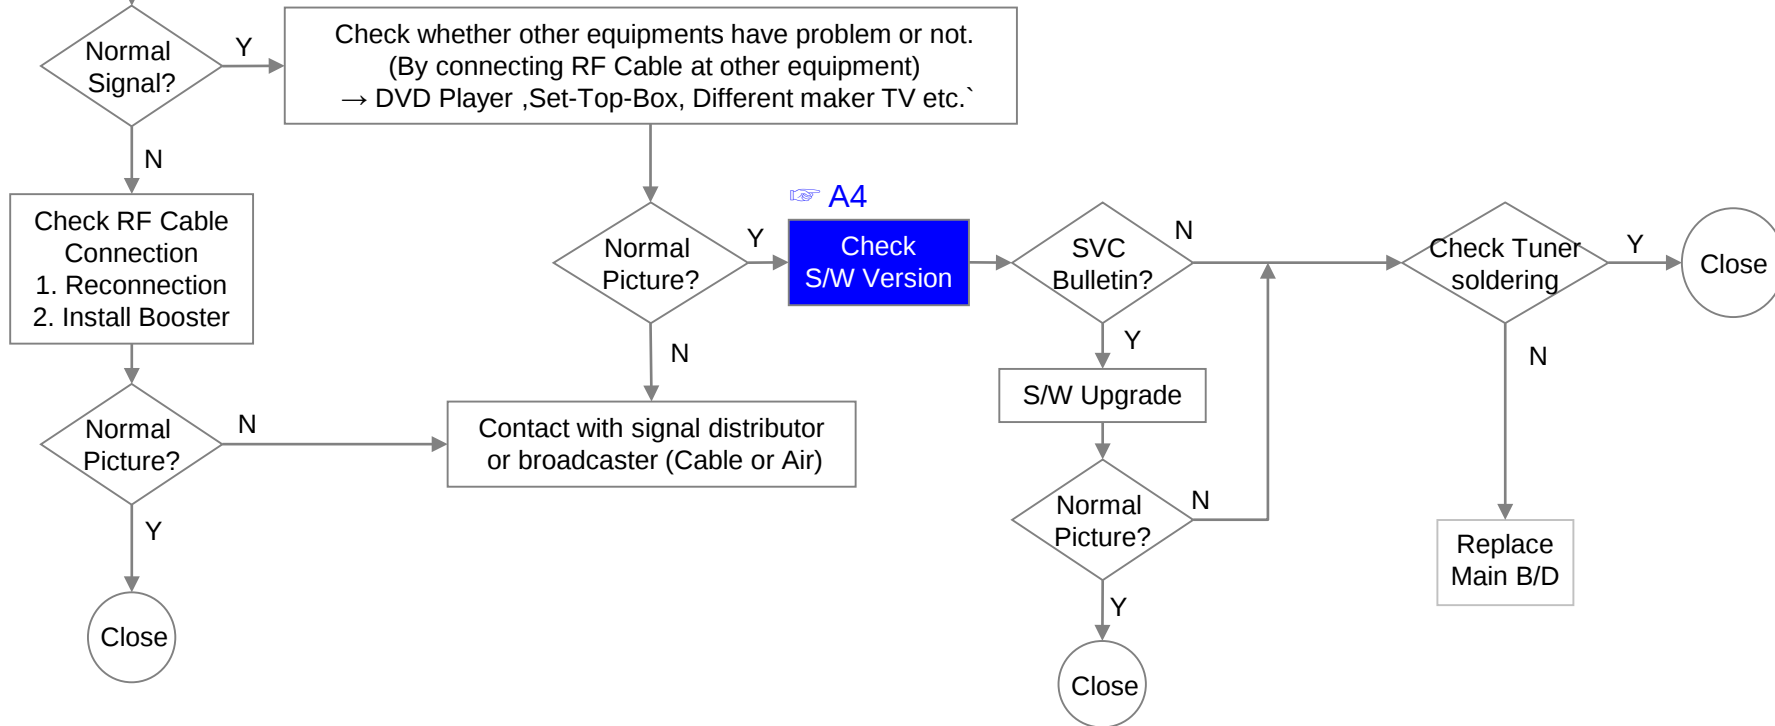

	Error symptom	A. Video error	Established date		
		Color error	Revised date		

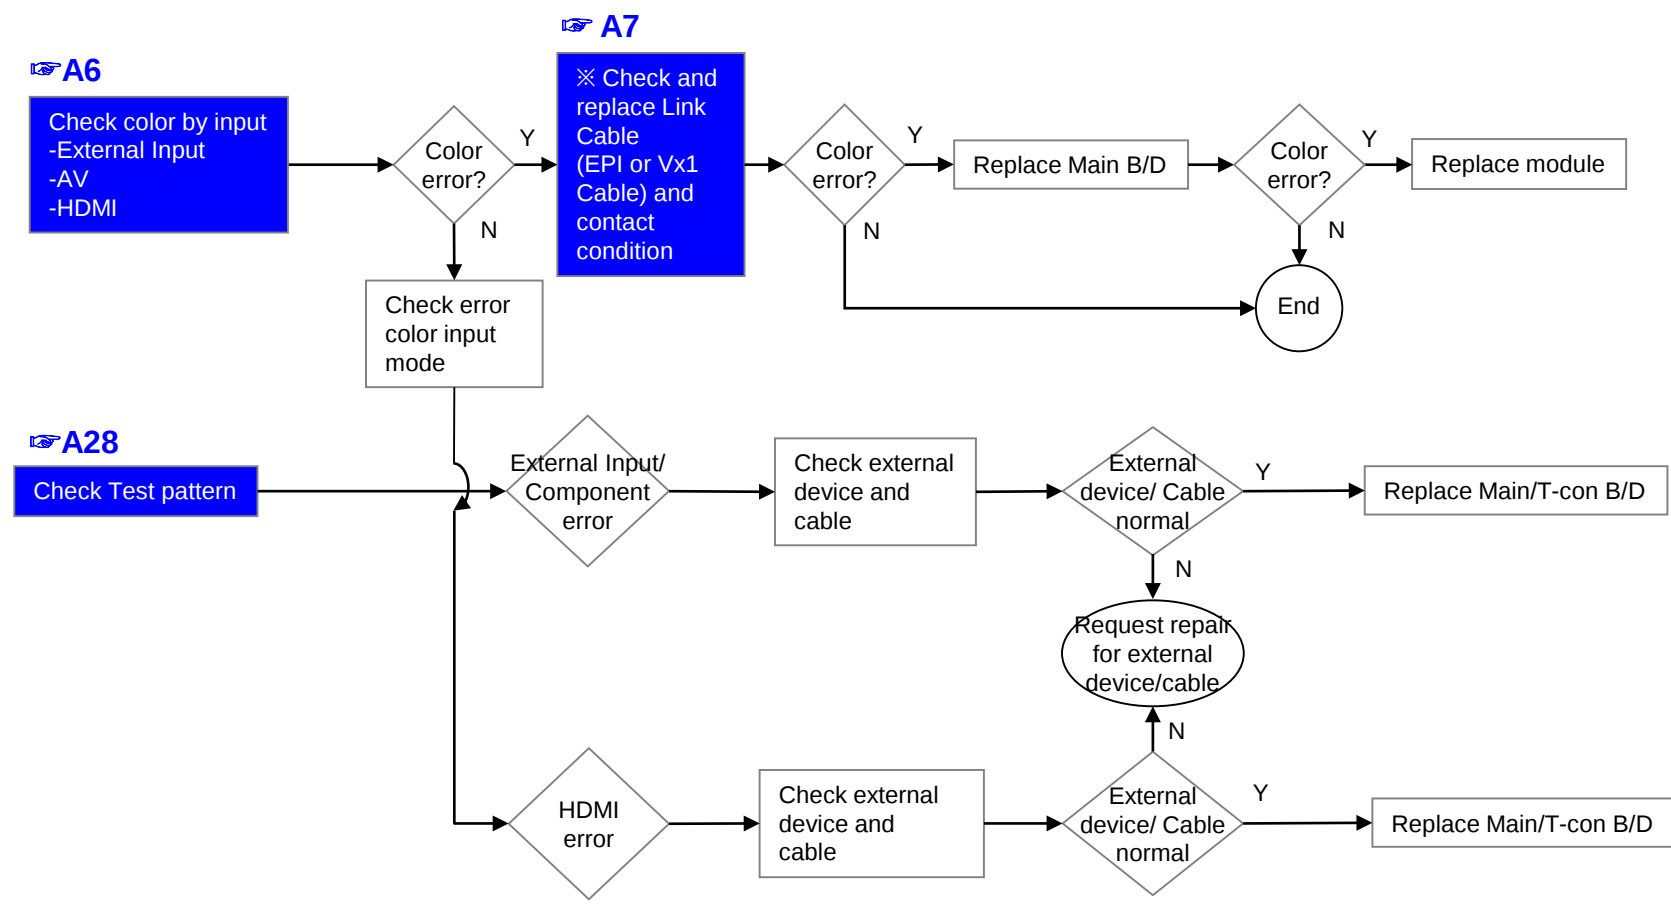


	Error symptom	A. Video error	Established date		
		Vertical / Horizontal bar, residual image, light spot, external device color error	Revised date		


Vertical/Horizontal bar, residual image, light spot

A6


Check color condition by input
-External Input
-HDMI

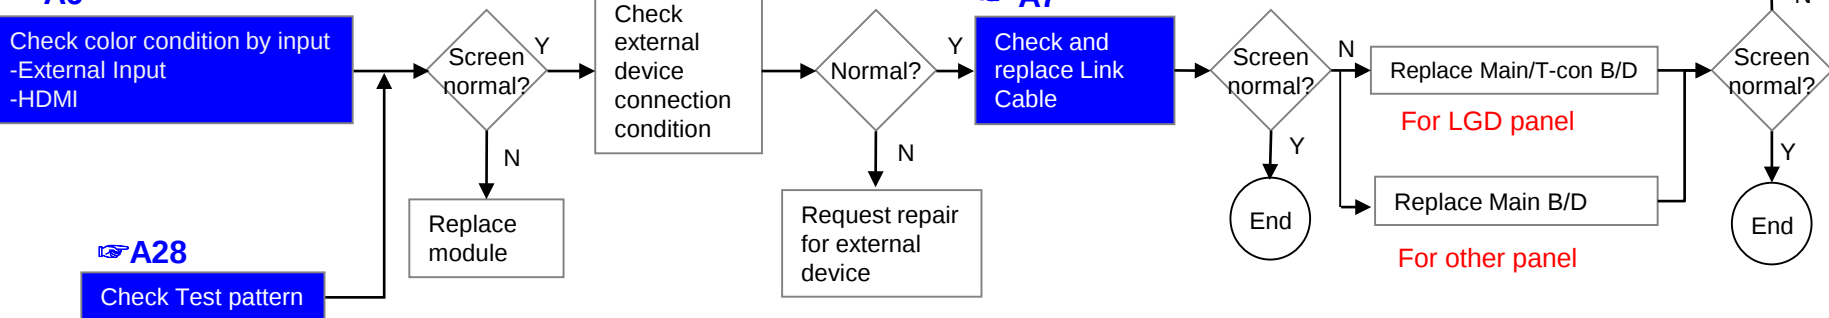


External device screen error-Color error

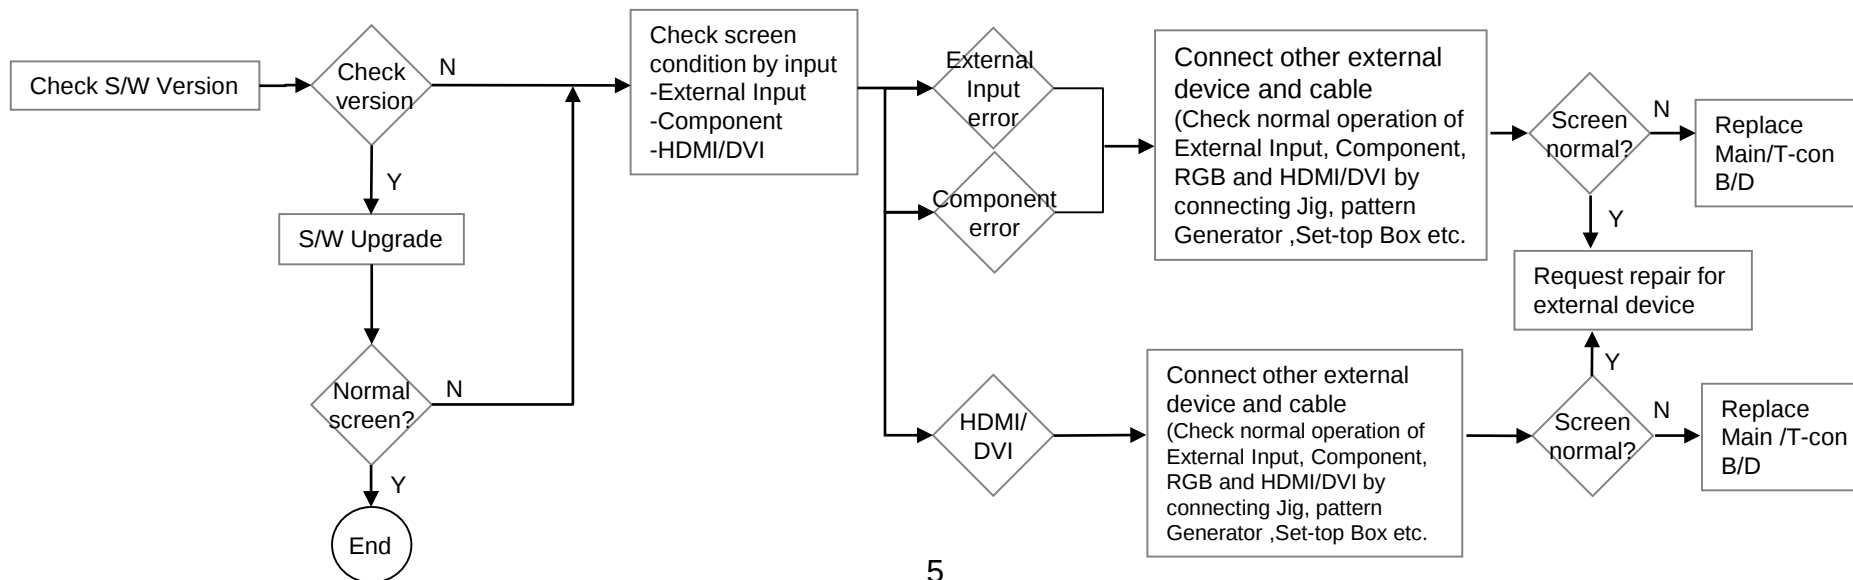

	Error symptom	B. Power error	Established date		
		No power	Revised date		

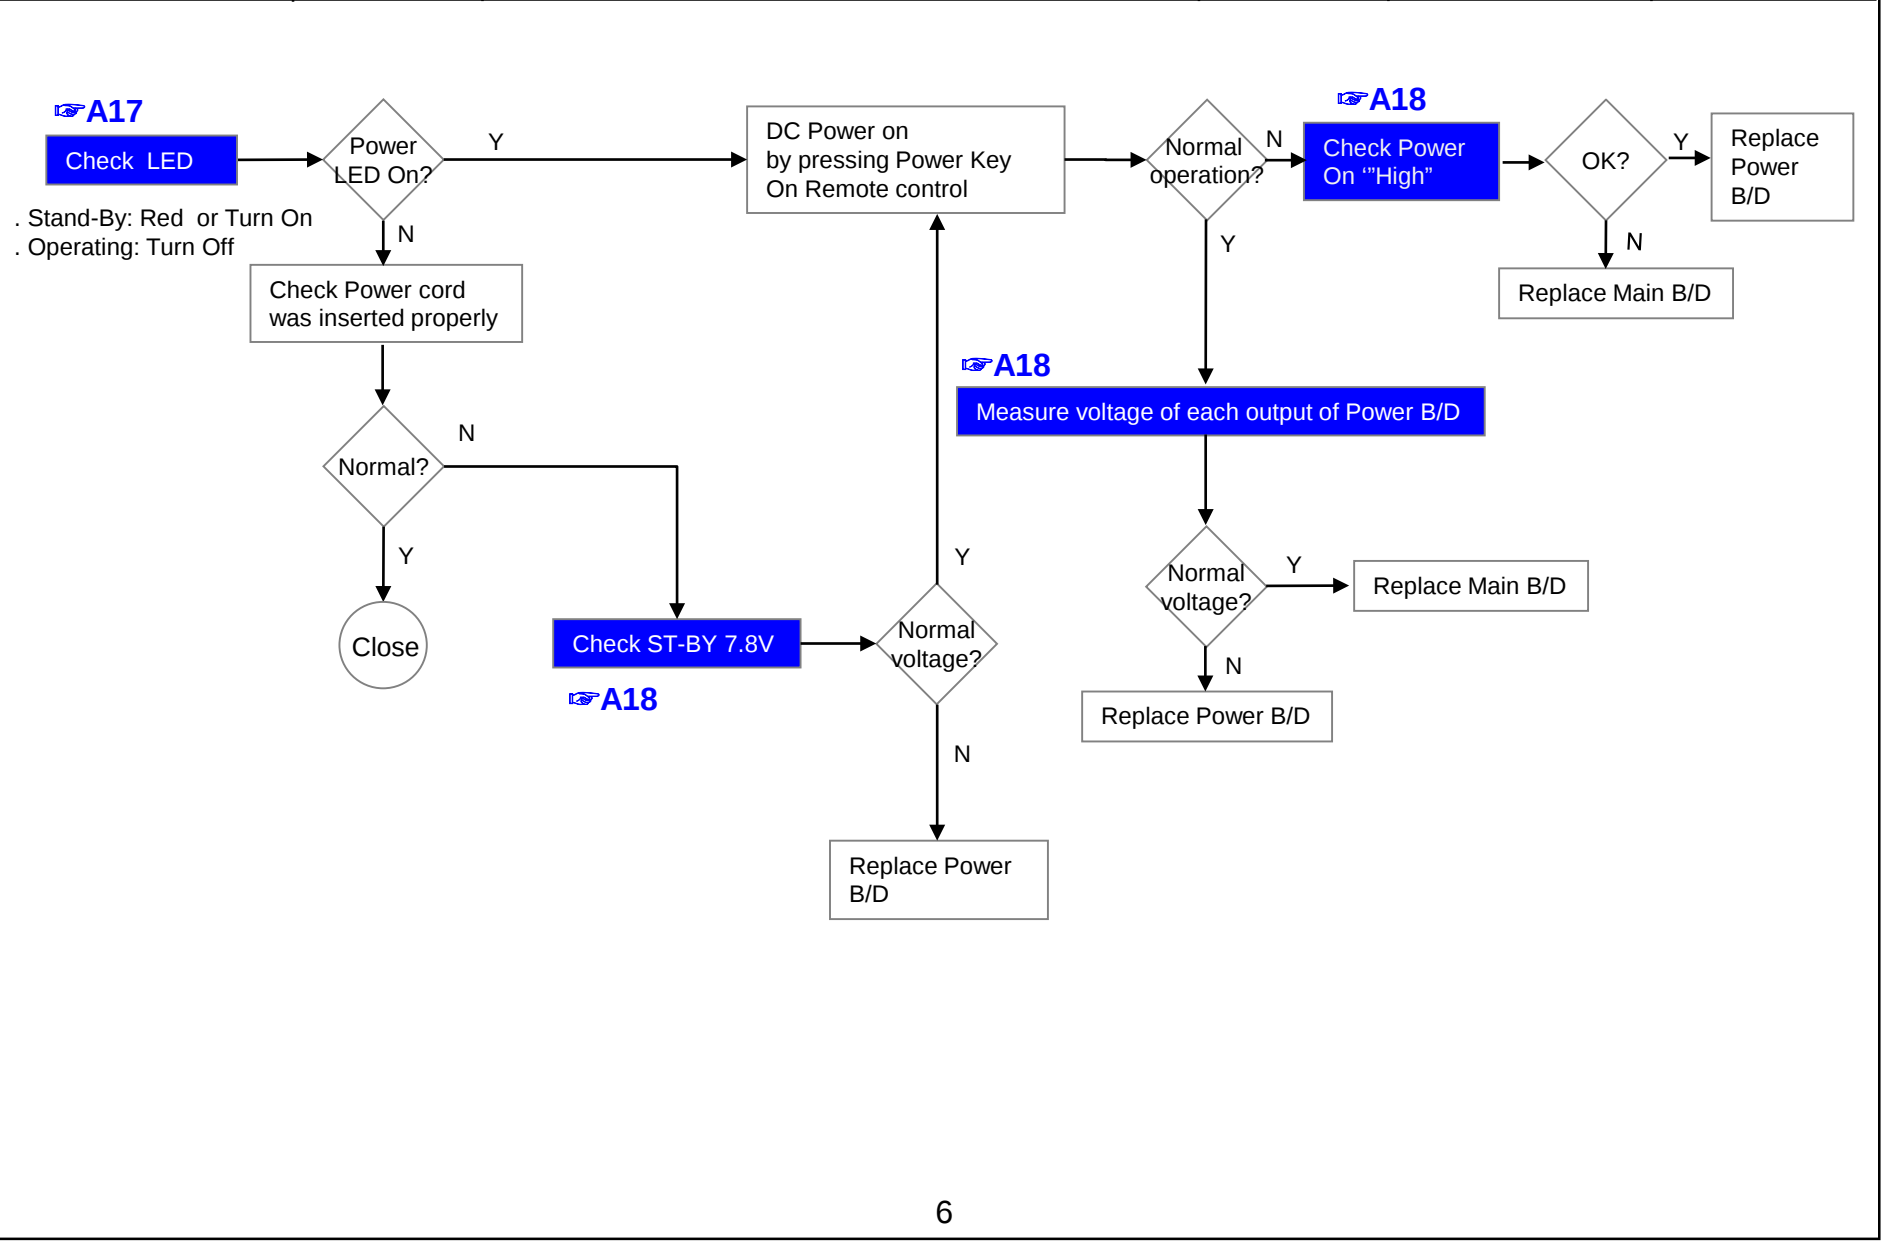

	Error symptom	B. Power error	Established date		
		Off when on, off while viewing, power auto on/off	Revised date		

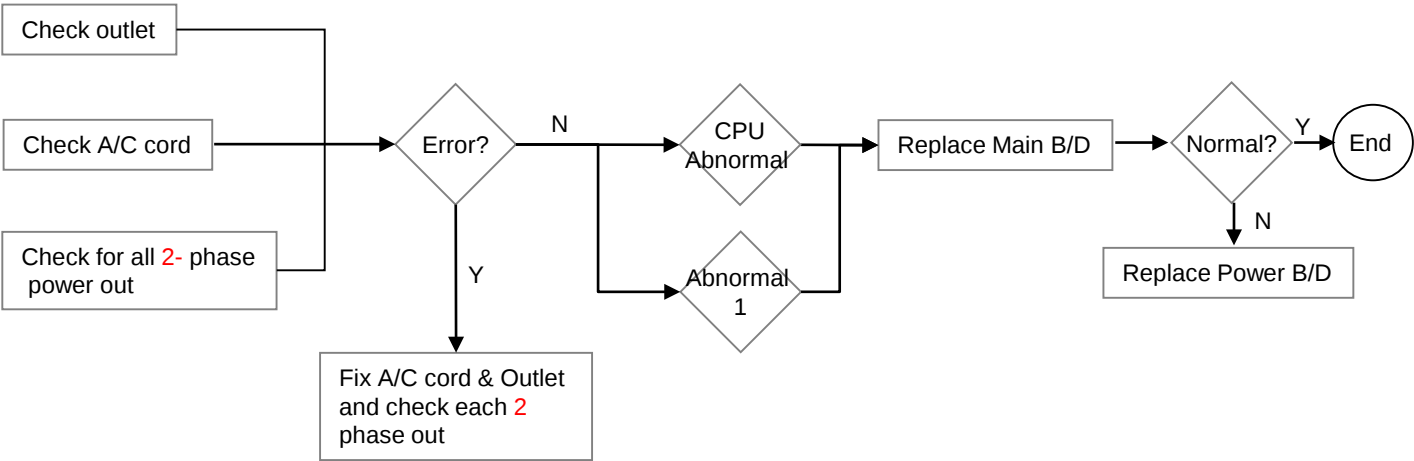


	Error symptom	B. Power error	Established date		
		Off when on, off while viewing, power auto on/off	Revised date		

* Please refer to the all cases which can be displayed on power off mode.


Power Off list	Explanation	Action contents
KEYTIMEOUT	Power off when TV is not turned off during a certain time RESULT : micom force to trigger TV power off. CONDITION : When pressing power key while power on/off status, CPU does not response within 8 seconds	Check & Change Main B/D
1SEC Power OFF	Almost the same as Power Off by KEYTIMEOUT. If there is no valid communication between CPU and MICOM for more than 5 seconds, the MICOM switches off PSU and Records. Power off by 1SEC Power off. In this case, we don't have information where the malfunction exactly occurred. But it indicates that CPU had stopped and rebooted.	Check & Change Main B/D
ACDET	In case of AC Off (It is normal when the power cord is unplugged.)	Normal
	If there are many ACDETs connected, Power Board is defective	Check & Change Power B/D
CPUABNORMAL	If the CPU attempts to reset in case of abnormal operation and Shut Down in case of failure.	Check & Change Main B/D
NO POLING	Power off when receiving no ack. RESULT : TV power off/on (Reboot) CONDITION : There is no I2C response from CPU for 15 seconds.	Check & Change Main B/D
CPUCMD	Power off by main SoC command.	Check & Change Main B/D
INV_ERROR	Power off by module error (OLED) CONDITION : OLED Module send signal to micom	Check & Change OLED Module
ONRF_FAIL	RESULT : Reboot, CONDITION : OLED module compensation is running but fails.	Check & Change OLED Module
PNWASHFAIL	Power off by panel noise wash function fail case.	Check & Change OLED Module
RESET	When Micom is reset by AC Off	Normal Case
KEY	Power off by Local key	
OFFTIMER	Power off by Off timer	
SLEEPTIMER	Power off by sleep timer	
NOSIG	Power off by No Signal	
FANSTOP	Power off by FAN operation stopped	
INSTOP	Power off by Instop Key	
AUTO OFF	Power off by auto off function	
RESREC	Power off by reserved recording	
RECEND	Power off when recording stops	
SWDOWN	Reboot by SW down load function	
UNKNOWN	No meaning (same as initial value)	
COMP_END	OLED threshold voltage degradation(Compensation) completes.	
PNWASHDONE	Power off by panel noise wash function completed. (OLED)	

	Error symptom	C. Audio error	Established date		
		No audio/ Normal video	Revised date		

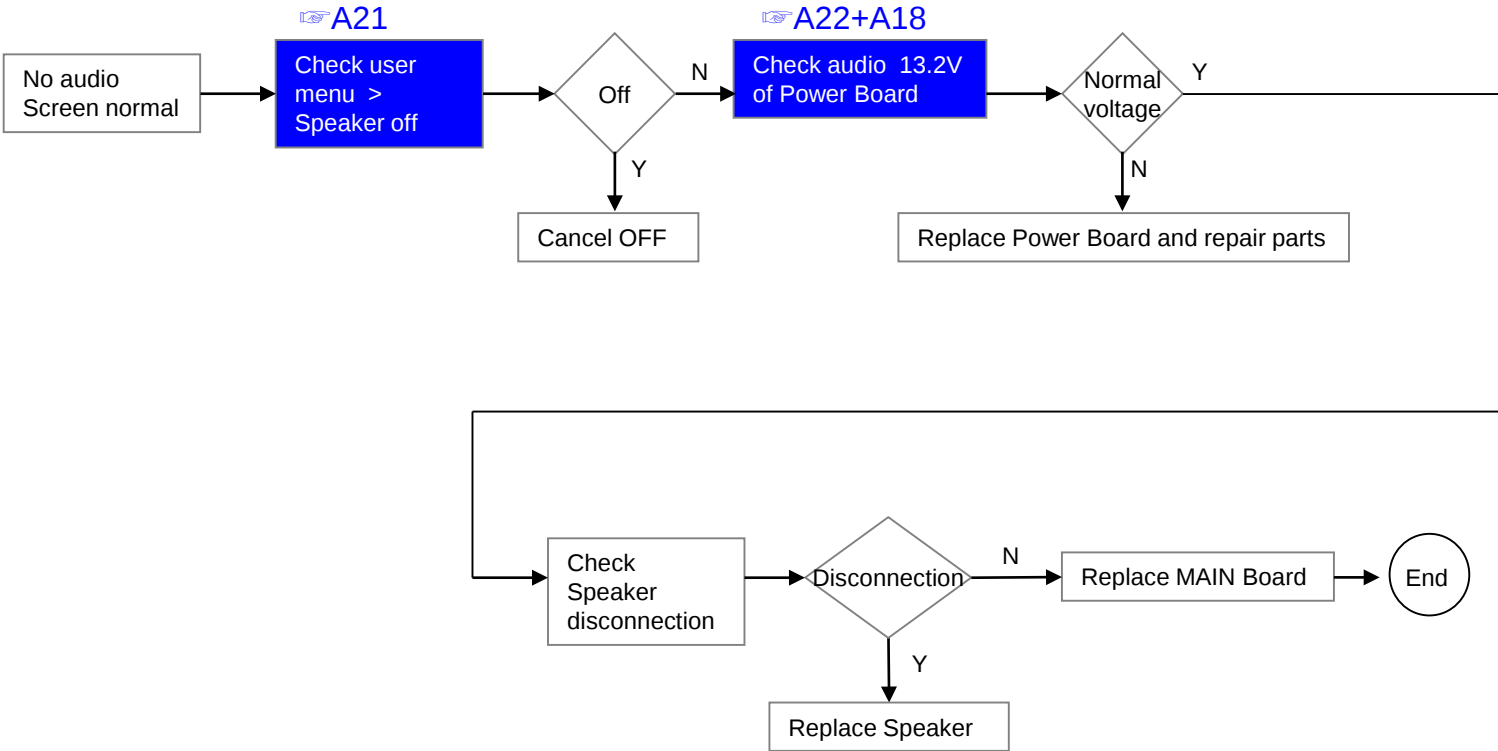


	Error symptom	C. Audio error	Established date		
		Wrecked audio/ discontinuation/noise	Revised date		

→ abnormal audio/discontinuation/noise is same after “Check input signal” compared to No audio

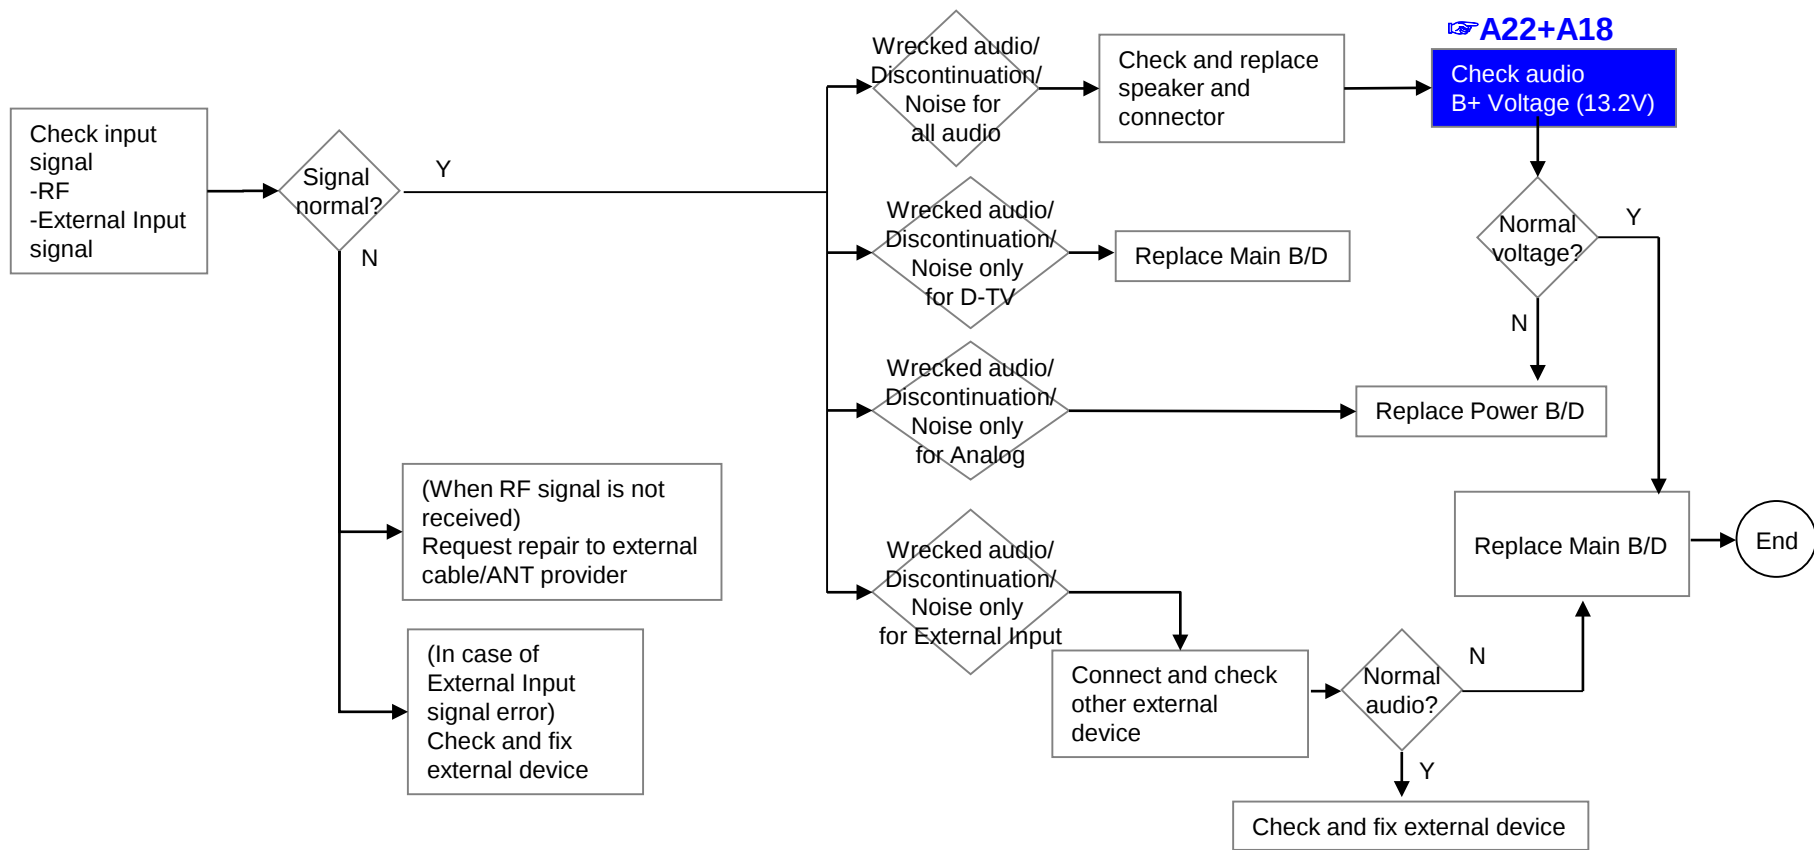


	Error symptom	D. Function error	Established date		
		Remote control & Local switch checking	Revised date		

1. Remote control(R/C) operating error

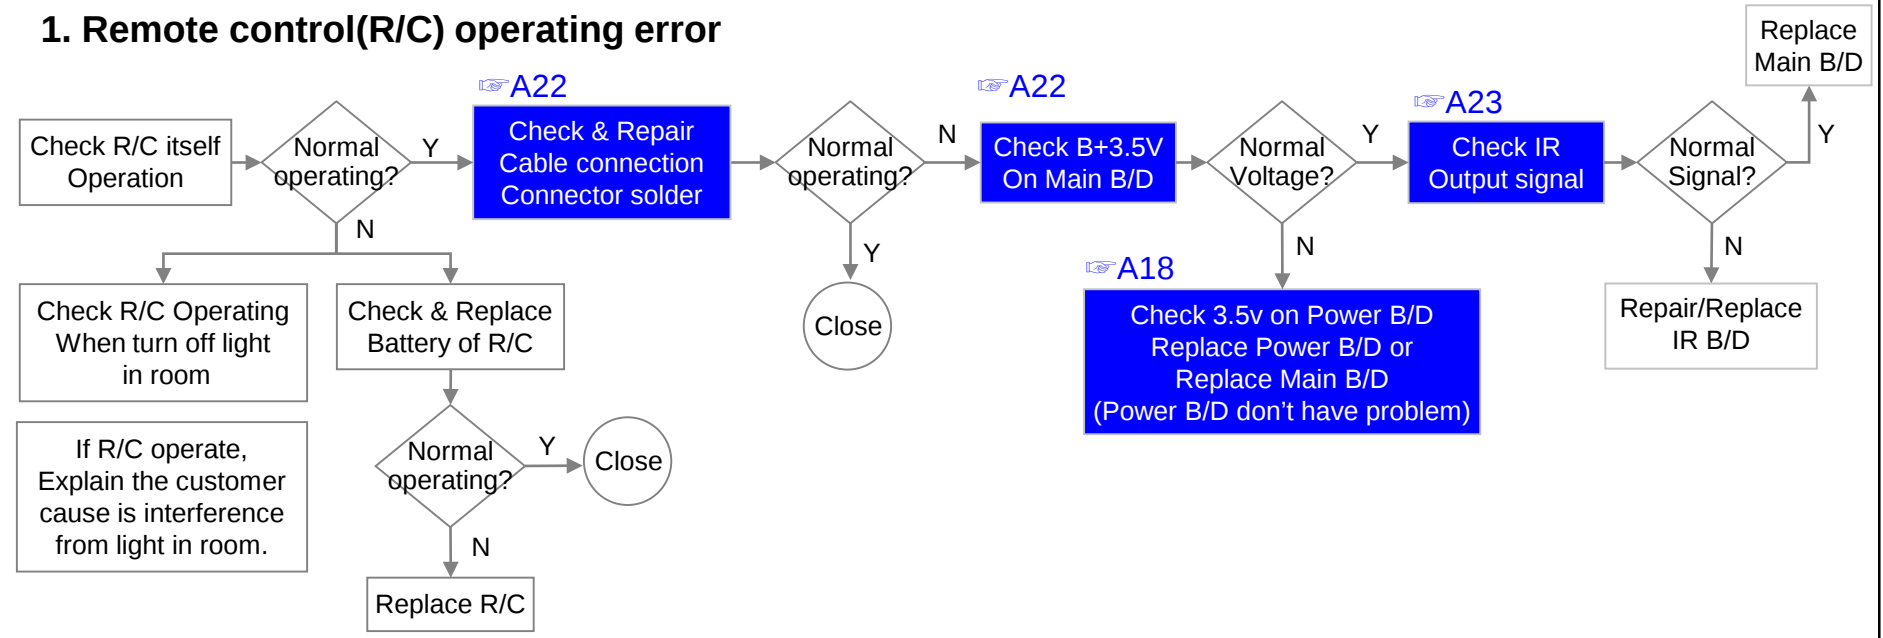


	Error symptom	D. Function error	Established date		
		MR22 operating checking	Revised date		

2. MR22(Magic Remote control) operating error

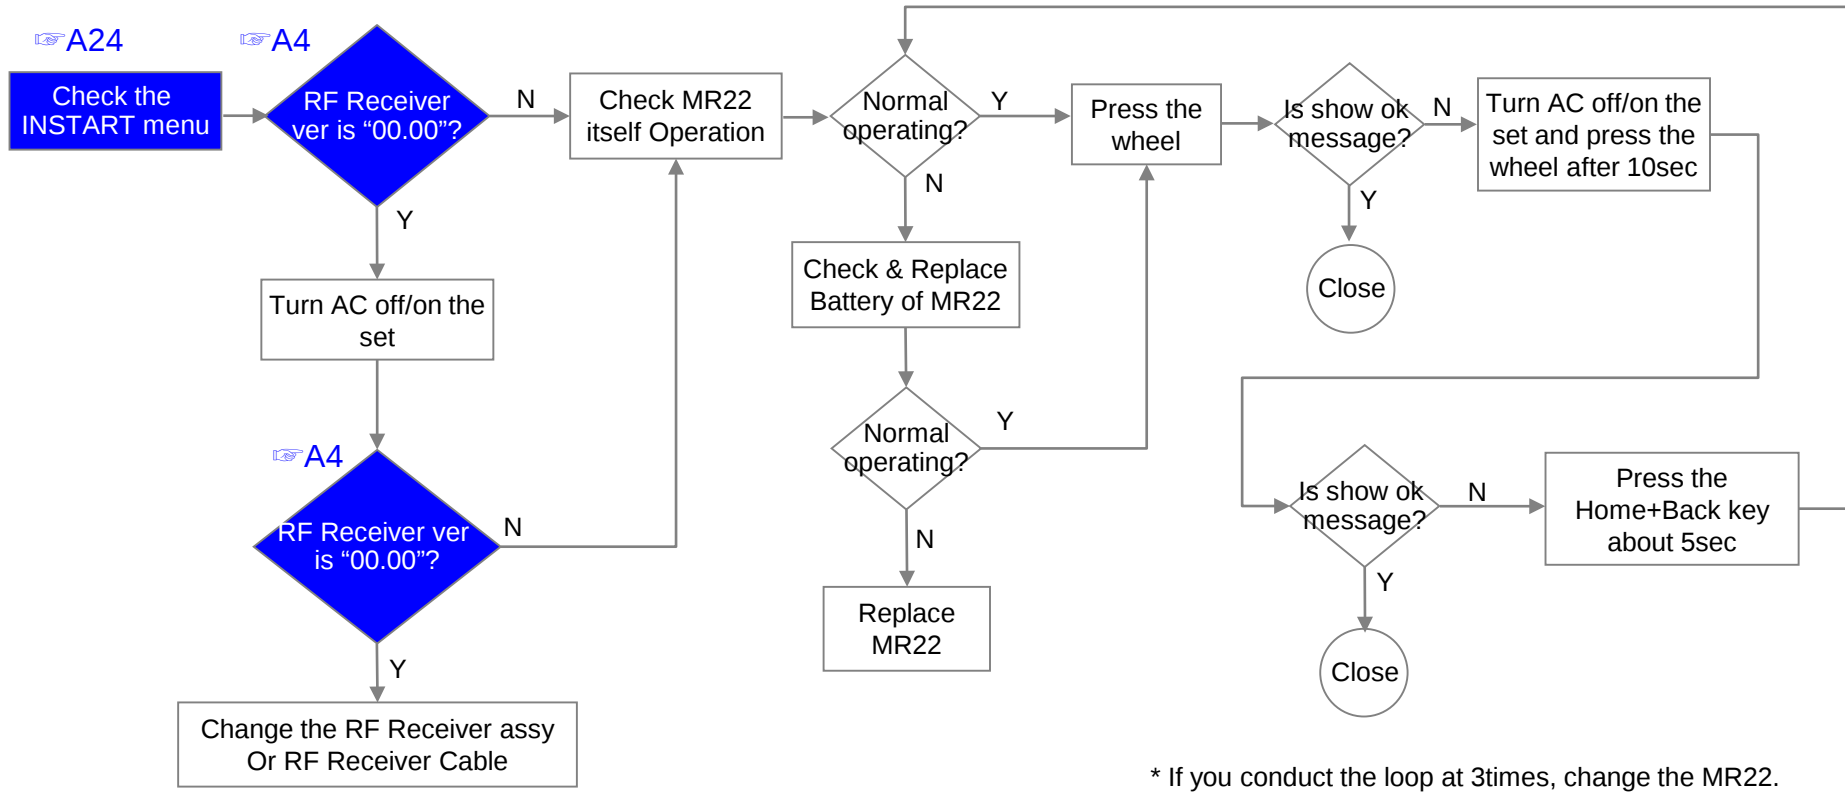


	Error symptom	D. Function error	Established date		
		Wifi operating checking	Revised date		


3. Wifi operating error

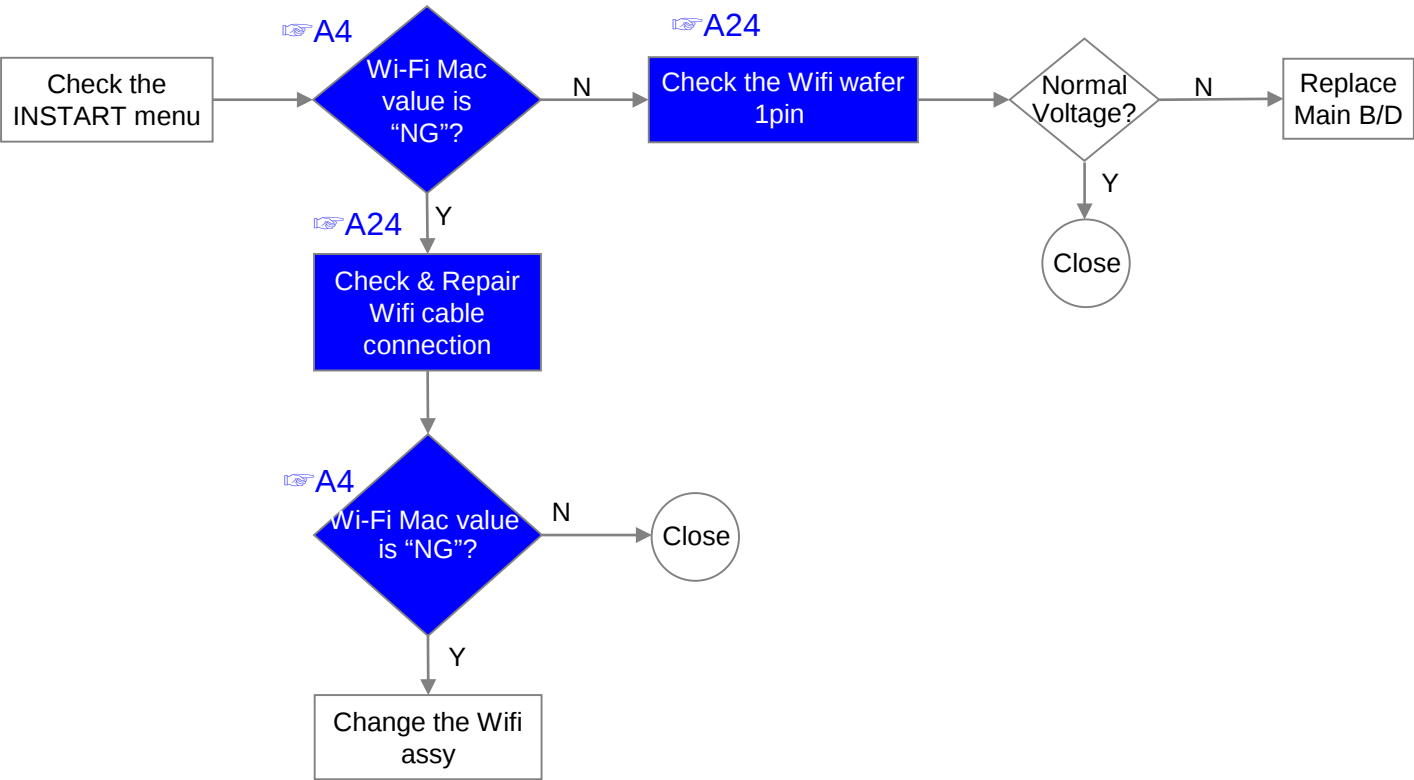


	Error symptom	D. Function error	Established date		
		External device recognition error	Revised date		

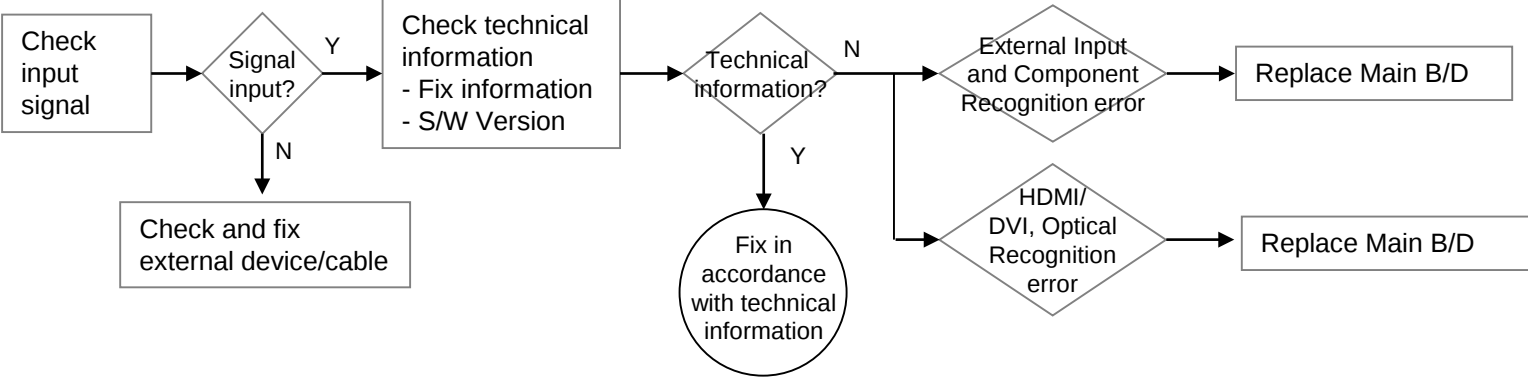

	Error symptom	E. Noise	Established date		
		Circuit noise, mechanical noise	Revised date		

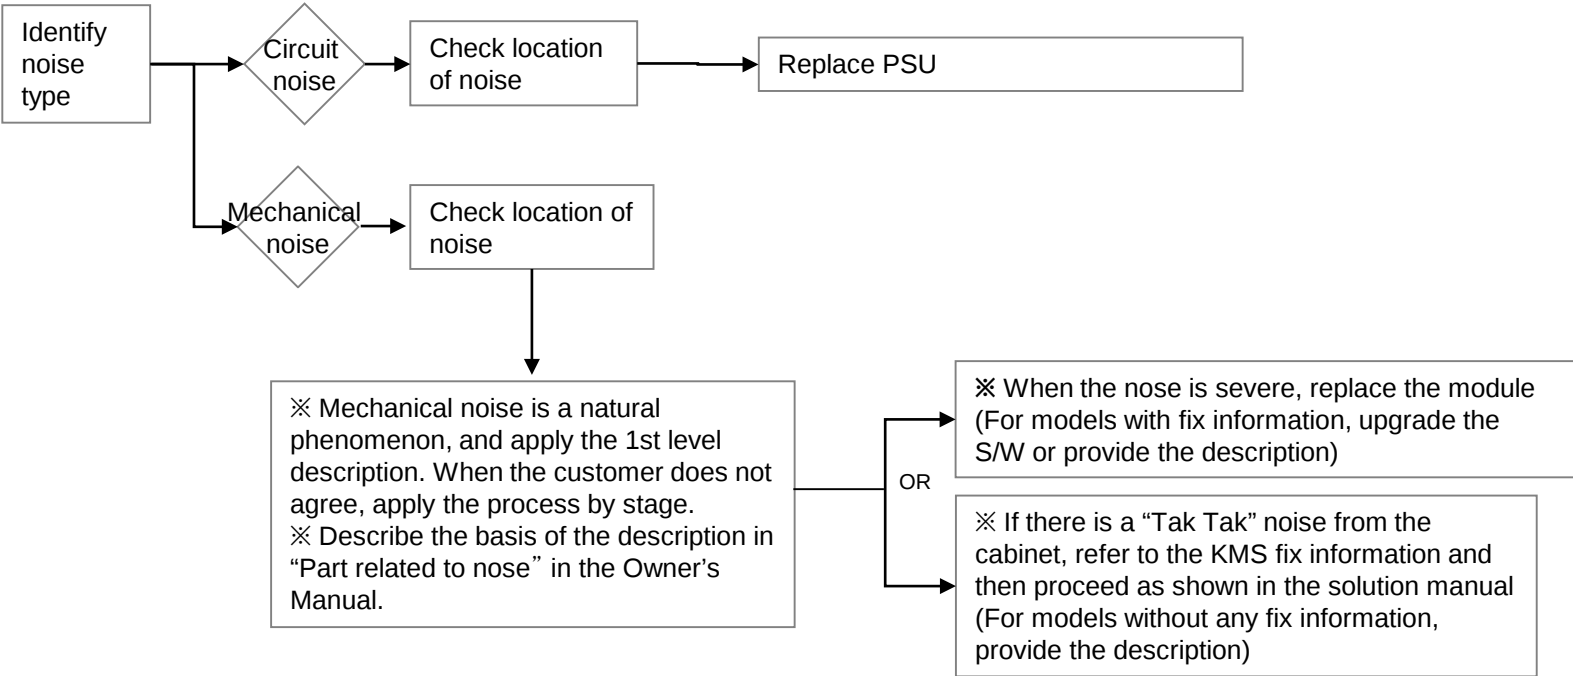

	Error symptom	F. Exterior defect	Established date		
		Exterior defect	Revised date		

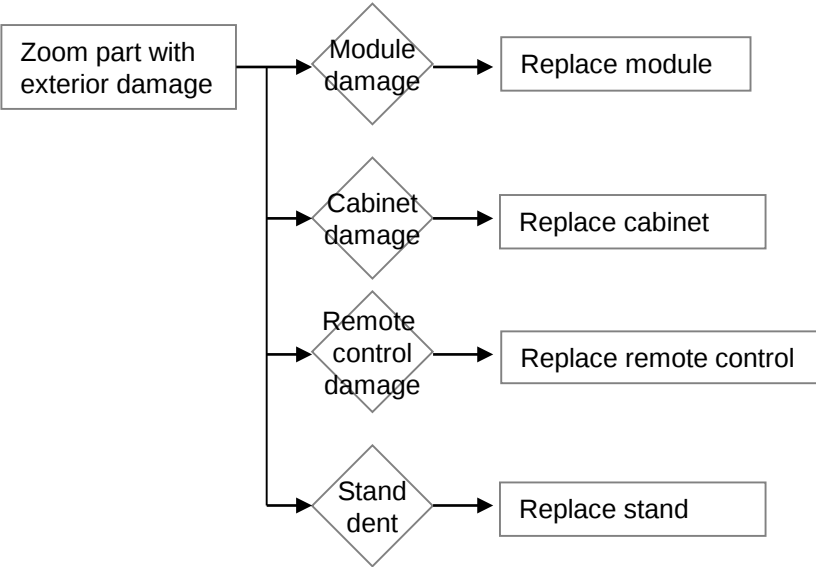

Contents of Standard Repair Process Detail Technical Manual

No.	Error symptom	Content	Page	Remarks
1	A. Video error_ No video/Normal audio	Check LCD back light with naked eye	A1	
2		Check White Balance value	A2	
3	A. Video error_ video error /Video lag/stop	TUNER input signal strength checking method	A3	
4		Version checking method	A4	
5		Tuner Checking Part	A5	
6	A. Video error _Vertical/Horizontal bar, residual image, light spot	Connection diagram	A6	
7	A. Video error_ Color error	Check Link Cable (Vx1/EPI) reconnection condition	A7	
8	<Appendix> Defected Type caused by T-Con/ Inverter/ Module	Check Cable (1) ~ (2)	A-1/11 A-2/11	
9		Exchange Main Board (1) ~ (3)	A-3/11 ~ A-5/11	
10		Exchange Module (1) ~ (3)	A-6/11 ~ A-8/11	
11		Exchange T-Con (1) ~ (2)	A-9/11 ~ A-10/11	Only using T-con model
12		Exchange Power Board(PSU)	A-11/11	

Continue to the next page

Contents of Standard Repair Process Detail Technical Manual


Continued from previous page

No.	Error symptom	Content	Page	Remarks
13	B. Power error_ No power	Check front display LED	A17	
14		Check power input Voltage & ST-BY 7.8V	A18	
15	B. Power error_Off when on, off while viewing	POWER OFF MODE checking method	A19	
16	C. Audio error_ No audio/Normal video	Checking method in menu when there is no audio	A20	
17		Voltage and speaker checking method when there is no audio	A21	
18	D. Function error	Remote control operation checking method	A22	
19		Motion Remote operation checking method	A23	
20	E. Etc	How to use the Service remote control	A24-A26	
21		Check items after Main B/D replacement	A27	
22		Adjustment Test pattern - ADJ Key	A28	

Standard Repair Process Detail Technical Manual

	Error symptom	A. Video error_No video/Normal audio	Established date		
	Content	Check LCD back light with naked eye	Revised date		A1

All Models

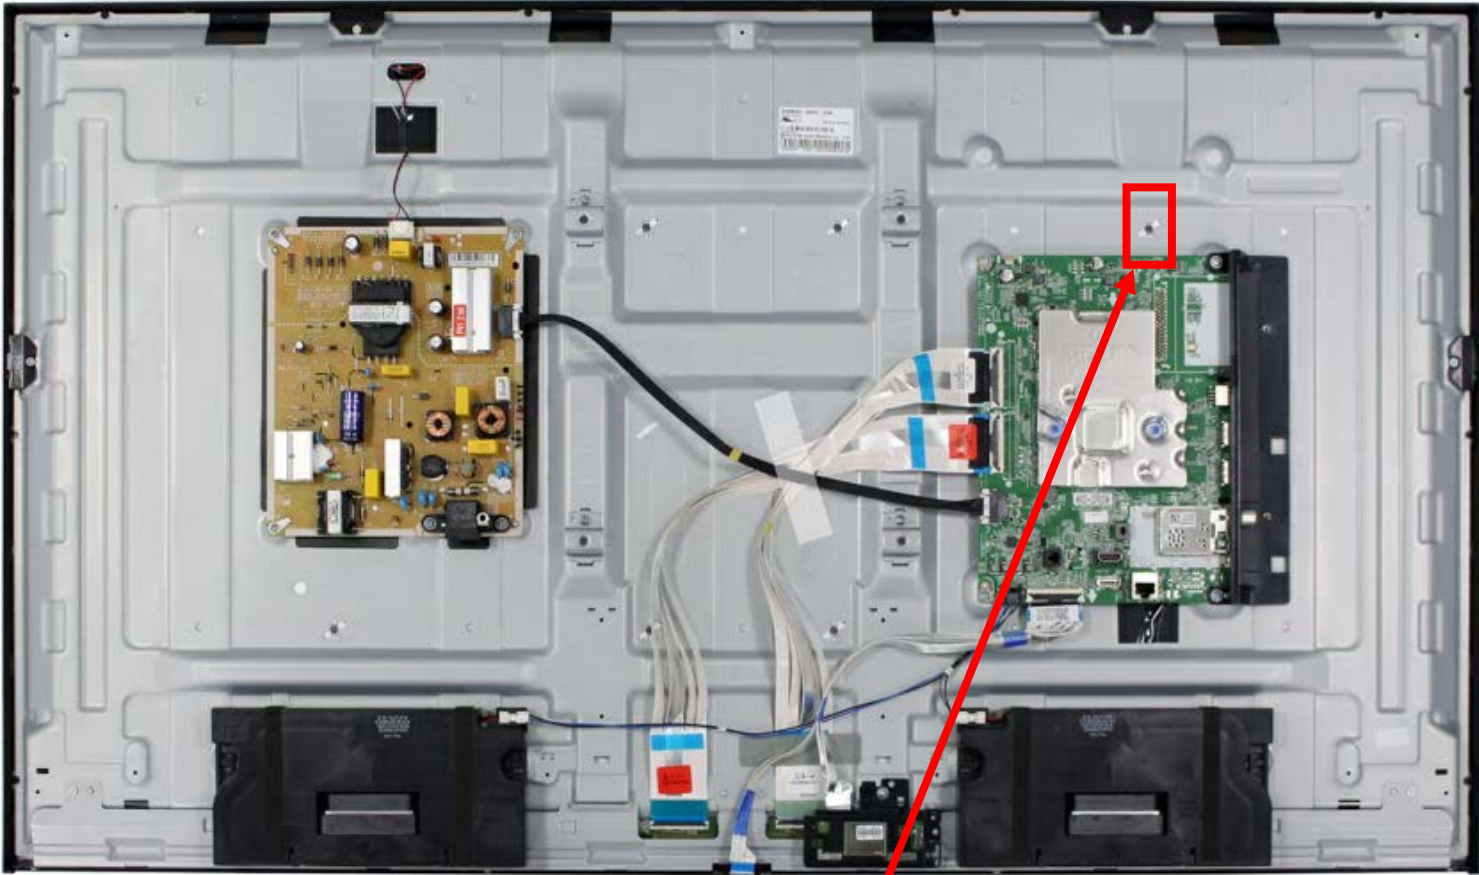

After turning on the power and disassembling the case, check with the naked eye, whether you can see light from locations.



A1



Standard Repair Process Detail Technical Manual

	Error symptom	A. Video error_No video/Normal audio	Established date		
	Content	Check White Balance value	Revised date		A2

<ALL MODELS>

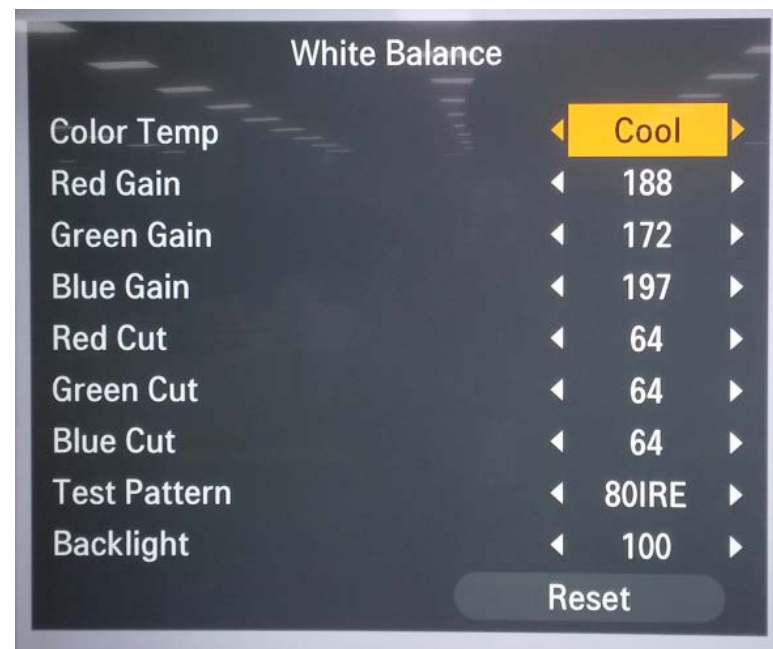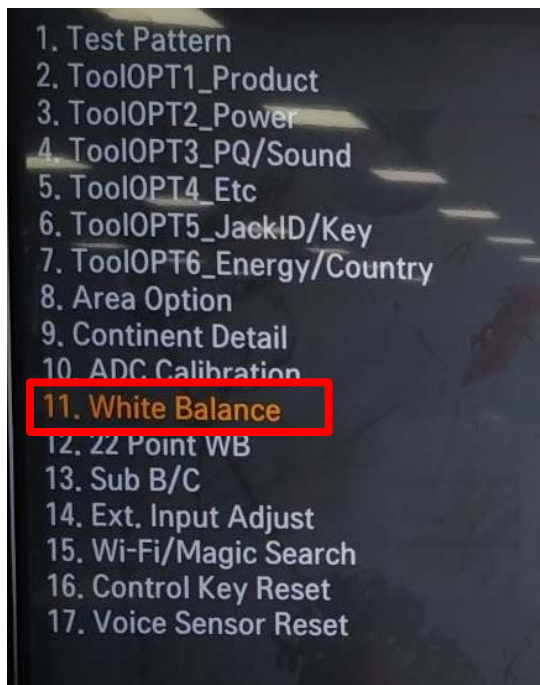

Entry method


1. Press the ADJ button on the remote control for adjustment.
2. Enter into White Balance.
3. After recording the R, G, B (GAIN, Cut) value of Color Temp(Cool/Medium/Warm), re-enter the value after replacing the MAIN BOARD.





Standard Repair Process Detail Technical Manual

	Error symptom	A. Video error_Video error, video lag/stop	Established date		
	Content	TUNER input signal strength checking method	Revised date		A3

<ALL MODELS>

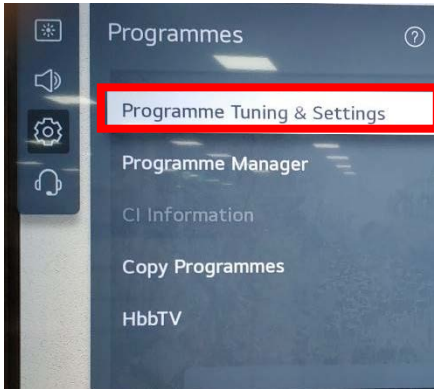

All Setting → General → Programmes
→ Programme Tuning & Settings
→ Manual Tuning

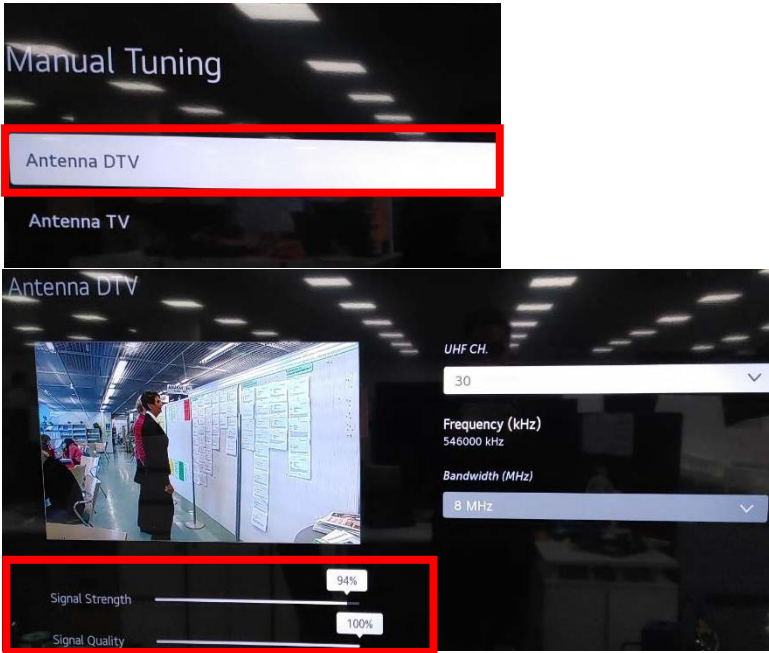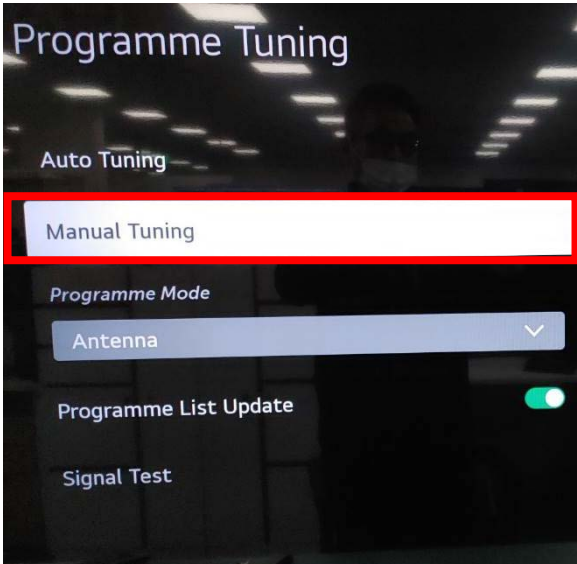

When the signal is strong,
use the attenuator (-10dB,
-15dB, -20dB etc.)



Standard Repair Process Detail Technical Manual

	Error symptom	A. Video error_Video error, video lag/stop	Established date		
	Content	Version checking method	Revised date		A4

<ALL MODELS>

1. Checking method for remote control for adjustment

Version

```


Instart
Model Name : 65NANO906PA
Serial Number : KEY00000002E
S/W Version : 03.00.10.01
Micom Version : V3.02.5
Boot Version : 0.01.179/0.01.179
UHD BE Version : N/A
Chip Type : LM21U
Wi-Fi Channel/Speed : N/A/802.11ac
Wi-Fi MAC : EC:6C:9A:5F:54:30
MAC Address : 58:FD:B1:7E:62:DA
IP Address : 0.0.0.0
SFU Key/RPMB Key : OK/OK
Widevine : LGTV21CMTK100103337
ESN Num. : LGTV20214=41001002036
HDCP2(Miracast/HDMI) : OK/OK
RF Receiver Version : 20:15:10:12
Wi-Fi/Magic Search : OK/OK
Debug Status : RELEASE
SIGN Key : PRODKEY
Far Field Voice : NULL
Eye Check : OK
Control Key : OK
Access USB Status : 1/-1(T)/-1(C)
UTT : 7
App History Version : 10 (kalaupapa)
    
```



Press the IN-START with the remote control for adjustment.

Standard Repair Process Detail Technical Manual

	Error symptom	A. Video error_Video error, video lag/stop	Established date		
	Content	TUNER checking part	Revised date		A5

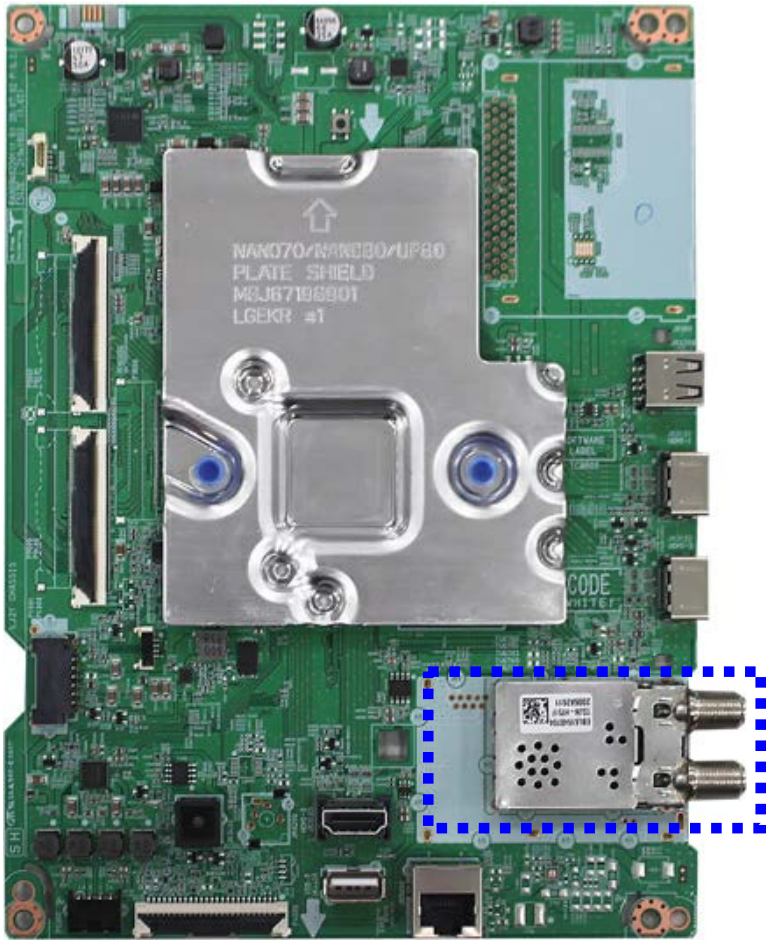


- Checking method:
1. Check the signal strength or check whether the screen is normal when the external device is connected.
 2. After measuring each voltage from power supply, finally replace the MAIN BOARD.

Standard Repair Process Detail Technical Manual

	Error symptom	A. Video error _Vertical/Horizontal bar, residual image, light spot	Established date		
	Content	connection diagram	Revised date		A6

<ALL MODELS>

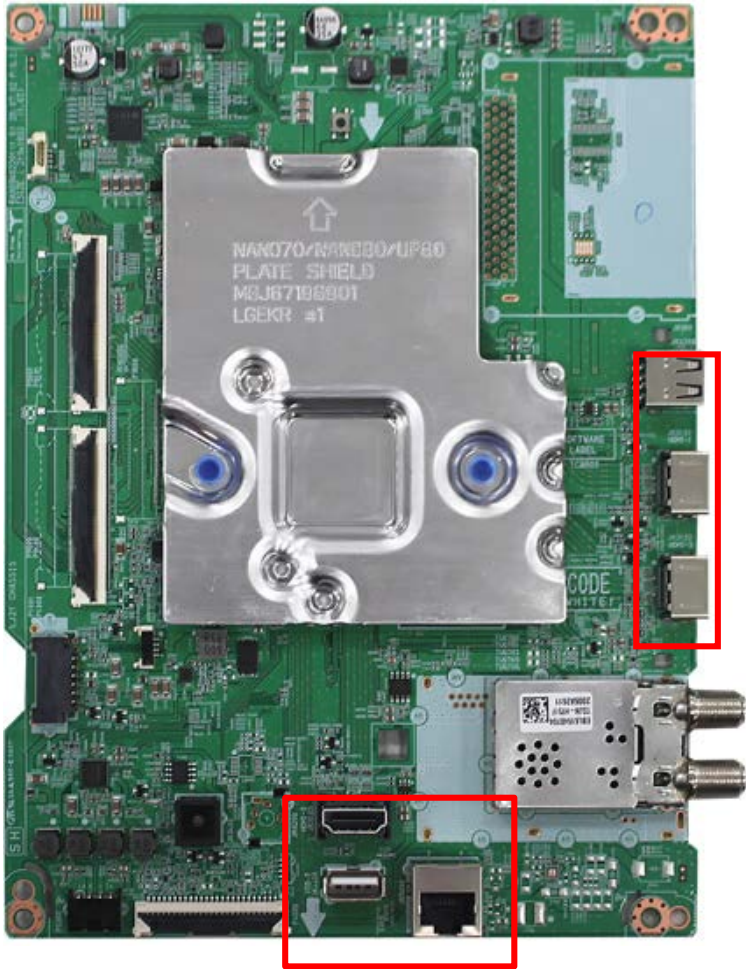


As the part connecting to the external input, check the screen condition by signal





Standard Repair Process Detail Technical Manual


	Error symptom	A. Video error_Color error	Established date		
	Content	Check Link Cable(Vx1/EPI/CEDS) reconnection condition	Revised date		A7



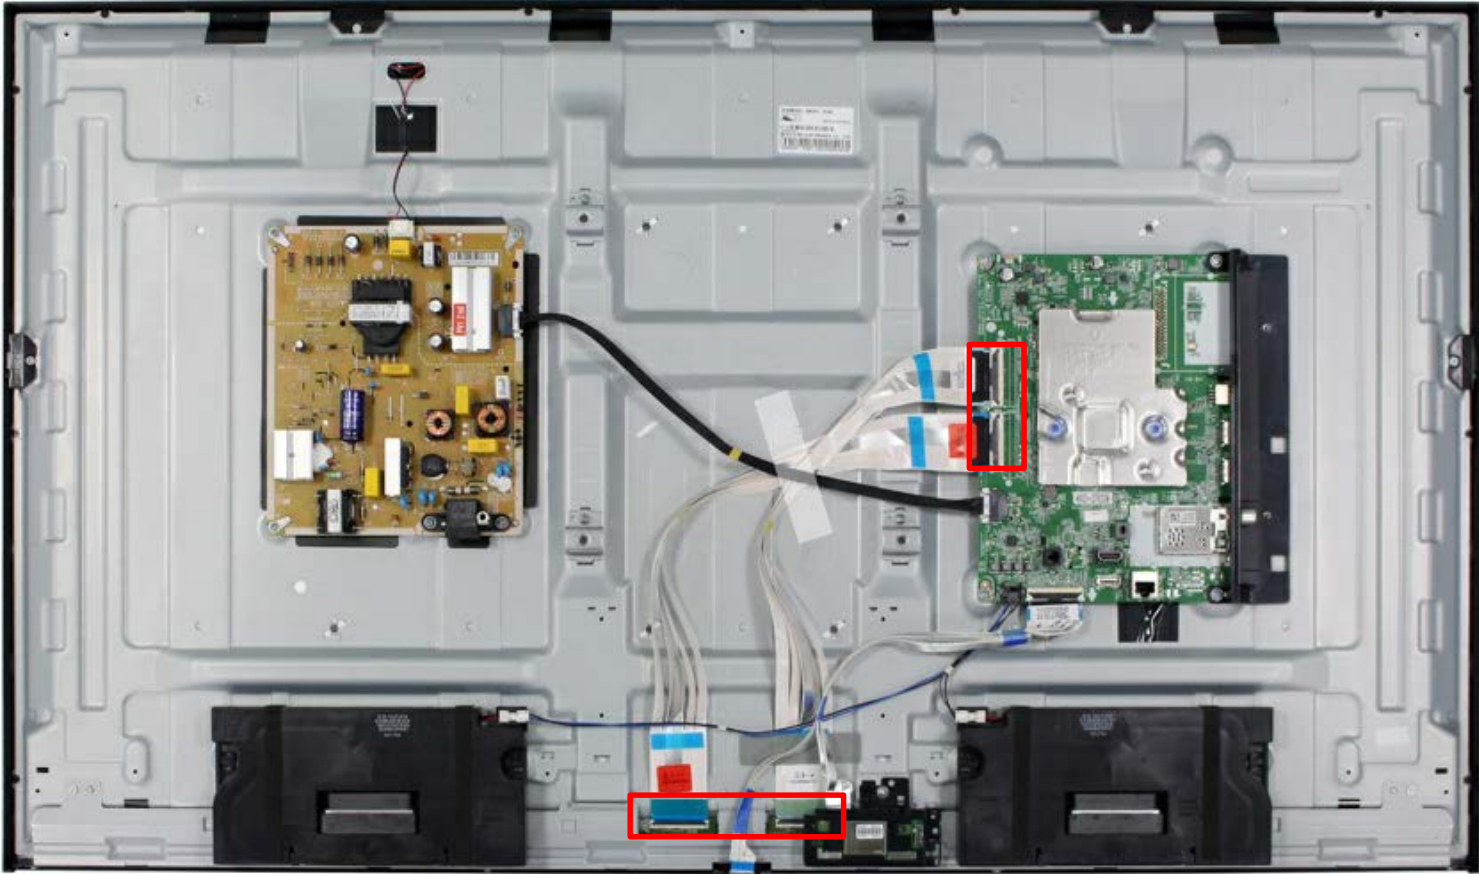


Check the contact condition of the Link Cable, especially dust or mis insertion.

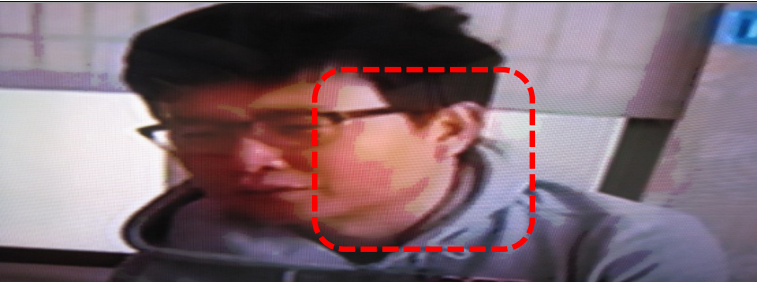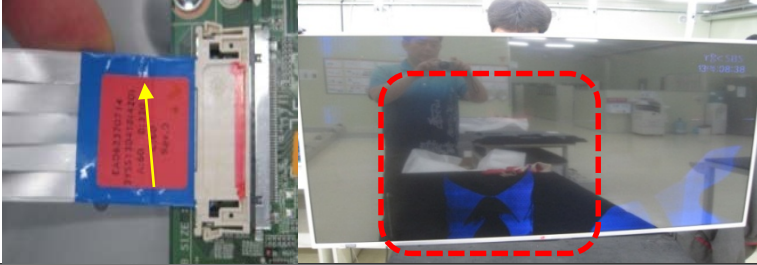

Item	Symptom Name	Cause	Symptom Image
CABLE	Color smear	Poor broken pin of FFC cable	
CABLE	R Color Excessive	Color is Excessive due to FFC Cable Contact.	
CABLE	Screen darkness	screen is dark due to poor contact due to disconnection of the FFC cable pin.	
CABLE	G Color Excessive	G color transient due to poor FFC cable connection	


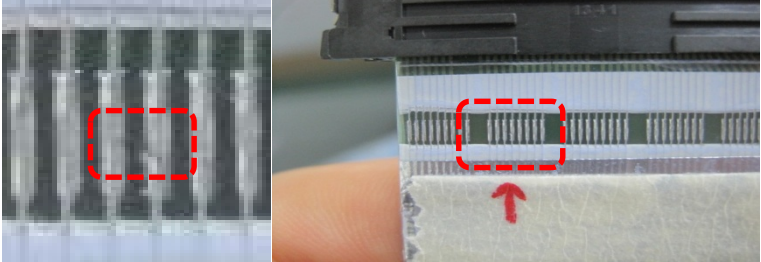
Item	Symptom Name	Cause	Symptom Image
CABLE	Color spread	FFC connection problem	
CABLE	Color spread	FFC connection problem	
CABLE	Color spread	FFC connection problem	
CABLE	Screen stop	Due to foreign substance within FFC PIN	

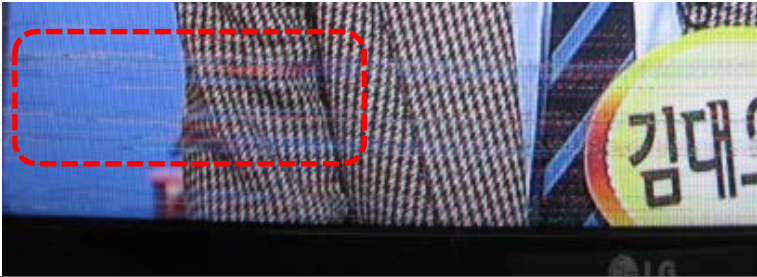
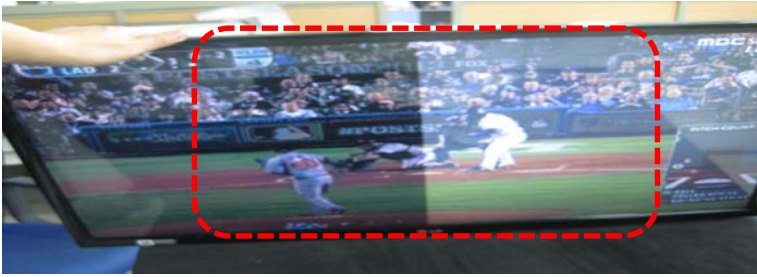
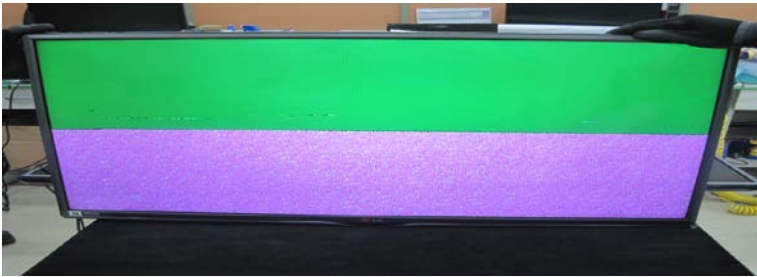
Item	Symptom Name	Cause	Symptom Image
Main	Screen noise	Bit noise from horizontal screen	
Main	Screen noise	Broken screen due to Main IC problem	
Main	Dark picture	Dark left-side screen	
Main	Broken picture	Top/bottom screen part Picture problem due to tuner Inner side quality problem	


Appendix. Examples of Symptoms(Main)





Check parts by symptom

Item	Symptom Name	Cause	Symptom Image
Main	Broken screen	Broken screen in a horizontal manner	
Main	Screen spread	Screen corner appears blurry	
Main	Color Spread	Color spread on the screen	
Main	Blurry Screen	Blurry picture on the screen	

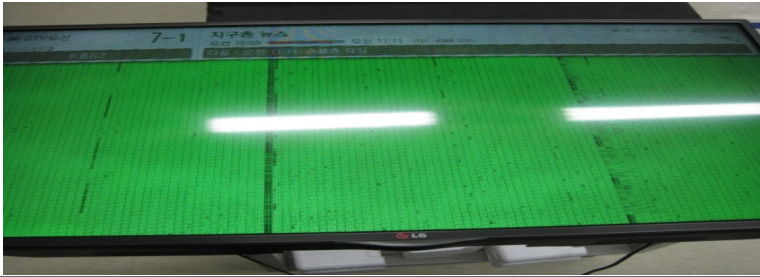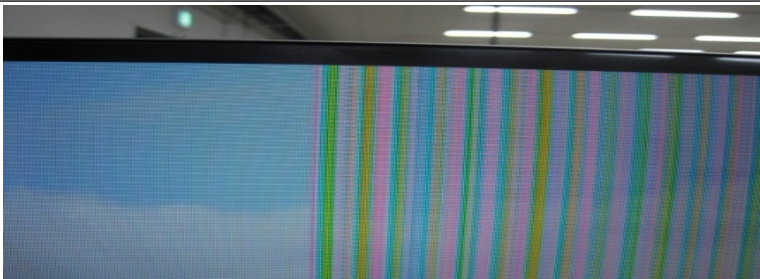
Item	Symptom Name	Cause	Symptom Image
Main	Broken picture	No problem at the initial stage, G-color spread after 10 minutes	
Main	Right-side Screen problem	Right-side screen problem	
Main	LG logo Screen problem	Screen picture spread problem	
Main	Right-side picture problem	No problem at the initial stage. During Heat run, right-side picture problem	

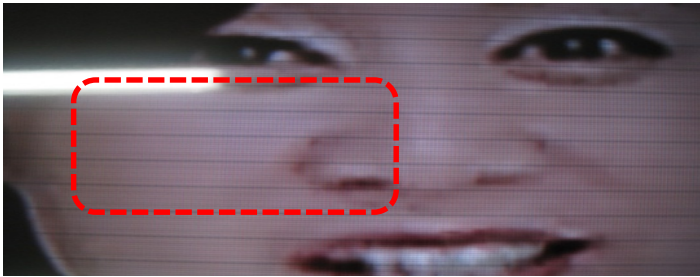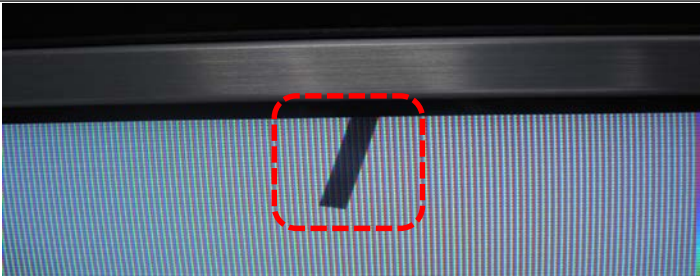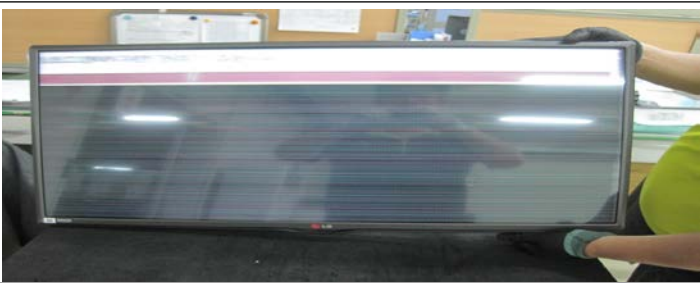Item	Symptom Name	Cause	Symptom Image
MODULE	Isometric Horizontal Bar	Isometric horizontal bars occur throughout the screen	
MODULE	Internal matter	BLU internal foreign matter inflow	
MODULE	Image broken	6 block image broken	
MODULE	Image broken	Screen sync signal broken	

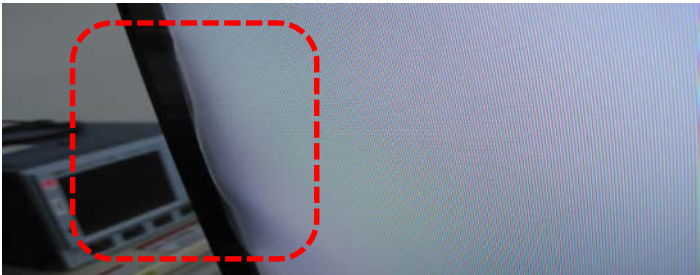
Item	Symptom Name	Cause	Symptom Image
MODULE	Image broken	Internal damage and image breakage due to external impact	
MODULE	Bend on the screen	Bending due to lateral external impact and internal bending of BLU	
MODULE	Vertical smear	Vertical spreading on cube screen in no signal	
MODULE	Over color	Screen contour part brightly Over color	

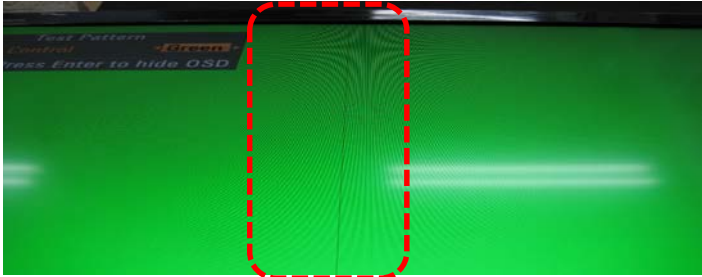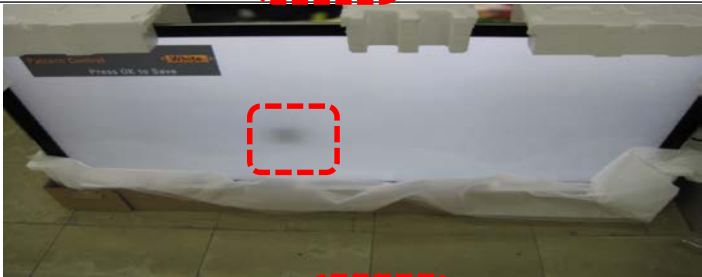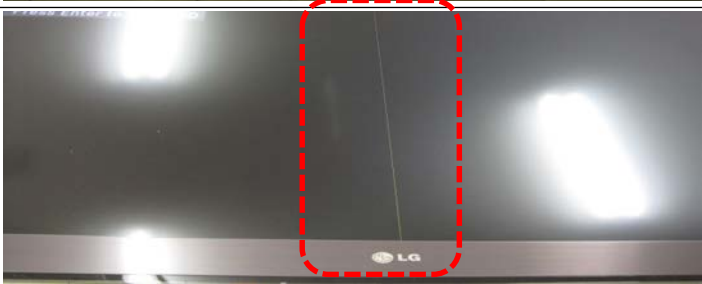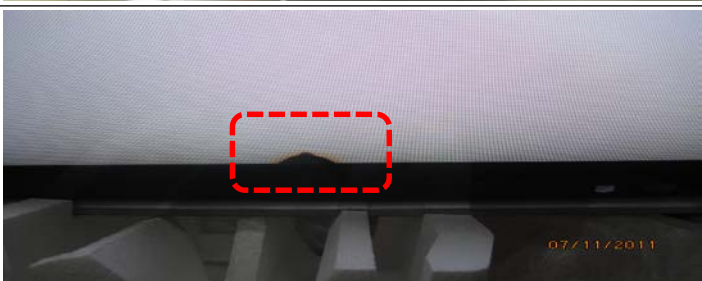Item	Symptom Name	Cause	Symptom Image
MODULE	Vertical bar	Center Vertical Bar	
MODULE	Screen darkness	Center of the screen 1 block dark	
MODULE	Vertical bar	Center Vertical Bar	
MODULE	Darkness at the bottom of the screen	MODULE internal BLU breakage	

Appendix. Examples of Symptoms(Only if using T-con Board) Check parts by symptom

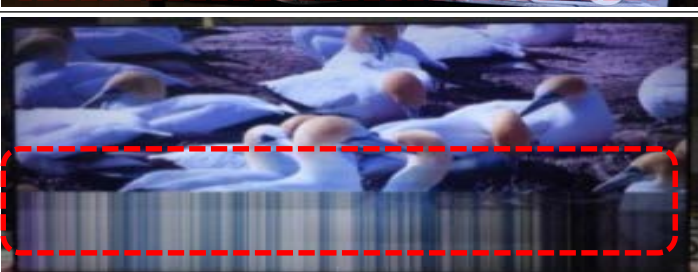Item	Symptom Name	Cause	Symptom Image
T-CON	screen lower image broken	T-Con is defective and the picture below the screen is broken	
T-CON	screen lower image broken	T-Con is defective and the picture below the screen is broken	
T-CON	screen lower image broken	T-Con is defective and the picture below the screen is broken	
T-CON	screen lower image broken	T-Con is defective and the picture below the screen is broken	

Appendix. Examples of Symptoms(Only if using T-con Board) Check parts by symptom

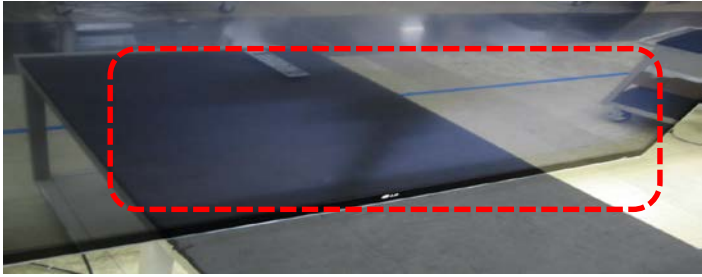Item	Symptom Name	Cause	Symptom Image
T-CON	Image Broken	T-CON Wafer Locking The strength is weak and cable contact failure occurs	
T-CON	Darkness at the top of the screen	Initial normal operation, upper darkness during heat run	
T-CON	Image Broken	The entire screen is dark and bit noise occurs	
T-CON	Image Broken	The entire screen is dark and bit noise occurs	

Appendix : Exchange Power Board (PSU)



No Light




No picture/Sound Ok

Standard Repair Process Detail Technical Manual

	Error symptom	B. Power error _No power	Established date		
	Content	Check front Power Indicator	Revised date		A17

ST-BY condition: On or Off
Power ON condition: Turn Off

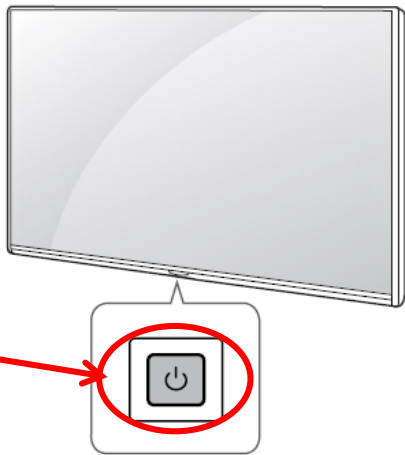

Using button



Power On (Press)
Power Off¹⁾ (Press and Hold)
Menu Control (Press²⁾)
Menu Selection (Press and Hold³⁾)

- 1) All running apps will close, and any recording in progress will stop. (Depending on country)
- 2) You can access and adjust the menu by pressing the button when TV is on.
- 3) You can use the function when you access menu control.

Adjusting the menu

When the TV is turned on, press the  button one time. You can adjust the Menu items using the button.



Turns the power off.



Changes the input source.



Adjusts the volume level.



Scrolls through the saved programmes.



Standard Repair Process Detail Technical Manual

	Error symptom	B. Power error _No power	Established date		
	Content	Check power input voltage and ST-BY 7.8V	Revised date		A18

SET Model	Power P/N, Name
55UQ80/81/70 Series	EAY65895612, LGP55T-21U1

Power Check Sequence

1. AC input Check : SK100 (100~240Vac)
2. PWR-ON Check :
 - SET On : above 3V
 - SET St-by : 0V
3. 13.2V DC Check :
 - SET On : 13.2V
 - SET St-by : 7.8V
4. MS Level Check : MS

MS Level	Range [V]	LED On/Off
MS (0V)	0 ~ 0.25	Off
MS (2V)	1.75 ~ 2.25	On (Home mode)
MS (3V)	2.75 ~ 3.25	On (Store Mode)

※ Home mode : General Customer
Store mode : use Store

5. LED voltage Check : P801, Pin 1-7

Picture Condition : VIVID (Back light 100)	
Min	Max
111.6V	136.4V

all condition meets, Power Board OK.


P801 Type : SMAW200A-H07AA2(WH) Maker : YEONHO	
Pin No.	Assignment
1	LED-
2	Remove
3	N.C
4	Remove
5	N.C
6	Remove
7	LED+



P801

P201 YEONHO (SMAW200-H1255K)			
Pin No.	Assignment	Pin No.	Assignment
1	PWR-ON	2	N.C
3	GND	4	13.2V
5	13.2V	6	13.2V
7	13.2V	8	13.2V
9	GND	10	GND
11	MS	12	PDIM

P201

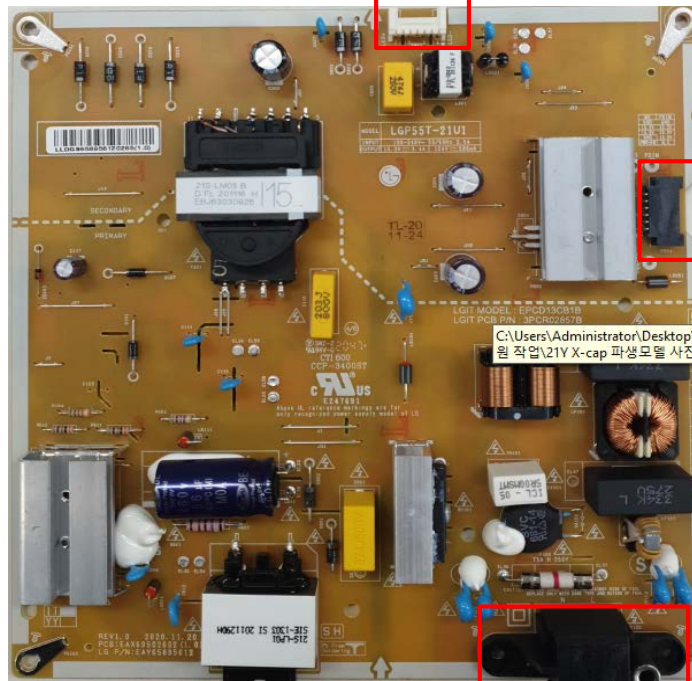


SK100 (AC input)

※ Depending on Model Power Board is different.
But Interface(P801, P201) and Spec is same

Standard Repair Process Detail Technical Manual

	Error symptom	B. Power error _Off when on, off whiling viewing	Established date		
	Content	POWER OFF MODE checking method	Revised date		A19

<ALL MODELS>

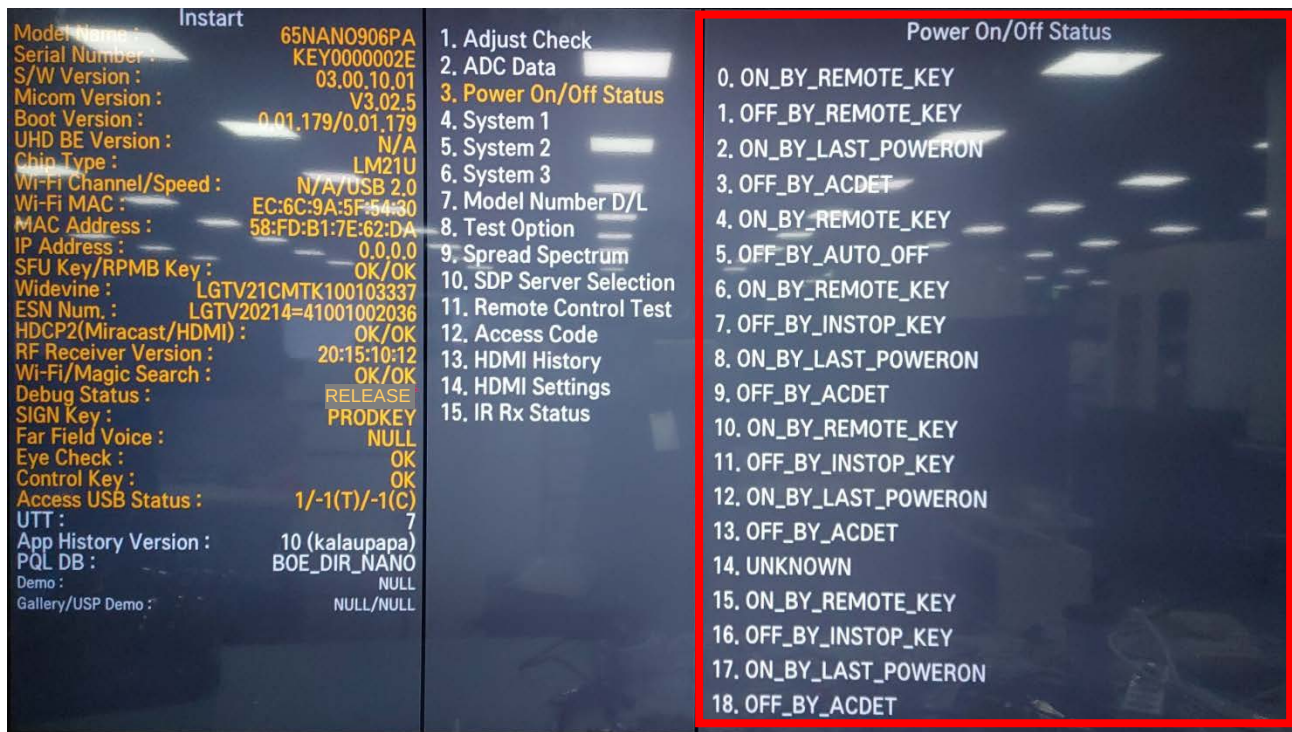


Entry method

1. Press the IN-START button of the remote control for adjustment.
2. Check the entry into adjustment item 3.

Standard Repair Process Detail Technical Manual

	Error symptom	C. Audio error_No audio/Normal video	Established date		
	Content	Checking method in menu when there is no audio	Revised date		A20

<ALL MODELS>

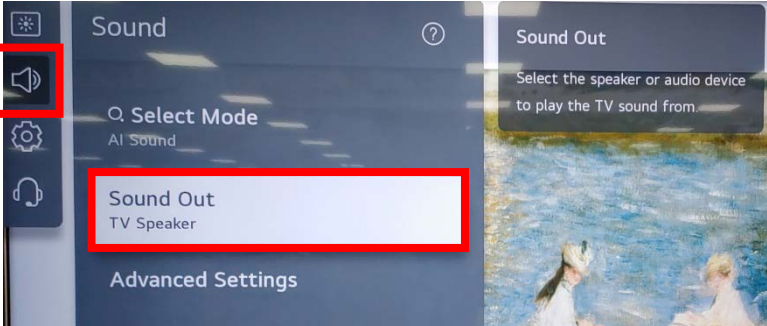

Checking method


1. Press the Setting button on the remote control.
2. Select the Sound function of the Menu.
3. Select the Sound Out.
4. Select TV Speaker.




Standard Repair Process Detail Technical Manual

	Error symptom	C. Audio error_No audio/Normal video	Established date		
	Content	Voltage and speaker checking method when there is no audio	Revised date		A21

SET Model	Power P/N, Name
55UQ80/70 Series	EAY65895522, LGP55NT-21U1

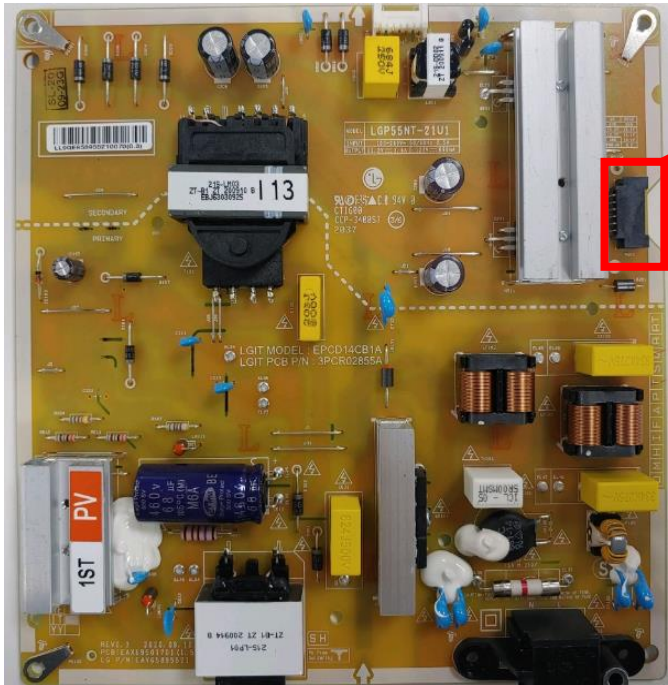

②

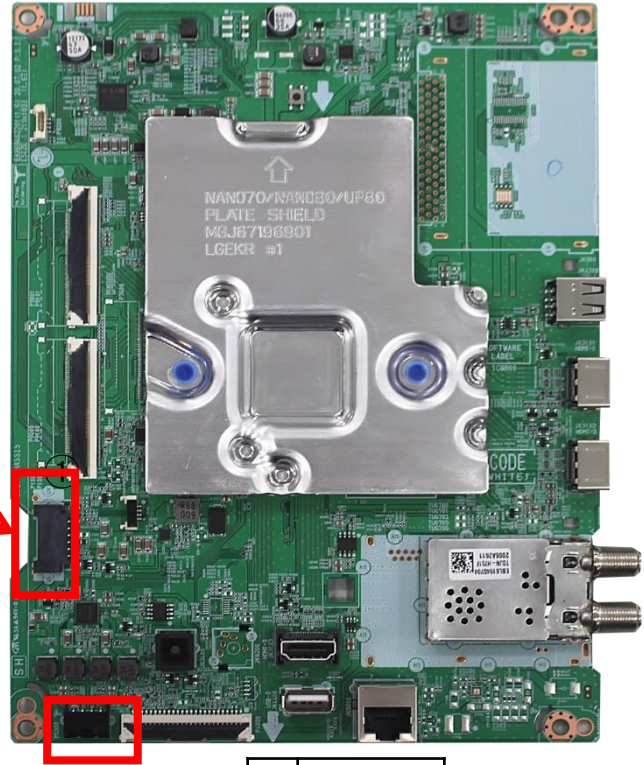

③

1	SPK_R-FT
2	SPK_R+FT
3	SPK_L-FT
4	SPK_L+FT


Checking order when there is no audio

1. Check the contact condition of or 13.2V connector of Main Board.
2. Measure the 13.2V input voltage supplied from Power Board.
(If there is no input voltage, remove and check the connector.)
3. Connect the tester RX1 to the speaker terminal and if you hear the Chik Chik sound when you touch the GND and output terminal, the speaker is normal.

Standard Repair Process Detail Technical Manual

	Error symptom	D. Function error	Established date		
	Content	Remote control operation checking method	Revised date		A22

①
IR & EYE Sensor

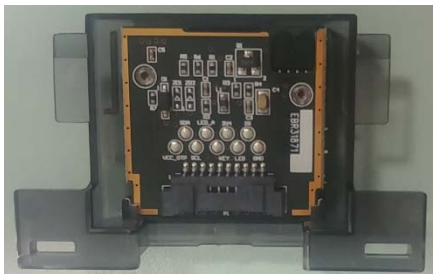

③

Pin	Pin name
1	VCC
2	WIFI_DM
3	WIFI_DP
4	GND
5	WOL/WIFI_ON
6	VCC
7	WIFI_SUSPEND/RESUEM
8	GND
9	COMBO_RESET
10	BT_WAKEUP_HOST
11	GND
12	VCC
13	
14	
15	
16	EYE_SDA
17	EYE_SCL
18	GND
19	IR
20	LED_R
21	GND
22	VCC
23	KEY2
24	MIC_DATA
25	MIC_CLK

Checking order to check remote control

Checking order

1. Check IR cable condition between IR & Main board.(Check picture number① and ②.)
2. Check the standby 3.5V on the terminal 22 pin. (③)
3. AS checking the Pre-Amp(IR LED light), the power is in ON condition, an Analog Tester needle should move slowly, otherwise, it's defective.


Standard Repair Process Detail Technical Manual

	Error symptom	D. Function error	Established date		
	Content	Remote control operation checking method	Revised date		A23

① Wifi & BT Front



Wifi & BT Rear

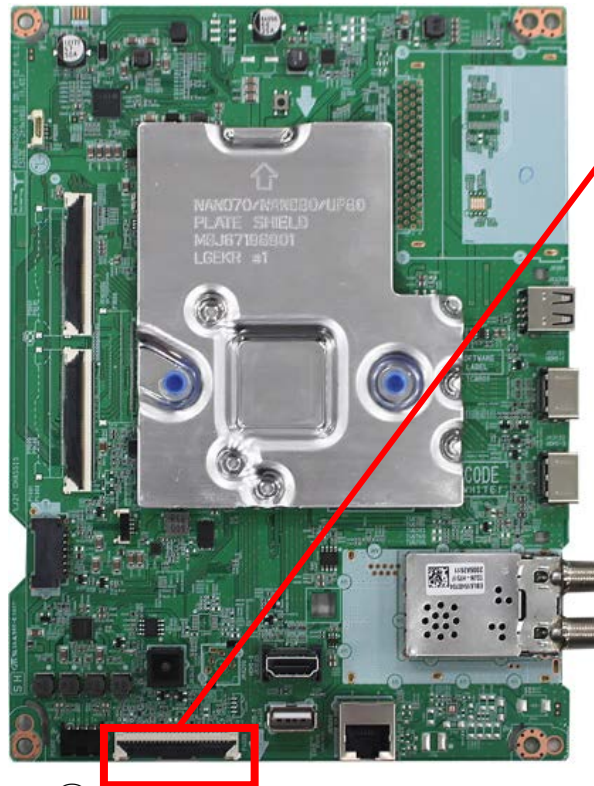

③

Pin	Pin name
1	VCC
2	WIFI_DM
3	WIFI_DP
4	GND
5	WOL/WIFI_ON
6	VCC
7	WIFI_SUSPEND/RESUEM
8	GND
9	COMBO_RESET
10	BT_WAKEUP_HOST
11	GND
12	VCC
13	
14	
15	
16	EYE_SDA
17	EYE_SCL
18	GND
19	IR
20	LED_R
21	GND
22	VCC
23	KEY2
24	MIC_DATA
25	MIC_CLK

②

Checking order to check motion remote/wifi





Checking order

1. Check BT/Wifi cable condition between BT/Wifi assy & Main board.(Check ① and ②)
2. Check the 3.5V on the terminal 1. (③)

Standard Repair Process Detail Technical Manual

	Error symptom	E. Etc	Established date		
	Content	How to use the Service remote control	Revised date		A24

1. How to access the remote control

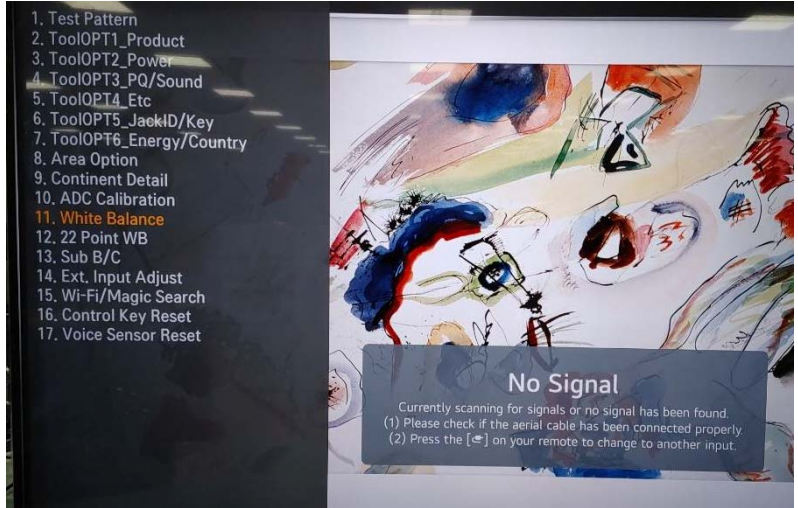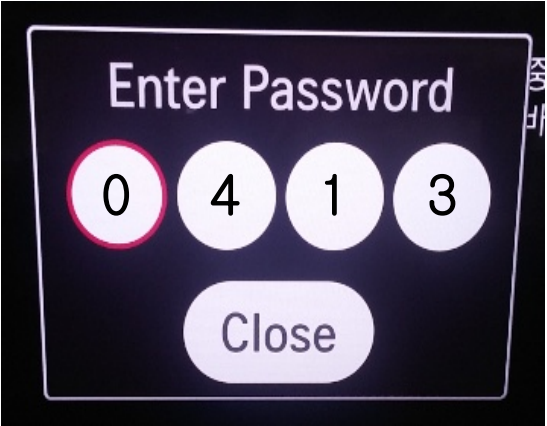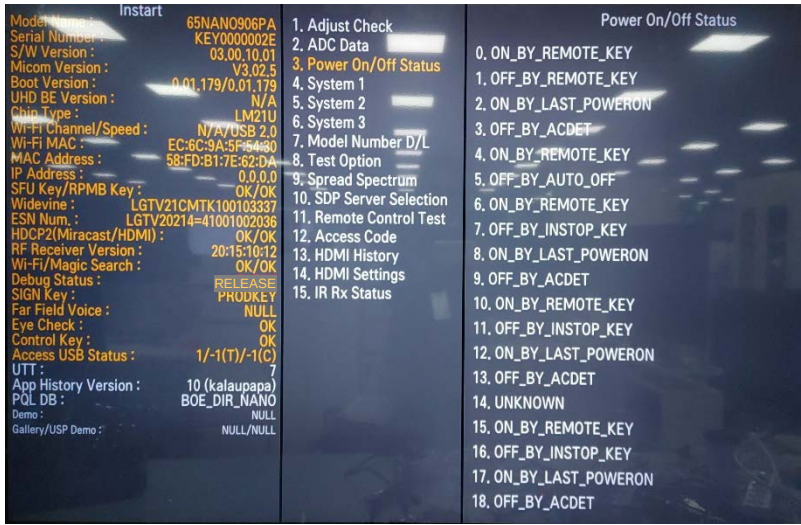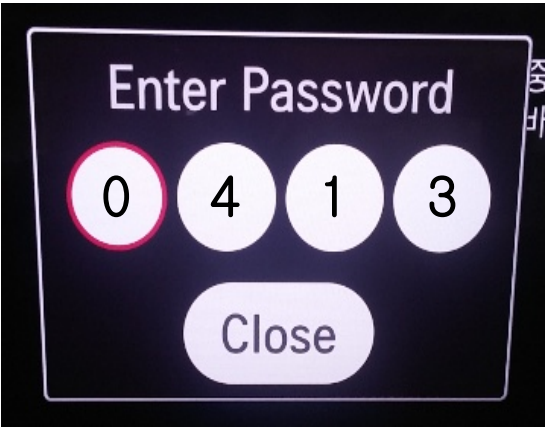

Standard Repair Process Detail Technical Manual

	Error symptom	E. Etc	Established date		
	Content	How to use the Service remote control	Revised date		A25

2. Remote control part definition



POWER	Power On/Off
ETC (Added Function)	[ETC] Each time pressing the KEY button, Mode gets changed to ETC and P-ONLY each time All KEY function [PIP PR-][PIP PR+][SWAP] [PIP INPUT][DVI] KEY Function
P-ONLY (Added Function)	Changed to factory mode All KEY function &[INFO][STILL][HDMI HOT][USB HOT][HDMI4] KEY Action
INPUT	Change to the external device mode
ARC	Change in the order of 16:9=>Zoom1=>Zoom2=>Cinema Zoom=>Auto Screen=>4:3=>16:9
PSM	Changes in the order of Bright Picture=>Easy Picture=>Cinema=>Spots=>Game=> Custom Picture1=>Custom Picture2=>Bright Picture
SSM (Added Function)	Standard(user)=>music=>cinema=>sports=>game=>standard(user)
PIP	Picture In Picture is activated
TEXT	Access to the Power Only mode
CAP	Broadcasting caption(on/off)
MPX	Stereo mode (mono, stereo, foreign language) access
	Used when in factory mode
Simplink (Added Function)	Access to the Simplink-connected device
EYE	Digital EYE function ON/OFF For some Model, access to the Test Pattern
TILT	Used for screen tilting change (Access to the old PDP control mode)

A25

Standard Repair Process Detail Technical Manual

	Error symptom	E. Etc	Established date		
	Content	How to use the Service remote control	Revised date		A26




B-TOOTH (Added function)	Connected to Blue-Tooth
IN-START	Model Nam ex) 42PG60D-NA Current Model Name S/W Version ex) V03.11.0 Current S/W version MICOM Version ex) V3.05.0 current Mi-Com version UTT ex) User TV total usage time
ADJ	POWER OFF STATUS ex) Shows power-off status Test Pattern (Off=>White=>Red=>Green=>Blue=>Black=>Pattern=>Off) Change
X-STUDIO (Added function)	HDD,USB, external device's HDD screen is activated
MENU	User function gets activated
EXIT	Exit from the current mode
TIME SHIFT (Added function)	Moves forward/backward of recorded contents
MUTE	Mute function (0 Volume)
IN-STOP	SET to factory mode
VOL + -	Volume Up/Down
CH + -	Channel Up/Down
AV1,2,3 (Added function)	Connects to external input 1,2,3
COMP1,2 (Added function)	Connects to Component 1,2
HDMI1,2,3,4 (Add function)	Connects to HDMI 1,2,3,4
DVI (Add function)	Connects to DVI

Standard Repair Process Detail Technical Manual

	Error symptom	E. Etc	Established date		
	Content	Check items after Main B/D replacement	Revised date		A27


Check items after Main B/D(Model Number D/L, White Balance)

1. Press the Service remote control instart Key.

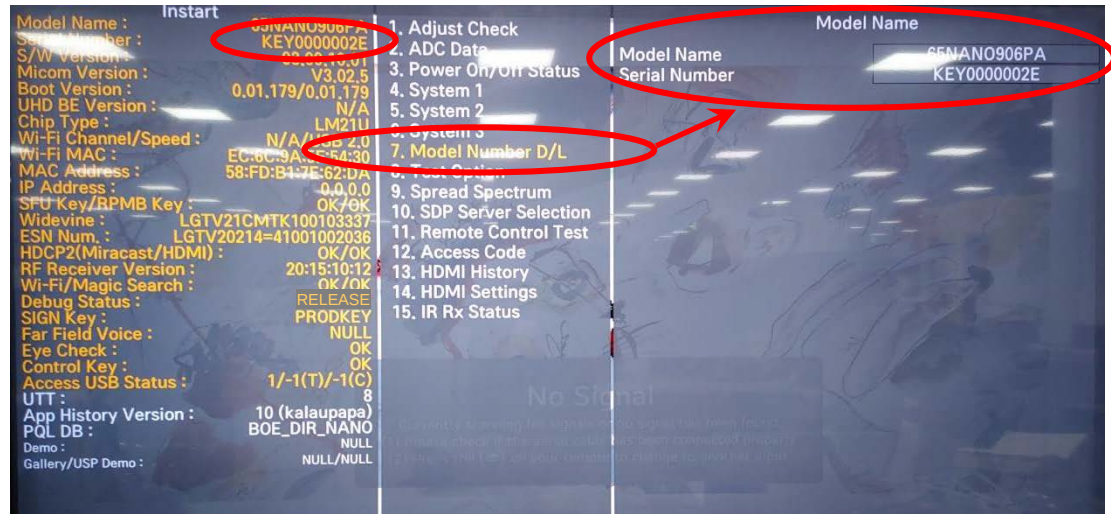

No.7 Select Model Number D/L
- Key in the model name and serial number after checking the ID label on the back cover.

2. Press the Service remote control ADJ Key.

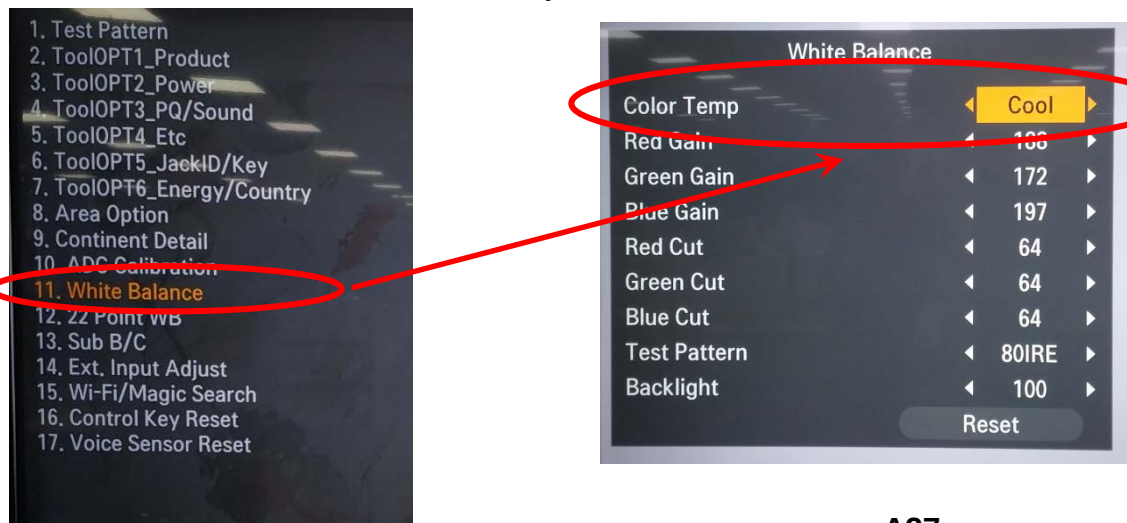







No.11 Select White Balance
- Record the R, G, B (GAIN, Cut) value of the color temperature before main board replacement.
After replacing the main board, key in the recorded value.

Standard Repair Process Detail Technical Manual

	Error symptom	E. Etc	Established date		
	Content	Adjustment Test pattern - ADJ Key	Revised date		A28



1. Test Pattern
2. ToolOPT1_Product
3. ToolOPT2_Power
4. ToolOPT3_PQ/Sound
5. ToolOPT4_Etc
6. ToolOPT5_JackID/Key
7. ToolOPT6_Energy/Country
8. Area Option
9. Continent Detail
10. ADC Calibration
11. White Balance
12. 22 Point WB
13. Sub B/C
14. Ext. Input Adjust
15. Wi-Fi/Magic Search
16. Control Key Reset
17. Voice Sensor Reset

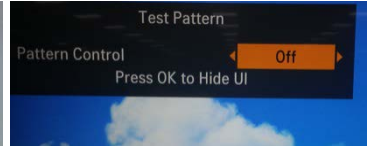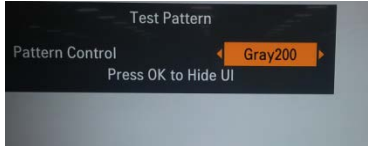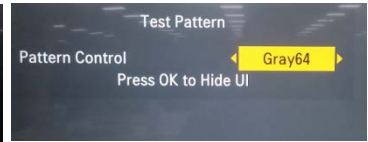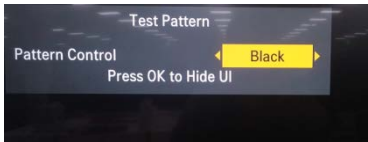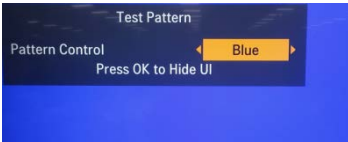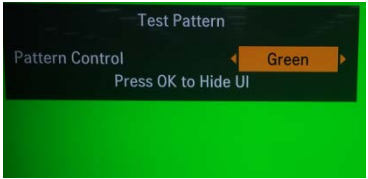

You can view 9 types of patterns using the ADJ Key

Checking item : 1. Defective pixel 2. Residual image 3. MODULE error (ADD-BAR,SCAN BAR..)
4.Video error (Classification of MODULE or Main-B/D!)



webOS22 new features & Usability

Quick Customer Service Guide for webOS22 TV Usability Issues

- To respond to usability related issues that commonly occur on WebOS TV
 - Quick customer service guide for issues that can be resolved by changing settings and providing explanations
 - **[Remote Control] webOS5.0 (2020) vs. webOS6.0 (2021) vs. webOS22**
 - **[Home screen] webOS6.0 (2021) vs. webOS22**
 - **[Homeboard] webOS4.5 (2019) ~ webOS22 dashboard supported products**
 - **WebOS22 new features & usability**




[Remote control] webOS5.0 (2020) vs. webOS6.0 (2021) vs. webOS22

	webOS5.0 (2020)	webOS6.0 (2021)	webOS22 (2022)
Magic (Artificial Intelligence) Remote Control	Diagram of the webOS5.0 Magic Remote. Red circles highlight the Voice recognition button, Settings button, OK (Wheel) button, and the CP (Netflix, Amazon, etc.) button. Red lines connect these buttons to their respective labels: Voice recognition, Settings, OK (Wheel), and External input. The CP button is labeled 'CP (Netflix, Amazon, etc.)'.	Diagram of the webOS6.0 Magic Remote. Red circles highlight the Voice recognition button, External input button, OK (Wheel) button, Settings button, and the CP (Netflix, Amazon, etc.) button. Red lines connect these buttons to their respective labels: Voice recognition, External input, OK (Wheel), Settings, and CP (Netflix, Amazon, etc.).	Diagram of the webOS22 Magic Remote. Red circles highlight the -/LIST button (changed to GUIDE/-), the OK (Wheel) button, and the CP (Netflix, Amazon, etc.) button. Red lines connect these buttons to their respective labels: -/LIST (webOS6.0) changed to "GUIDE/-" (Short key-Long key changed), OK (Wheel), and CP (Netflix, Amazon, etc.). A note indicates: 'Not printed. The wheel (OK) controls Up/Down/Left/Right arrow keys'.
General Remote Control	Diagram of the webOS5.0 General Remote. Red circles highlight the Region button, Settings button, External input button, CP (Netflix, Amazon, etc.) button, and the OK button. Red lines connect these buttons to their respective labels: Region, Settings, External input, CP (Netflix, Amazon, etc.), and OK. The Region button is labeled 'Region'.	Diagram of the webOS6.0 General Remote. Red circles highlight the Region button, External input button, Settings button, CP (Netflix, Amazon, etc.) button, and the OK button. Red lines connect these buttons to their respective labels: Region, External input, Settings, CP (Netflix, Amazon, etc.), and OK. The Region button is labeled 'Region'.	Diagram of the webOS22 General Remote. Red circles highlight the -/LIST button (changed to GUIDE/-), the TV Icon button, and the OK button. Red lines connect these buttons to their respective labels: -/LIST changed to GUIDE/-, TV Icon printed, and OK.


[Home screen] webOS6.0 (2021) vs. webOS22

Home screen


webOS5.0
(2020)

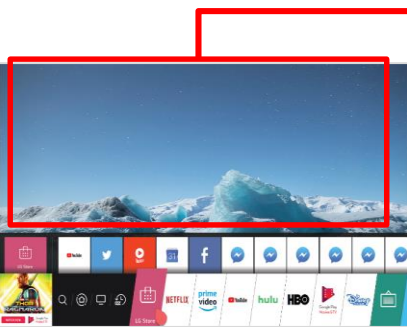

webOS6.0
(2021)

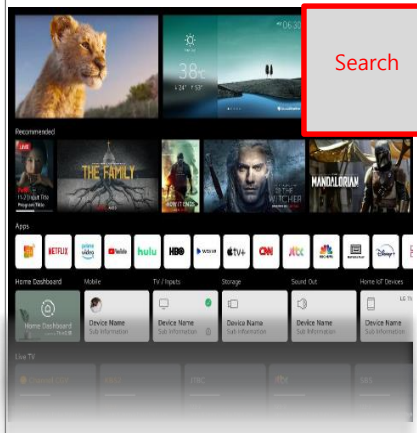

webOS22
(2022)

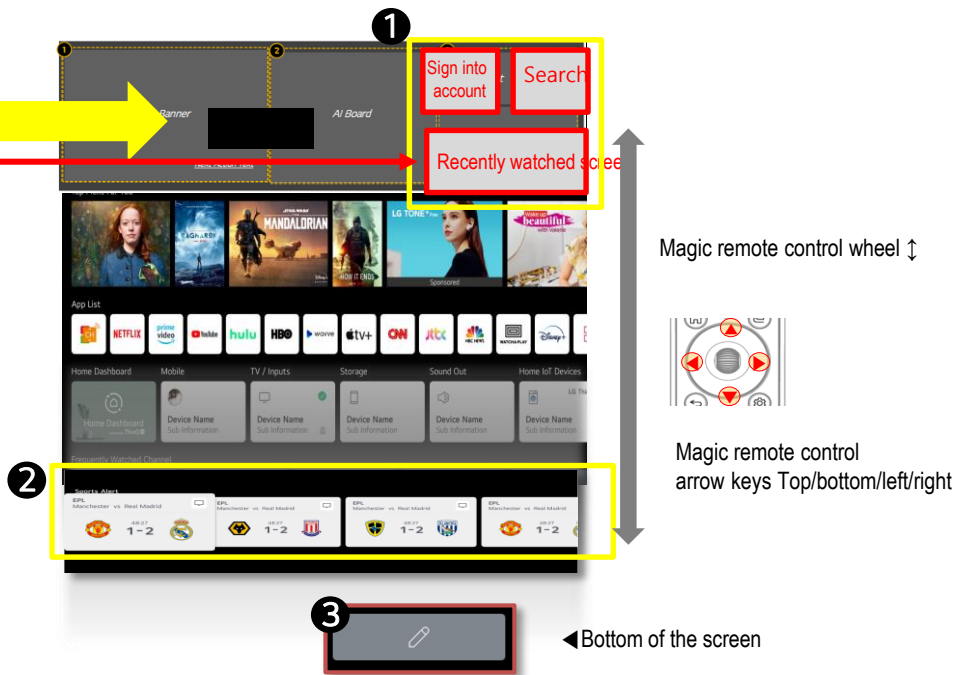

Improved




Created Home Bar at the bottom of the screen


Easy to find OTT content/ programs

- The category can't be edited.
- The layout is full of content.
- I can't watch live TV while using Home.
- There is not much useful content in the top category.

1 Quick verification and account switching
Easy access to Recent Input (including live



2 The selected row is located at the center of the screen and other rows becomes blurred.

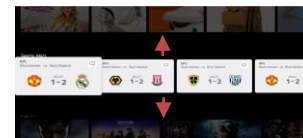

3 Added the category list editing function
→ The order of the top/ bottom of the list has been changed

[Homeboard] List of LG products that can be registered on webOS4.5 ~ webOS22 Home Dashboard

Products	* Push notification supported	Compatibility			
		webOS 4.5 (2019)	webOS 5.0 (2020)	2021 webOS 6.0	2022 webOS22
Refrigerator	O	O	O	O	O
Wine refrigerator	X	Available after SW update in March, 2022	O	O	O
Kimchi refrigerator	O	Available after SW update in March, 2022	O	O	O
Washing machine	O	O	O	O	O
Dryer	O	O	O	O	O
Air conditioner	O	O	O	O	O
Air purifier	O	O	O	O	O
Robot vacuum	O	O	O	O	O
Oven	O	O	O	O	O
Dish washer	O	O	O	O	O
Styler	O	O	O	O	O
Humidifier	O	O	O	O	O
Cook top	X	Available after SW update in March, 2022	O	O	O
Hood	X	Available after SW update in March, 2022	O	O	O
Microwave oven	X	-	O	O	O
Heater	X	Available after SW update in March, 2022	O	O	O
Ceiling pan	X	Available after SW update in March, 2022	O	O	O
Wash tower- Washing machine / Wash tower-Dryer	X	Available after SW update in March, 2022	O	O	O
Aqara Sensor- Door sensor	O	Available after SW update in March, 2022	O	O	O
Aqara Sensor-Motion sensor	O	-	O	O	O
Aqara Sensor-Plug	O	Available after SW update in March, 2022	O	O	O
Aqara Sensor-Temperature /humidity sensor	X	Available after SW update in March, 2022	O	O	O
A9 Stick vacuum	X	Undecided	Undecided	Undecided	SW to be updated in June, 2022

* A notification message sent from the device registered on Homeboard appears on the TV screen while watching TV
E.g.) The air purifier filter needs to be cleaned. The oven is done preheating.

※ For products that are compatible with WebOS, but do not provide the push notification function, only the status information of the product is displayed. The status information differs by each product.



[New function] Explanation on webOS22 TV New function (Features)

Personalized Smart experience

- Home
- AI Recommendation & Sports Alert
- LG ThinQ
-  • **Family Care** 
- Game Dashboard & Game Optimizer

Everyday Life Smart experience

-  • **Always Ready (AOD)** 
-  • **Room to Room Share (Screen link)** 
-  • **Multi View** 
-  • **Remote Desktop PC**
- Magic Remote

- **Family Care:** You can set up a TV screen environment for your children
- Setting up screen time: Set up the start and end time of the TV screen
 - For vision protection: A function that blocks blue light
 - For hearing protection: Limit the maximum volume of the TV to protect your children's hearing
 - Screen time analysis: TV Monitoring total TV screen time and app usage list

- **Always Ready:** It provides various everyday life services even when you are not watching TV
- : This function allows a screen to switch to standby mode when the TV is turned off when not in use and provides art frames on the screen. It also enables to play music from a smartphone through a Bluetooth connection. Even when the background screen is off, you can use the voice recognition function when you say, "Hi LG".

- **Multi View:** Two screens at the same time
- : You can watch a workout video on the main screen and observe yourself exercising using the camera app on the other screen at the same time.


- **Room to Room Share (Screen link):** After connecting your LG TVs at home, you can watch the video that was only connected to the set-top box in the living room with the TV in your room. For example, even when the set-top box is installed only in the living room, you can use the screen link function to bring up the living room TV screen directly to your bedroom TV to watch the drama. The TV that transmits the screen automatically turns off. With the TV that receives the screen, you can easily watch the programs of your choice by controlling it with remote control.

- **Remotely connected to the PC in the office (Remote Desktop PC)**
- : By accessing to the PC in the office, you can work from home more efficiently with the big TV screen at home.




WebOS22 New feature: Family Care


© Access: Settings> General> Family Car

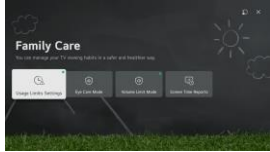


※ All functions on the Family Care app operate on a device-by-device basis regardless of login status

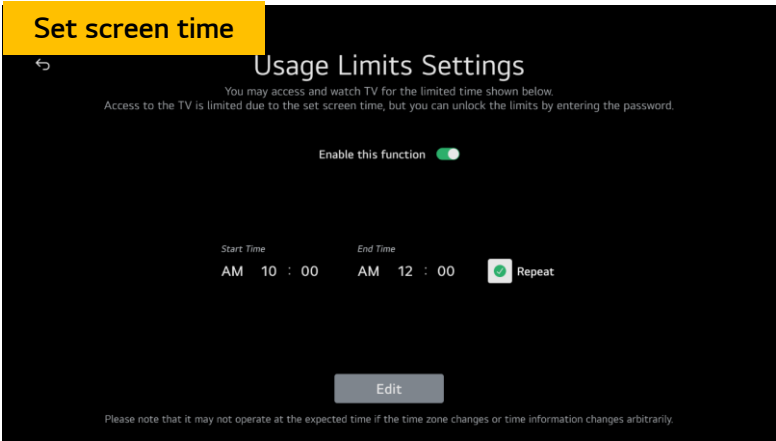

- You can only watch TV for the available screen time.
 - After the screen time is over, the password window will pop up, making it unable to watch TV.
- (If you don't enter the password within 2 minutes, the power will turn off)

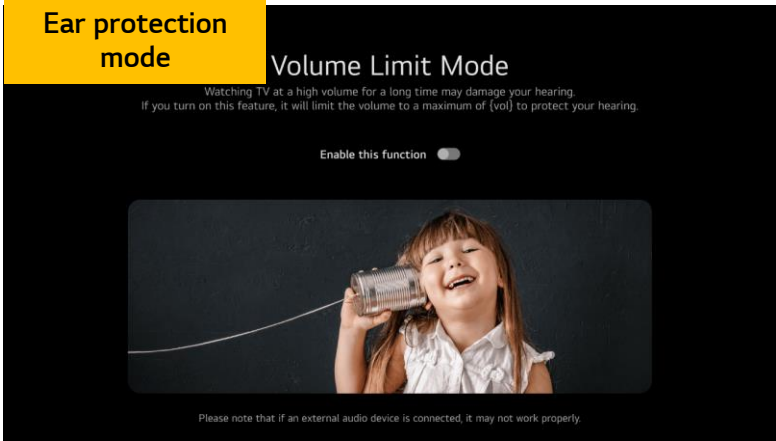


- It sets a maximum volume limit to protect your hearing.
- Even if your child presses the remote control mistakenly, the volume won't go above 60.

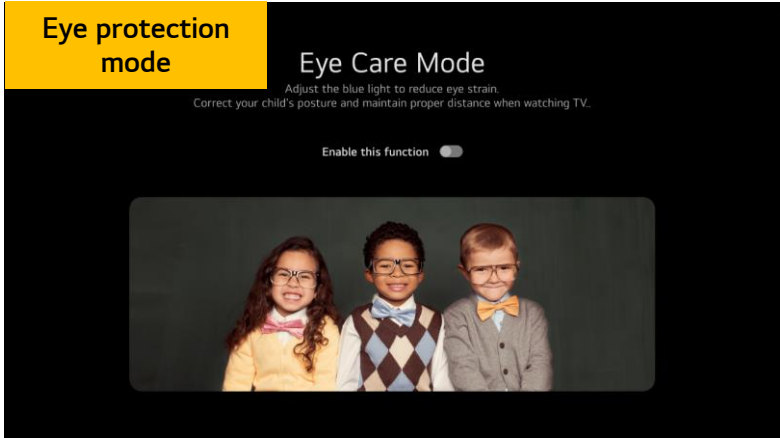

- This is a function that **reduces blue light** to prevent eye fatigue and vision loss when watching TV.

* This is not function that automatically turns off TV when you get close to the screen

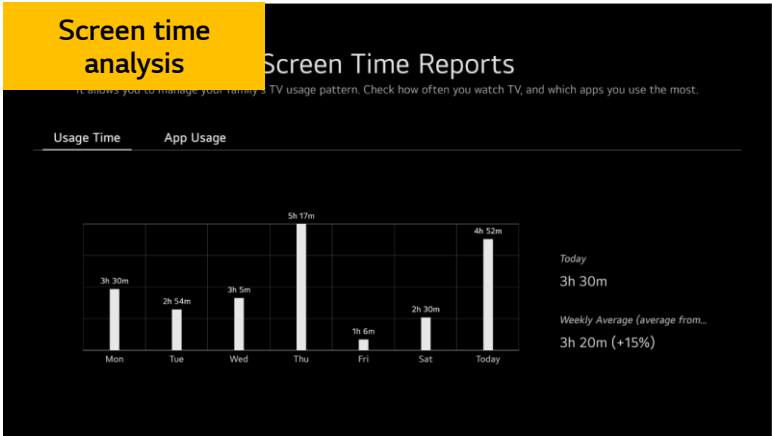

- The usage of screen time shows in a bar graph
- It provides not only total TV screen time, but also daily/ weekly screen time for each app.


WebOS22 New Feature: Always Ready

Use your TV as AI speaker and art frame when not in use

© Access: Settings> General> Standby Mode


Initial settings: Off: When power OFF after an initial installation, a message pops up three times (After that, no message appears)

※ To enter Background Mode, the TV must be turned on using Artificial Intelligence (AI) remote control

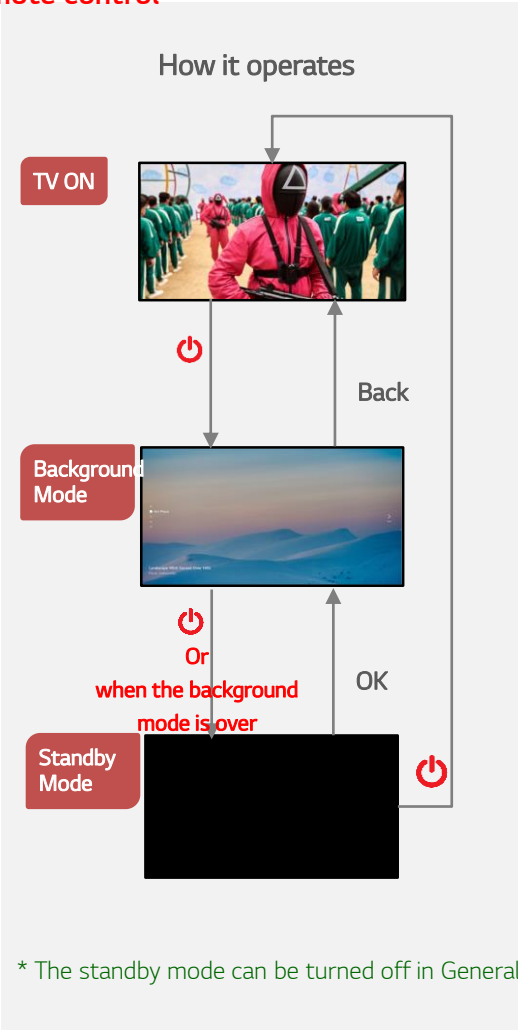


Background Mode

- 1 Art gallery (7 themes)
- 2 Movements (Video Clips)
- 3 Photo (at least 16 photos need to be registered) (USB/ LG ThinQ app)
- 4 Music (USB, BT sharing)
- 5 Clock (Time & Weather)

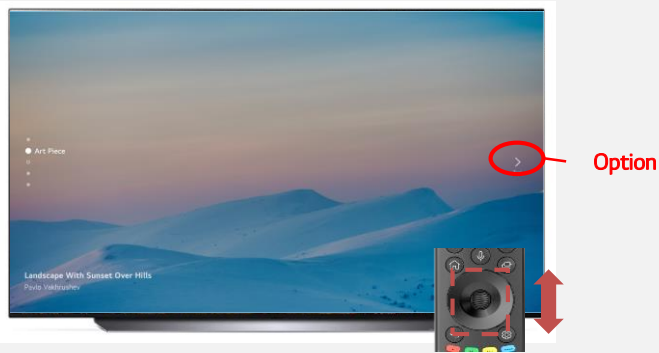



Use the wheel or top/bottom arrow keys to switch themes

Standby Mode: Voice recognition available

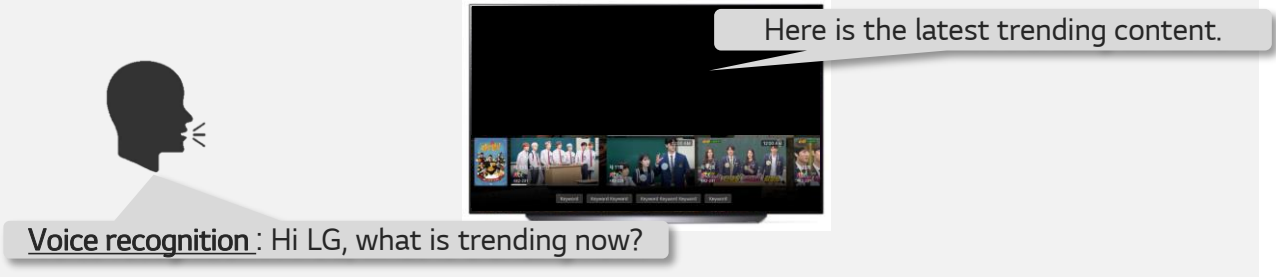

Q1. How much electricity does my TV consume in Background Mode or Standby Mode?	
Q2. Are there any required formats for image file size and extensions?	
Q3. Is it possible to change the settings for the standby mode timer?	
Q4. The screen brightness in the standby mode is too bright at night	

Connecting your TV at other room through Wi-Fi and watch content wirelessly

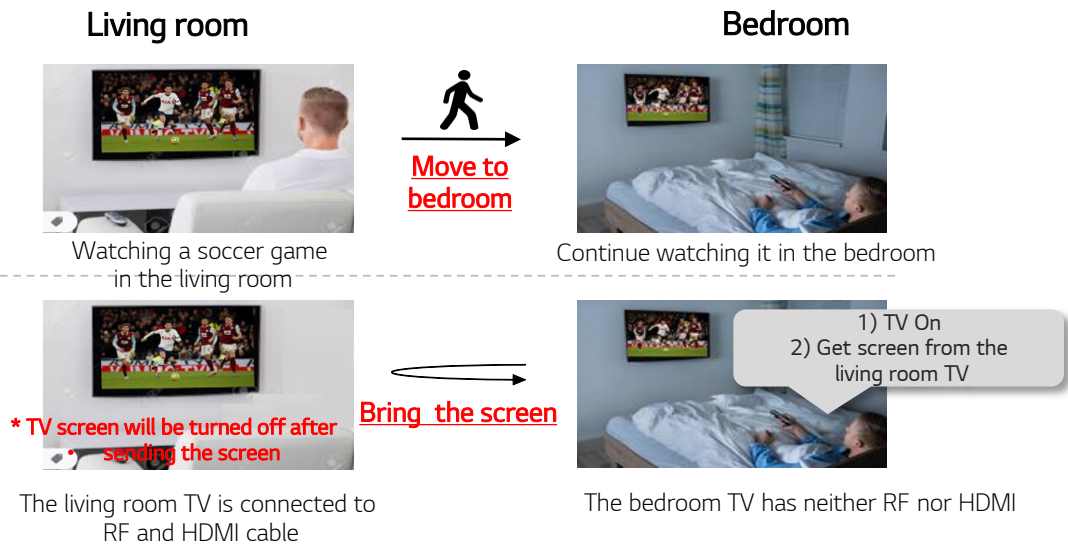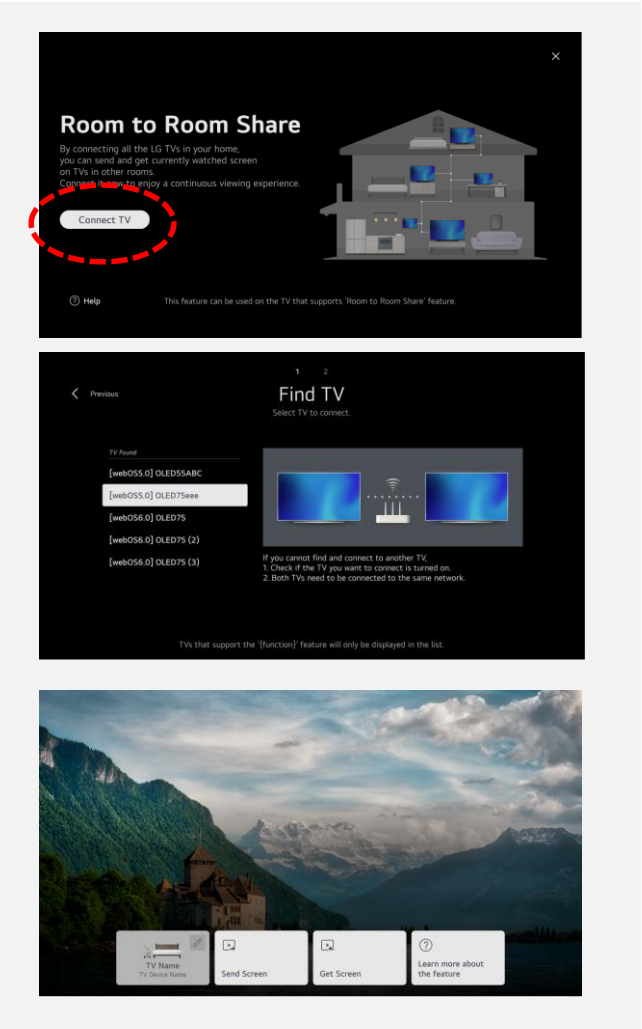


What TV models support this function?	" Send Screen" available TV : Z2, G2, C2, QNED99/95 " Get Screen" available TV : All LG TV models launched in 2022
The screen quality on the TV is not good.	During the screen transmission process, the original image is compressed and then data is transmitted through a wireless network. There is a possibility that the quality of some images may be degraded during the process. In addition, there may be differences in image quality depending on the quality settings and panel specifications of the receiving TV. In the process of video data being transmitted through the network, poor video quality and corrupted video screens may occur when there is network traffic.
When using Sending Screen or Receiving Screen, a message that says 'Connect IR Blaster' pops up.	
My OLED TV suddenly turns on and off by itself	
When mirroring through the Room to Room app, I can't see the subtitle or set-top settings menu.	
When using Sending Screen or Receiving Screen, a message that says 'Set up a remote control' pops up.	

* TVs that are connected to the same Wi-Fi AP can be synced

WebOS22 New Feature: Multi View


Two screens at the same time

Quick settings– Launch Multi View

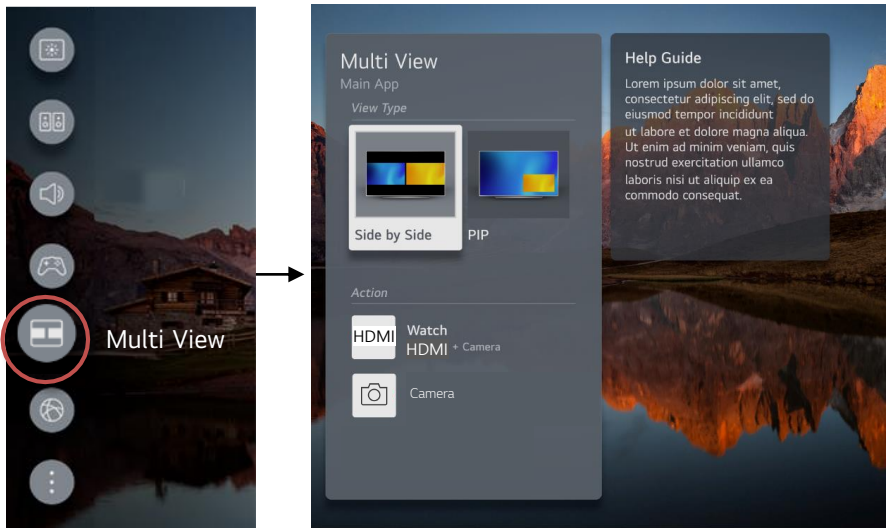

Side by Side mode

PIP mode

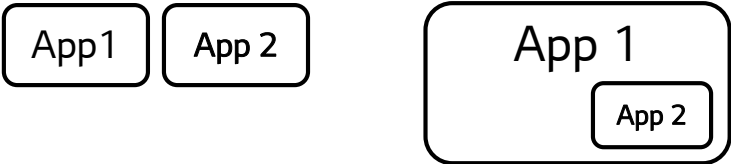


App 1 \ App 2	App 2		
	USB Camera	Screen share Miracast	Spotify
Live TV	●	●	○
HDMI	●	●	○
Gallery	-	-	●

- Q1. I can't open an application using Multi View. ▶
- Q2. Unable to run the combination of apps supported by Multi View. ▶
- Q3. The app forcibly closes while Multi View is running. / Suddenly released. ▶
※ Resolution/Audio Spec restrictions
- Q4. I can't launch Multi View in the game dashboard. ▶
- Q5. Screen Saver automatically starts when no movement is detected for 30 minutes while watching videos using Multi View, (OLED)

WebOS22 New Feature : ThinQ

Mobile ThinQ App has been updated with most used features

ThinQ app > Home

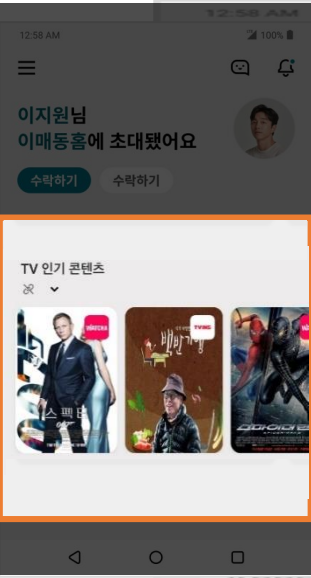

TV 인기 콘텐츠


Apps

Inputs

TV popular content

- TV will be automatically switched to the content provider screen
- Sending to TV only works if your mobile device and TV are on the same network
- Content search is always supported.

ThinQ app > TV

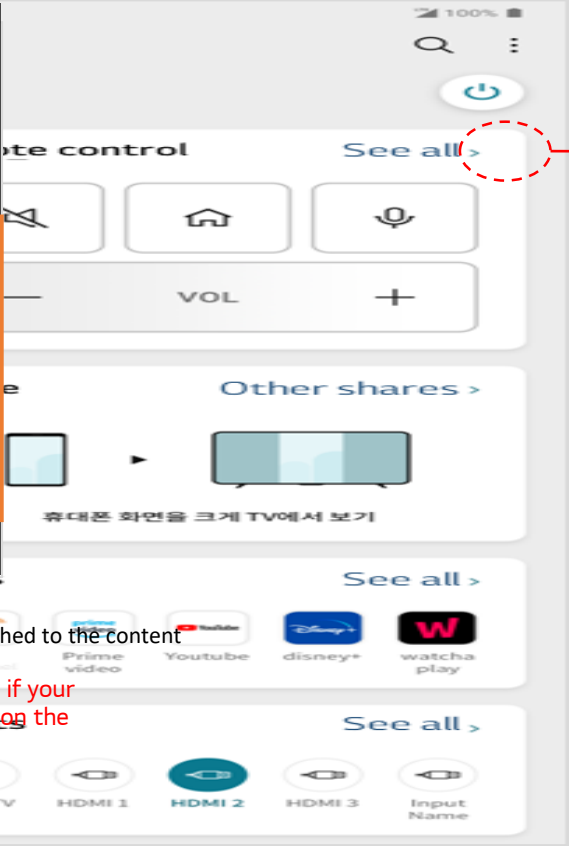

remote control

Other shares >

Recently used app

Live TV / Switch input

Basic function

To open other remote control functions, click 'See All'

Share TV ↔ Mobile

- Mobile screen mirroring
- TV mobile sound
- TV mobile content
- TV playback sound

AI Remote Control

Pointer/ Arrow keys operation


* Supports webOS4.5 or higher version

WebOS22 New Feature: Always Ready FAQ

Q1. How much electricity does my TV consume in Background Mode or Standby Mode?	1) Wallpaper mode: It is difficult to give you the exact number because it depends on each TV inch and each wallpaper mode functions. When setting up the art gallery wallpaper, the power consumption is similar to when you watch TV. When setting up other functions such as clock/music, it consumes less power than watching TV. 2) Standby mode: It consumes 5W power. (※For OLED C Series: 10W)	
Q2. Are there any required formats for image file size and extensions?	At least 16 photos need to be registered, and they are displayed in order. There is no capacity limit and any photos that are displayed normally on TVs/mobile devices can be set. ※ For transferring mobile photos using the ThinQ app only works for Android. (It will be available for Apple after updating MR)	
Q3. Is it possible to change the settings for the standby mode time?	Standby Mode Time-Off: Set 30 minutes as default → Can change to 60 minutes / 120 minutes ※ For G2 model, it switches on/off by motion sensor	1) Enter 'Remote Control Confirmation Key (Wheel)' on the standby mode 2) Select the arrow in the right center of the screen (Optional) 
Q4. On the standby mode, the screen is too bright at night	By enabling the illuminance sensor, you can set the settings so the brightness automatically becomes darker in darker environments.	3) In the upper right corner, Select 'Settings'  4) Select 'Settings' on the upper right corner - Receive notifications - Turn off screen - Slide show speed - Screen on time setting - Enable Illuminance sensor

CIC Guide

Title	When using Sending Screen or Receiving Screen, a message that says 'Connect IR Blaster' pops up					Korea(✓) Overseas(✓) CIC agent(✓) Customer()
Product type	TV	Product	All	Model	All webOS TV models launched before 2022	Troubleshooting(✓) Operation() Installation(✓)
Category	It is difficult to set the universal remote control to use the Room-to-Room function.	Inquiry			I want to send/receive the TV screen connected to the set-top box using the Room-to-Room function. 1) I'm not quite sure how to set the universal remote control.	
Inquiry & Reason	■ Inquiry: A customer wanted to send/receive the TV screen connected to the set-top box using the Room-to-Room function, but a message that says 'Set the universal remote control' pops up. <i>※How the universal remote control works with the Room-to-Room function</i> ■ Reason: It is difficult to understand how to set the universal remote control					
Caution & Explanation	1) To send/receive an external device screen using the Room-to-Room function, the universal remote control must be set. (Settings-> All settings-> General-> General-> Managing TV & External device-> External device settings-> Universal remote control settings) 2) If the universal remote control is not set, you can't send/receive an external device screen.					
Customer Service Guide	■ Connect the external device you wish to use with the universal remote control function to a TV using an HDMI cable. The TV recognizes the connected device and automatically sets the universal remote control function. (Applicable for some device). After completing the setting, the below message will be displayed in the upper right corner of the TV screen. ■ If the universal remote control function is not automatically set, the below message will pop up in the upper right corner of the screen. By following the steps below, you can manually set the universal remote control. ※ Settings-> All settings-> General-> General-> Managing TV & External device-> External device settings-> Universal remote control settings-> Connecting device-> Device type-> Select input terminal-> Select STB operator or manufacturer (If not in the list, search and select) -> Test remote control operation (Follow the guideline on the screen) -> Completed					

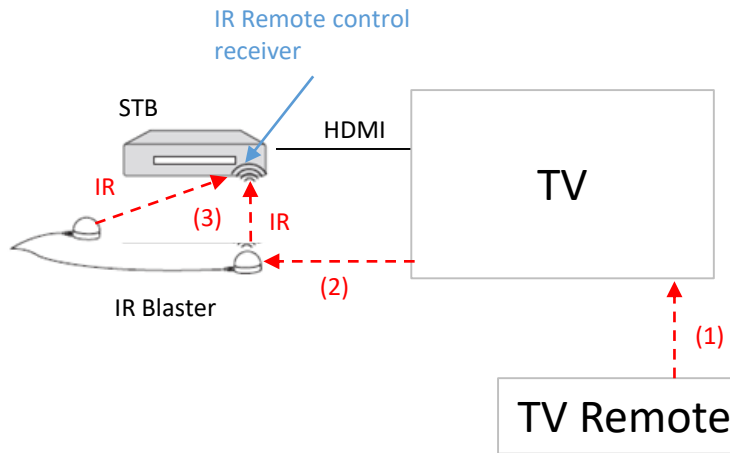


❖How the universal remote control works

1. How it works


- Using TV remote control, enter CH Up/Down to TV (1)
- Sender TV transmits the IR data corresponding to STB to IR Blaster (2)
- IR Blaster sends CH Up/Down signal to STB (IR) (3)
- (Note) When setting the universal remote control, the IR data on the remote control connected to STB can be downloaded to TV.
 - It is to show how STB can be controlled with a TV remote control

❖How the universal remote control works with the Room-to-Room function

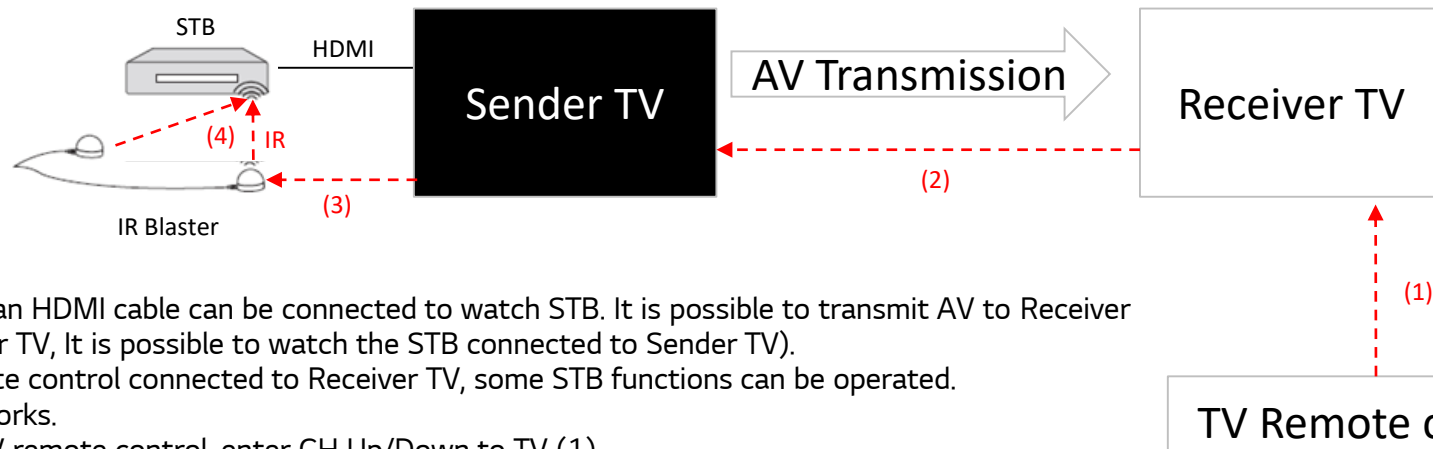

- For Sender TV, an HDMI cable can be connected to watch STB. It is possible to transmit AV to Receiver TV. (On Receiver TV, It is possible to watch the STB connected to Sender TV).
- Using the remote control connected to Receiver TV, some STB functions can be operated.
- This is how it works.
 - Using TV remote control, enter CH Up/Down to TV (1)
 - Transmit CH Up/Down signal from Receiver TV to Sender TV (2)
 - Sender TV transmits the IR data corresponding to STB to IR Blaster (3)
 - Send CH Up/Down signal from IR Blaster to STB (IR) (4)
- Set the universal remote control settings only for Sender TV
- When controlling STB using the TV remote control connected to Sender TV, the Room-to-Room share function is disconnected. The sender TV screen turns on and it starts to work as a usual TV.

CIC Guide

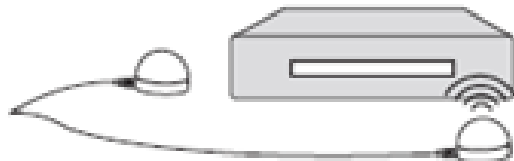Title	When Sending/ Receiving TV, a message that says 'Set the universal remote control' pops up.					Korea(✓) Overseas(✓) CIC agent(✓) Customer()
Product type	TV	Product	All	Model	All webOS TV models launched before 2022	Troubleshooting(✓) Operation() Installation(✓)
Category	It is difficult to set the universal remote control to use the Room-to-Room function.	Inquiry			I want to send/receive the TV screen connected to the set-top box using the Room-to-Room function. 1) I'm not quite sure how to set the universal remote control.	
Inquiry & Reason	■ Inquiry: A customer wanted to send/receive the TV screen connected to the set-top box using the Room-to-Room function, but a message that says 'Set the universal remote control' pops up. ■ Reason: Unable to install IR Blaster properly.					
Caution & Explanation	1) To send/receive an external TV screen using the room-to-room function, IR Blaster must be connected to the TV. 2) If IR Blaster is not connected, the set-top TV screen cannot be sent/received. (If there is no IR Blaster available, it is impossible to use other functions such as changing TV channels even after sending the set-top TV screen.)					
Customer Service Guide	■ Connecting IR Blaster and User Guide Connect the IR Blaster cable to the IR Blaster port on the back of the TV - Place both ends (one or two) of the IR Blaster in front of the external device remote control receiver (usually located in front of the device). 					



CIC Guide

Title	My OLED TV suddenly turns on and off by itself.					Korea(✓) Overseas(✓) CIC agent(✓) Customer()
Product type	TV	Product	All	Model	All webOS TV models launched before 2022	Troubleshooting(✓) Operation() Installation(✓)
Category	My OLED TV suddenly turns on and off by itself	Inquiry			My TV in the living room suddenly turns on and off by itself. 1) My TV in the living room suddenly turns on and off by itself and the screen goes black when watching TV.	

Inquiry & Reason	■ Inquiry: My TV in the living room suddenly turns on and off by itself and the screen goes black when watching TV. ■ Reason: The screen of the Sender TV is off during room-to-room mirroring. When the receiver TV is off, it may look like the TV turns on and off by itself because the power must be ON first.					
Caution & Explanation	1) When the receiver TV is off, it may look like the TV turns on and off by itself because the power must be ON first. 2) By turning off the 'Turn on the TV using Wi-Fi' function, the TV won't turn off suddenly. However, when the TV is off, you can't receive the screen from other TVs.					
Customer Service Guide	■ Please don't be surprised. The TV turns on to do screen mirroring with other TVs in the house. After the TV turns on, a message indicating that other TVs in the house will do screen mirroring the TV will be displayed. If you don't want to send the screen, click 'Cancel' in the below message to stop the mirroring. {Receiver TV} would like to receive the screen. To send the TV screen, the screen will turn off in a moment. Cancel ■ If you don't want other TVs in the house to turn on the TV, please turn OFF the 'Turn on the TV using Wi-Fi' function. Settings-> All settings -> General-> Managing TV and external device-> External device settings-> Turn on the TV using mobile device-> Turn on the TV using Wi-Fi : OFF ※ When [Turn on the TV using Wi-Fi] is OFF, there may be restrictions on other functions. -Turning on the TV on ThinQ App / AirPlay / Youtube, etc					

CIC Guide

Title	I can't see subtitles or set-top settings menu when mirroring through the room-to-room app.					Korea(✓) Overseas(✓) CIC agent(✓) Customer()
Product type	TV	Product	All	Model	All webOS TV models launched before 2022	Troubleshooting(✓) Operation() Installation(✓)
Category	I can't see subtitles or set-top settings menu when mirroring through the room-to-room app.	Inquiry			There are some missing features after mirroring my TV through the room-to-room app. 1) Before mirroring my TV, I was able to see subtitles, but after the mirroring, I can't see any of them on the TV. 2) Before mirroring my TV, I was able to see set-up menus, but after the mirroring, I can't see any of them on the TV.	
Inquiry & Reason	■ Inquiry: Before the mirroring, I was able to see subtitles and set-up menus, but after the mirroring, I can't see any of them on the TV. ■ Reason: When mirroring, only the video data is transferred through the room-to-room app. If video data doesn't include subtitles, set-top menus, etc., such information won't be displayed.					
Caution & Explanation	1) When receiving the TV screen through the room-to-room app, only the video information of the sender TV will be transferred. So, only the video screen will be displayed and subtitles or menus aren't available.					
Customer Service Guide	■ When receiving the TV screen through the room-to-room app, only the video information of the sender TV will be transferred. Subtitles are separated from the video information. Therefore, they aren't provided. ※ Even if you set the subtitle function on the receiver TV, it won't show any subtitle. ■ When receiving the TV screen through the room-to-room app, only the video information of the sender TV will be transferred, the menus won't be displayed. ※ Keys that work with Receiver TV - Power - Channel Up/Down - Volume Up/Down - Number buttons - (AI remote control) wheel If you want to change the settings of the connected external device, please change the settings on the TV to which the external device is connected after exiting the room-to-room function. (mirroring).					

CIC Guide_Multi View

Title	I can't open my app on Multi View					Korea(✓) Overseas(✓) CIC agent(✓) Customer()
Product type	TV	Product	LED TV	Model	WebOS 22 Multi View support models	Troubleshooting (✓) Operation () Installation ()
Category	Multi View function	Inquiry			Apps won't open on Multi View	

Symptom	Many apps installed on the TV (e.g. Netflix, Amazon Prime Video, Disney+, etc.) can't be launched on Multi View. (I can't find my apps on Multi View.)					
Explanation	For webOS 22, only some of the apps that are installed on TV works with Multi View.					
Customer Service Guide	Please note that only the combinations of the apps mentioned below work with Multi View.					
	App 1 (Left-side of split screen mode, the big screen on PIP mode)		App 2 (Right-side of split screen mode, the smaller screen on PIP mode)			
	Live TV ※ Not applicable to China/ Hong Kong products		Screenshare(Miracast) Camera			
	HDMI		Screenshare(Miracast) Camera			
	Gallery		Spotify			

Split screen mode

App1App 2

PIP mode

App 1App 2

CIC Guide_Multi View

List of Multi View support models

SoC	O22 + F22	O22	K8Hp
Model Name	OLEDXXZ2 & its derivative model XXQNED99 & its derivative model XXQNED96 & its derivative model XXQNED95 & its derivative model	OLEDXXG2 & its derivative model OLEDXXC2 & its derivative model OLEDXXCS & its derivative model	OLEDXXB2 & its derivative model OLEDXXA2 & its derivative model XXQNED91 & its derivative model XXQNED90 & its derivative model XXQNED87 & its derivative model XXQNED86 & its derivative model XXQNED85 & its derivative model XXQNED82 & its derivative model XXQNED81 & its derivative model XXQNED80 & its derivative model XXNANO79 & its derivative model XXNANO76 & its derivative model XXNANO75 & its derivative model XXUQ91 & its derivative model XXUQ90 & its derivative model XXUQ80 & its derivative model

Guide



CIC Guide_Multi View

Title	The combinations of the apps supported by Multi View won't work.					Korea(✓) Overseas(✓) CIC agent(✓) Customer()
Product type	TV	Product	LED TV	Model	WebOS 22 Multi View support models	Troubleshooting (✓) Operation () Installation ()
Category	Multi View function	Inquiry			The combinations of the apps supported by Multi View won't work.	

Symptom	The combinations of the apps supported by Multi View won't work and a message indicating that it is unable to launch appears.				
Explanation	Depending on the content you are watching, there may be some restrictions on launching Multi View				
Customer Service Guide	If a user is watching the content below, Multi View cannot be launched.				
	Apps in use	Content being played	Apps you want to use on Multi View	Guide	
	Live TV	8K broadcast 4K high frame (HFR) broadcast Data broadcasting is running Audio Description Video is recording	TVScreenshare(Miracast) Camera	You can't launch the channel you are watching and Multi View at the same time. Try again after changing to other channels, closing the data broadcast, or turning off the audio description.	
	HDMI	Dolby Vision signal 4K High Frame(HFR) signal 8K signal Dolby MAT audio signal Dolby TrueHD audio signal	TVScreenshare(Miracast) Camera	You cant run the HDMI input you're watching and Multi View at the same time. On HDMI devices, try again after 1) Turning off Dolby Vision, 2) Turning off the high frame mode 3) Setting the output resolution to 4K resolution or lower, 4) After setting the audio signal to PCM or AC3	



CIC Guide_Multi View

Title	Multi View is forcibly closed.					Korea(✓) Overseas(✓) CIC agent(✓) Customer()
Product type	TV	Product	LED TV	Model	WebOS 22 Multi View support models	Troubleshooting (✓) Operation () Installation ()
Category	Multi View function	Inquiry			Multi View is forcibly closed.	

Symptom	When running two apps on Multi View, it suddenly shuts down and only one app takes up full screen.
---------	--

Explanation	Depending on the content you are watching, Multi View may be forcibly closed.
-------------	---

Customer Service Guide	The combinations of the apps		Is forcibly closed when	Guide
	Live TV	TVScreenshare(Miracast) Camera	On Live TV 1. Switch to 8K channels 2. Switch to 4K high frame channels 3. Audio description ON 4. Scheduled screen recording starts	You can't launch the channel you are watching and Multi View at the same time. Try again after changing to other channels, closing the data broadcast, or turning off the audio description.
	HDMI	TVScreenshare(Miracast) Camera	On HDMI devices 1. Dolby Vision signal ON 2. 4K high frame (HFR) signal ON 3. Change the screen resolution to 8K, or Dolby MAT/Dolby TrueHD audio signal ON	You can't run the HDMI input you're watching and Multi View at the same time. On HDMI devices, try again after 1) Turning off Dolby Vision, 2) Turning off the high frame mode 3) Setting the output resolution to 4K resolution or lower, 4) Setting the audio signal to Dolby Digital or AC3



CIC Guide_Multi View

Title	Multi View doesn't work on the game dashboard.					Korea(✓) Overseas(✓) CIC agent(✓) Customer()
Product type	TV	Product	LED TV	Model	WebOS 22 Multi View support models	Troubleshooting (✓) Operation () Installation ()
Category	Multi View function	Inquiry			Multi View doesn't work on the game dashboard.	
Symptom	I wanted to run Multi View while playing a game, but it didn't work.					
Explanation	Multi View may not run depending on the game controller settings on the latest game controller (Xbox Series X and Playstation 5).					
Customer Service Guide	If your game controller settings are set as below, Multi View might not be working.					
	Type		Game controller settings		Guide	
	Video		Dolby Vision On Screen resolution settings: 4K 120Hz Variable Refresh Rate : On		Multi View is not available in the current game controller settings. On the settings, you can try again after turning off Dolby Vision, setting the resolution to 4K 60Hz or lower, or turning off Variable Refresh Rate.	
	Audio		Dolby MAT audio signal Dolby TrueHD audio signal		Multi View is not available in the current game controller settings. On the game controller settings, you can try again after setting the audio signal to Dolby Digital or AC3.	



