



LG

Life's Good

CONFIDENTIAL

WASHING MACHINE SERVICE MANUAL

⚠ CAUTION

READ THIS MANUAL CAREFULLY TO DIAGNOSE
PROBLEMS CORRECTLY BEFORE SERVICING THE UNIT.

MODELS : WM3670H*A

Any reproduction, duplication, distribution (including by way of email, facsimile or other electronic means), publication, modification, copying or transmission of this Service Manual is STRICTLY PROHIBITED unless you have obtained the prior written consent of the LG Electronics entity from which you received this Service Manual. The material covered by this prohibition includes, without limitation, any text, graphics or logos in this Service Manual.

Copyright © 2016 - 2017 LG Electronics Inc. All rights reserved. Only training and service purposes.

CONTENTS

1. Specifications	3
2. Features and Technical Explanation	4-6
3. Parts Identification	7
4. Installation and Test	8-10
5. Operation	11-17
5-1. Control Panel Features	11-13
5-2. Cycle Guide	14
5-3. Special Functions	15
5-4. Explanation of Each Process	16-17
6. Test Mode	18
6-1. Safety Caution	18
6-2. Load Test Mode	18
6-3. How To Read the Display in Load Test Mode	18
7. Troubleshooting	19
7-1. Safety Caution	19
7-2. Error Mode Summary	19-20
7-3. Troubleshooting With Error	21-27
7-4. Troubleshooting Else	28-31
7-5. Before using the Tag On function	32
8. Component Testing Information	33
8-1. Filter Assembly (Line Filter)	33
8-2. Door Lock Switch Assembly	34-36
8-3. Stator Assembly	36
8-4. Pump Motor Assembly	37
8-5. Inlet Valve Assembly	38
8-6. Thermistor Assembly	39-40
9. Disassembly Instructions	41-49
10. Exploded View	50-52
10-1. Cabinet and Control Panel Assembly	50
10-2. Drum and Tub Assembly	51
10-3. Dispenser Assembly	52
11. Wiring Diagram	53

1. SPECIFICATIONS

I T E M		WM 3670H*A
COLOR		Blue White, Silver
POWER SUPPLY		AC 120 V, 60 Hz
PRODUCT WEIGHT		196.2lb (89kg)
ELECTRIC POWER CONSUMPTION	WASHING	240 W
	DRAIN MOTOR	80 W
	WASH HEATER	1000 W
REVOLUTION SPEED	WASH	46 rpm
	SPIN	0-1,300 rpm
CYCLES		8
WASH/RINSE TEMPERATURES		5
SPIN SPEEDS		5
OPTIONS		Steam, Pre Wash, Delay Wash, Add Garments, Fresh Care, Cold Wash, Extra Rinse, Rinse+Spin, Water Plus
WATER CIRCULATION		Incorporated
OPERATIONAL WATER PRESSURE		14.5 – 142 PSI(100 – 980kPa)
CONTROL TYPE		Electronic
WASH CAPACITY [cu.ft.]		(4.5 DOE)
DIMENSIONS		27"(W) X 29 3/4"(D) X 38 11/16"(H), 51"(D, door open)
DELAY WASH		up to 19 hours
DOOR SWITCH TYPE		PTC + Solenoid
WATER LEVEL		10 steps (by sensor)
LAUNDRY LOAD SENSING		Incorporated
ERROR DIAGNOSIS		Incorporated
AUTO POWER OFF		Incorporated
CHILD LOCK		Incorporated
SMART		NFC (Tag On function) Smart Diagnosis function (3.0)

▲ WARNING

To reduce the risk of injury to persons, adhere to all industry recommended safety procedures including the use of long sleeved gloves and safety glasses. Failure to follow all of the safety warnings in this manual could result in property damage, injury to persons or death.

2. FEATURES & TECHNICAL EXPLANATION

2-1. FEATURES



■ Ultra Capacity

The larger drum enables not just higher head drop and stronger centrifugal force, but also less tangling and wrinkling of the laundry. Heavier loads, such as king size comforters, blankets, and curtains, can be washed.



■ Direct Drive System

The advanced brushless DC motor directly drives the drum without belt and pulley.



■ Tilted Drum and Extra Large Door Opening

Tilted drum and extra large opening make it possible to load and unload clothing more easily.



■ Automatic Wash Load Detection

Automatically detects the load and optimizes the washing time.



■ Child Lock

The child lock prevents children from pressing any button to change the settings during operation.



Smart
Diagnosis™

■ SMART DIAGNOSIS™

Should you experience any technical difficulty with your washing machine, is capable of producing multiple distinct different motions for optimal washing performance with very little noise and vibration. The motor assembly also contains fewer moving parts, thus resulting in fewer repairs.




Tag On

■ NFC (Tag On Function)

This feature uses LG Smart Diagnosis™, Cycle Download, and Laundry Stats when you touch the LG appliance's Tag On logo with your NFC equipped smartphone.

2-2. NEURO FUZZY WASHING TIME OPTIMIZATION

To get the best washing performance, optimal time is determined by the water temperature, the selected washing temperature, and the size of the load.

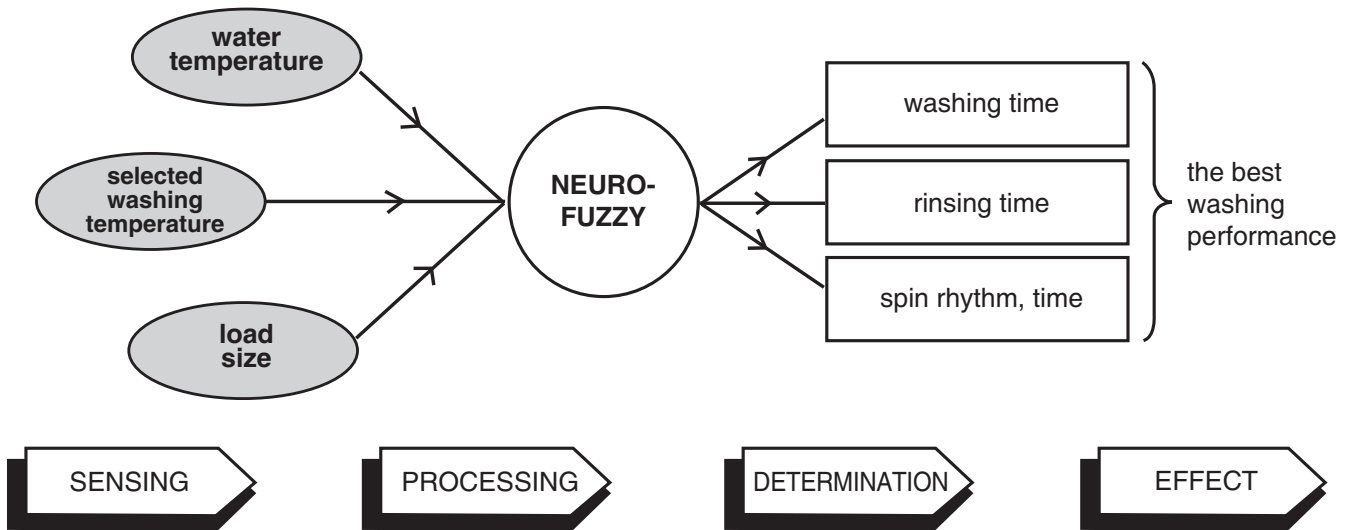

2-3. WATER LEVEL CONTROL

- This model incorporates a pressure sensor which can sense the water level in the tub.
- The water supply is stopped when the water level reaches the preset level, the washing program then proceeds.
- Spinning does not proceed until the water in the tub drains to a certain level.


2-4. DOOR CONTROL

- The door can be opened by pulling the door handle whenever washer is not in operation.
- When the cycle is completed, the DOOR LOCKED light will turn off.
- If a power failure has occurred while in operation, the door will unlock after 5 minutes.
- Clicking sounds can be heard when the door is locked/unlocked.

2-5. THE DOOR CAN NOT BE OPENED

- While program is operating.
- When a power failed and power plug is taken out in operation.
- While Door Lock lights turn on.
- While the motor is in the process of inertial rotating, through the operation is paused.

2-6. CHILD LOCK

- Use this option to prevent unwanted use of the washer. Press and hold Pre Wash button for 3 seconds to lock/unlock control.
- When childlock is set, CHILD LOCK lights and all buttons are disabled except the POWER  button. You can lock the controls of the washer while washing.
- CHILD LOCK lasts after the end of cycle. If you want to deactivate this function, Press and hold the Pre Wash button for 3 seconds.


2-7. NFC (Tag On Function)

- The Tag On function can only be used with smart phones equipped with the NFC function and based on the Android operating system (OS).
- Position your smart phone so that the NFC antenna on the back of your smart phone matches the position of the Tag On icon on the appliance .
- NFC reading performance of your smart phone must be higher than a certain level for using this function.

3. PARTS IDENTIFICATION

Parts and Accessories

Parts

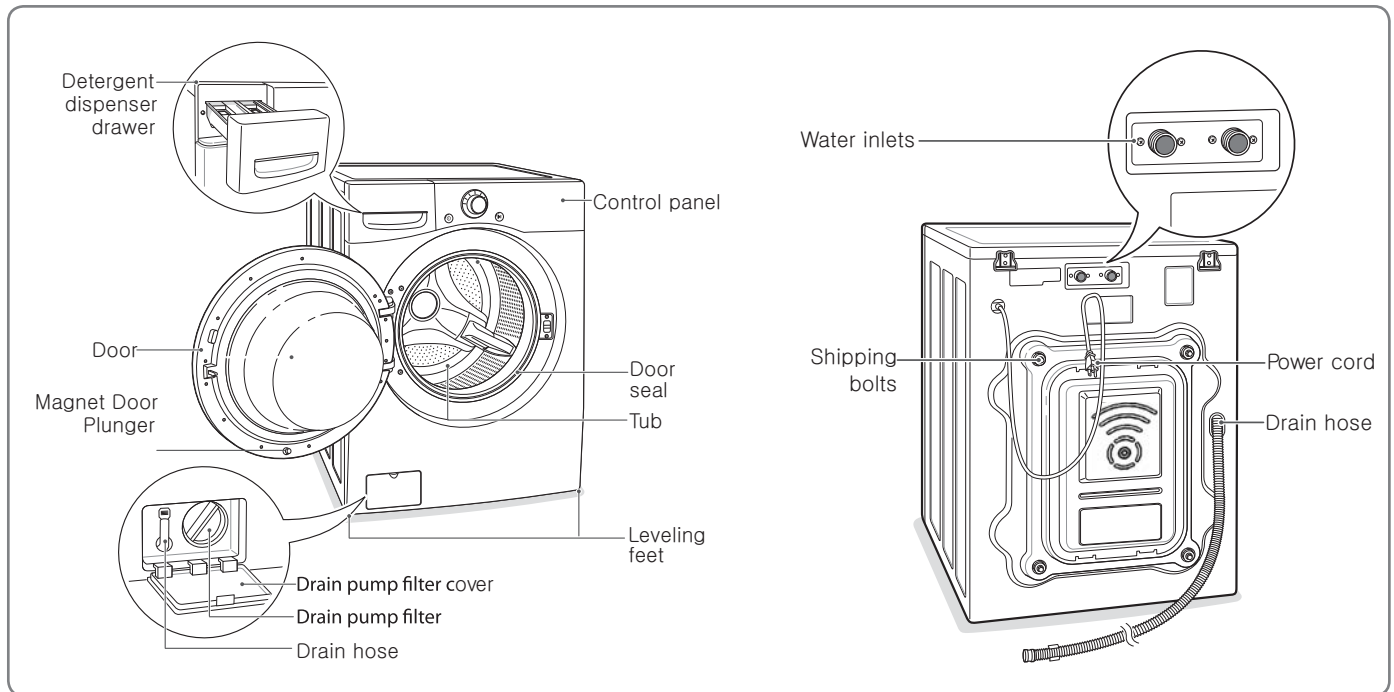

Accessories

Included Accessories



Non-skid pads




Caps for covering shipping bolt holes



Wrench




Tie strap



Elbow bracket (for securing drain hose)

Optional Accessories

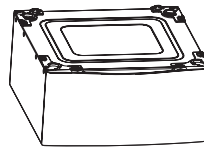

Pedestal (sold separately)



Stacking Kit (sold separately)

Required Accessory (sold separately)



Hot/cold water hoses

• Required accessory is sold separately. It can be ordered through LG Website.
US: www.lg.com/us

Part Number

- 5215FD3715U : Hot water hose
- 5215FD3715V : Cold water hose

NOTE




- Contact LG Customer Service at 1-800-243-0000 (1-888-542-2623 in Canada) if any accessories are missing.
- For your safety and for extended product life, use only authorized components. The manufacturer is not responsible for product malfunction or accidents caused by the use of separately purchased unauthorized components or parts.
- The images in this guide may be different from the actual components and accessories, and are subject to change by the manufacturer without prior notice for product improvement purposes.

4. INSTALLATION & TEST

- 1 Before servicing, ask the customer what the trouble is.
- 2 When installing or repairing the washer, put on long gloves and safety glasses.
- 3 Check the setup (power supply is 120 VAC, remove the transit bolts, level the washer, etc.)
- 4 Check with the troubleshooting guide.
- 5 Plan your service method by referring to the disassembly instructions.
- 6 Service the unit.
- 7 After servicing, operate the appliance to see whether it functions correctly.


■ STANDARD INSTALLATION

The appliance should be installed as follows:

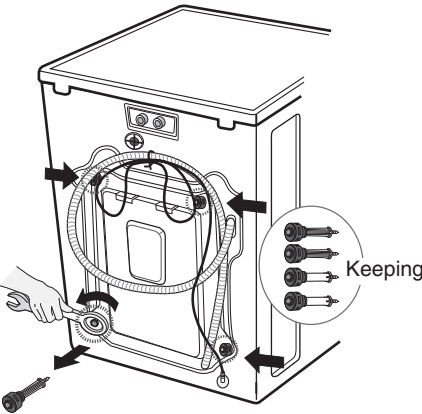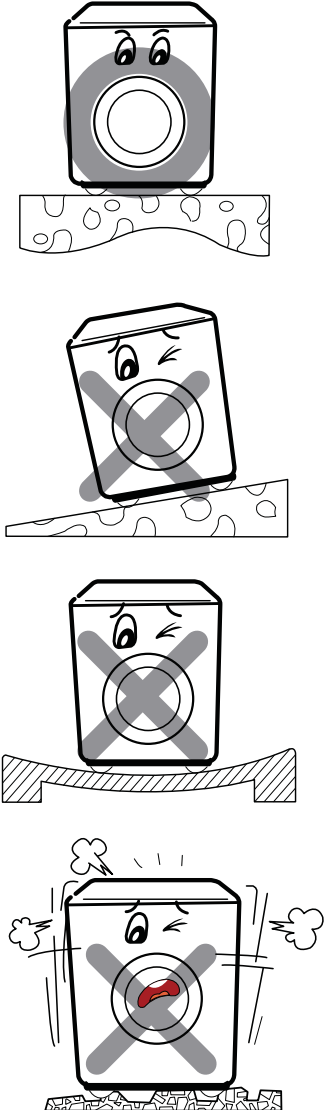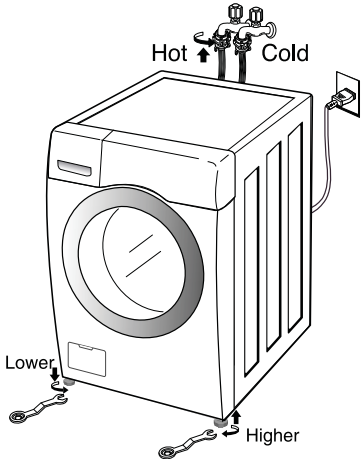
REMOVE THE SHIPPING BOLTS	INSTALL THE APPLIANCE ON A FLAT AND FIRM SURFACE	ADJUST THE LEVELING
<ul style="list-style-type: none"> • Remove the 4 shipping bolts with the supplied wrench. ※ Remove the lower bolts first. It is easier that way. • Keep the shipping bolts and spanner for future use. • Insert the 4 caps (provided) into the hole. 		<ul style="list-style-type: none"> • Turn the leveling feet to adjust the appliance.  <ul style="list-style-type: none"> • Turn clockwise to raise; counterclockwise to lower.

■ HOW TO CONNECT THE INLET HOSE


- Verify that the rubber washer is inside of the valve connector.
- Tighten the inlet hose securely to prevent leaks.
- Install the inlet hose to correct temperature water tap.
Otherwise, it cause drips on the drawer panel handle and drawer panel.

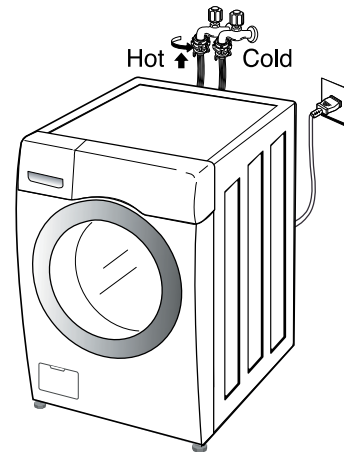

■ CONNECT THE DRAIN HOSE

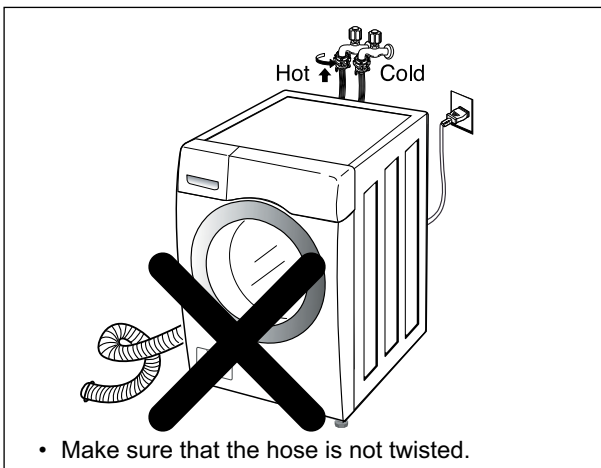


- Make sure that the hose is not twisted.

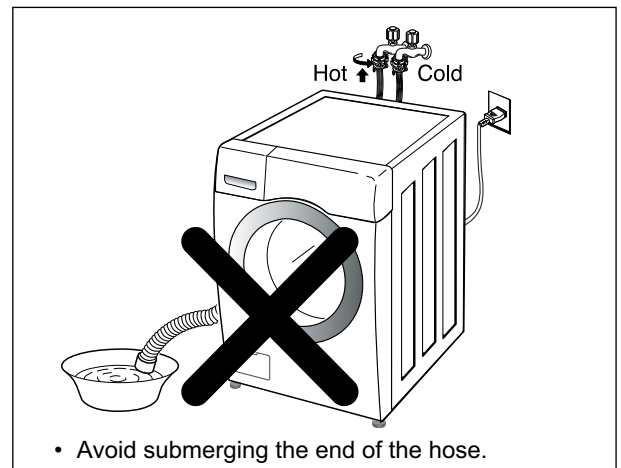


- Avoid submerging the end of the hose.

※ The end of the drain hose should be placed less than 96" from the floor.

■ CONNECT POWER PLUG

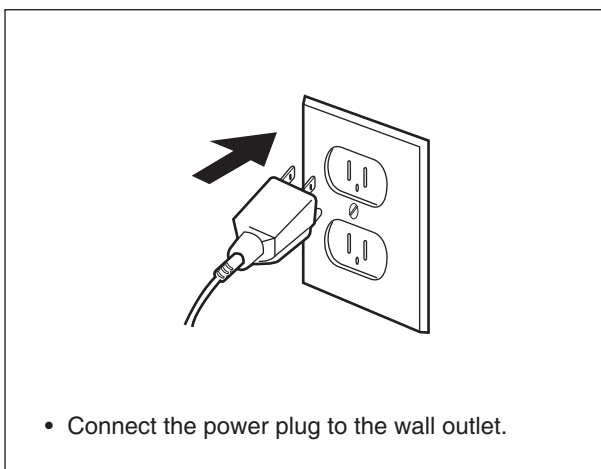


- Connect the power plug to the wall outlet.

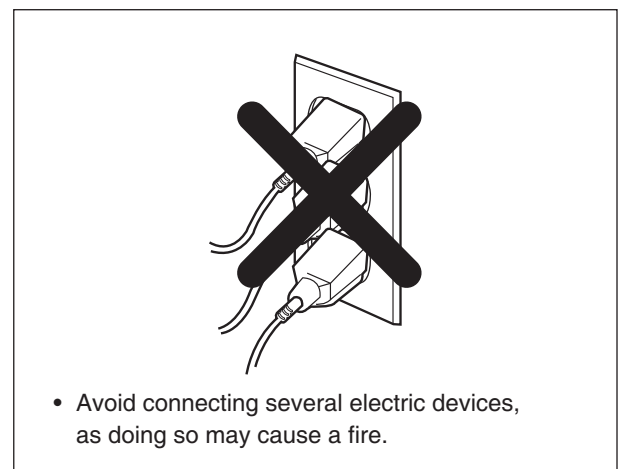

- Avoid connecting several electric devices, as doing so may cause a fire.


7 TEST OPERATION

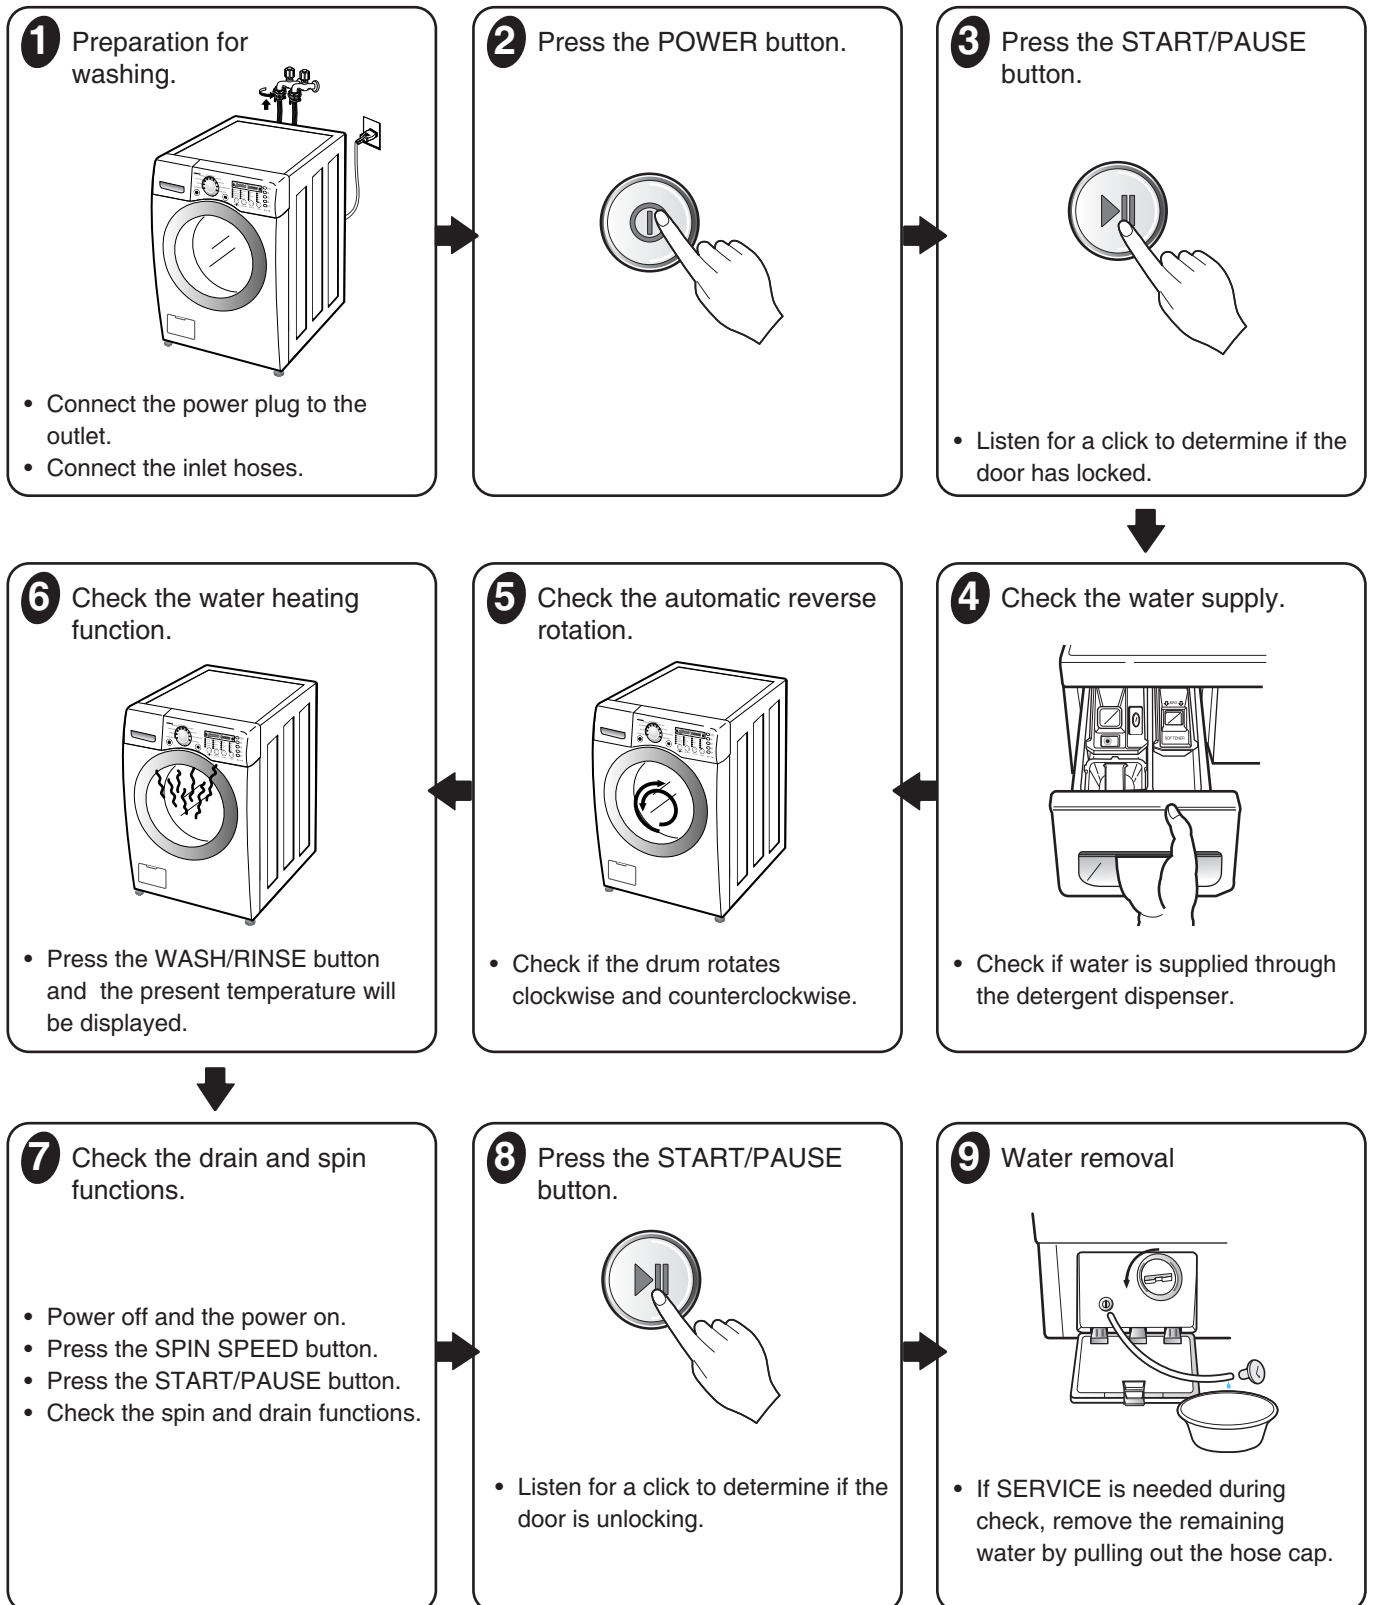

5. OPERATION

5-1. CONTROL PANEL FEATURES

■ WM3670H*A

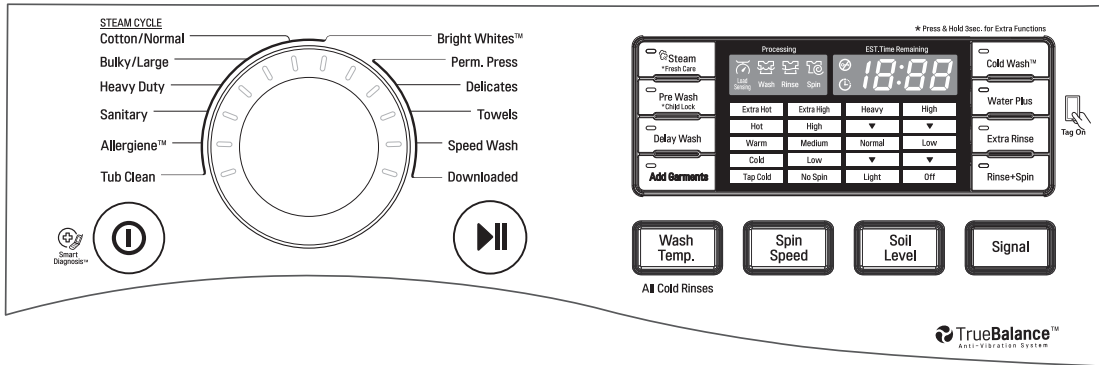


Power Button

- Use this button to turn the power On/Off.

Status Indicator

- It shows elapsed time of the cycle the washer is operating.

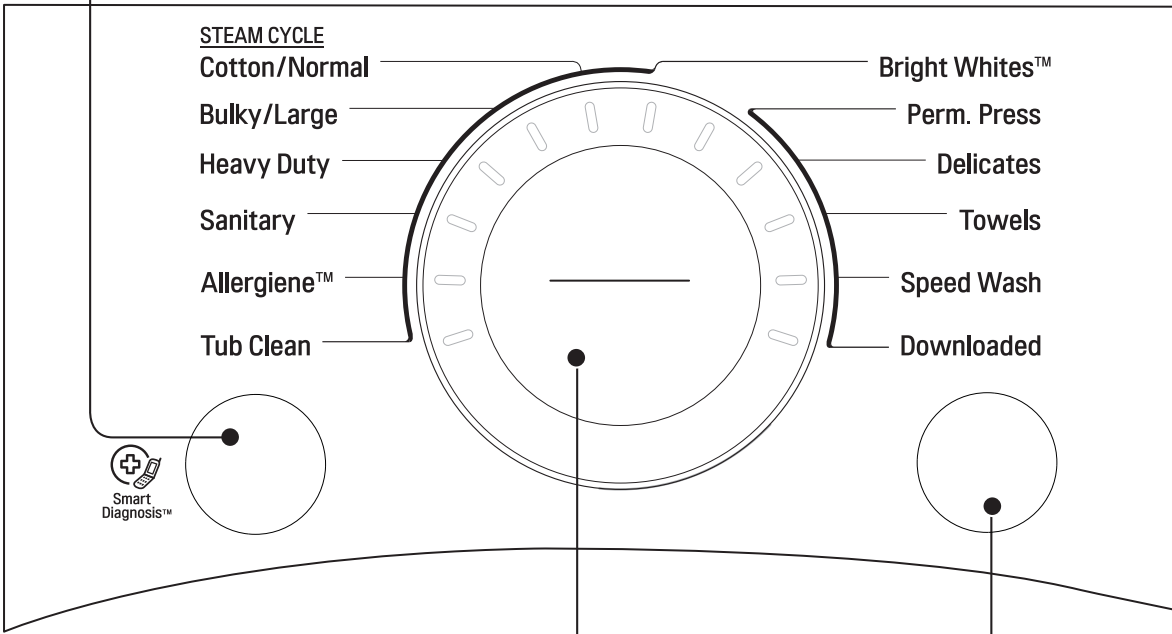

Cycle Selector Knob


- Rotate the Cycle selector knob to select the cycle designed for different types of fabric and soil levels.

Start/Pause

- Use this button to Start/Stop the washer.

Option Button

- Pre Wash : Use the Pre Wash button to select to wash temporary before to start the course which you chosen.
- Delay Wash : Once you have selected the cycle and other settings, press this button to delay the start of the wash cycle.
- Add Garments : Use the Add Garments button to add garments during cycle.
- Cold Wash™ : Use this function to wash without hot water and heating.
- Extra Rinse : This option will add an extra rinse cycle to the selected cycle.
- Rinse+Spin : Use this option to rinse detergent from load.
- Child Lock : Use this option to prevent unwanted use of the washer or to keep cycle settings from being changed while the washer is operating.
- Water Plus : To add water during wash and rinse cycle.
- Fresh Care : Tumbles clothes after cycle finishes to prevent wrinkles.
- Steam : Use this option for extra cleaning power.

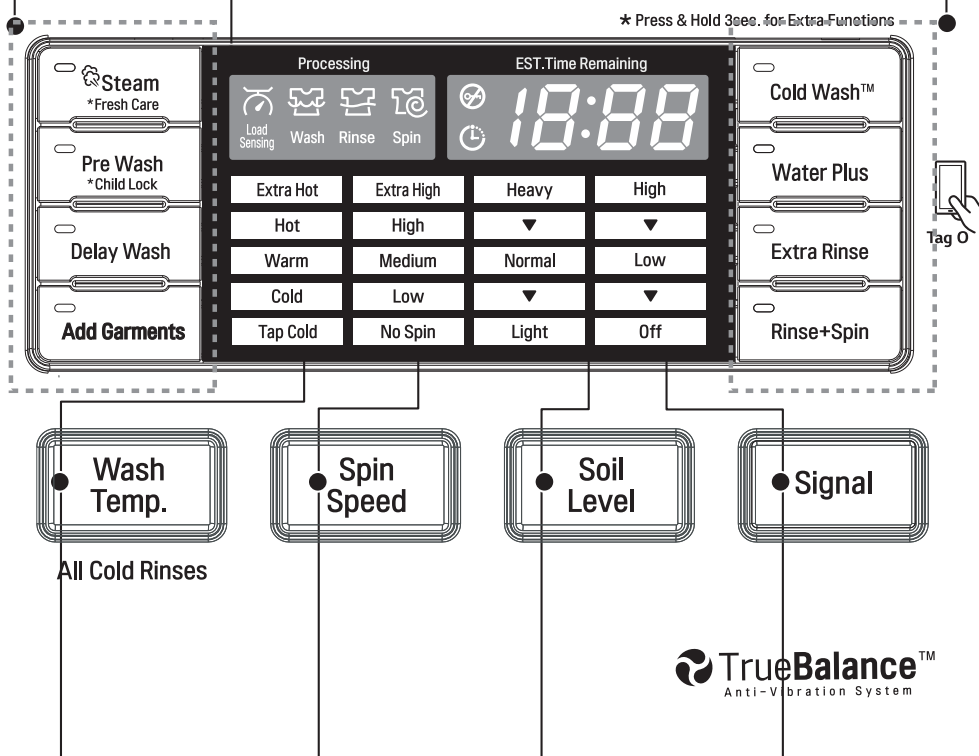

Wash Temp., Spin speed, Soil Level, Signal Button

- Select a water temperature based on the type of load you are washing.
- To change the spin speed, press the Spin Speed button repeatedly to cycle through available options.
- To change the soil level, press the Soil Level button repeatedly until the desired setting is on.
- Press repeatedly to adjust the volume of the Signal.

5-2. Cycle Guide

The cycle guide below shows the options and recommended fabric types for each cycle.

● = Available option

CYCLE	FABRIC TYPE	BASIC OPTION (★=DEFAULT)			ADDITIONAL OPTIONS					
		Wash Temp.	Spin Speed	Soil Level	Pre Wash	Extra Rinse	Steam	Cold Wash™	Turbo Wash™	Fresh Care
Tub Clean	This cycle is designed to remove a mildewy or musty smell.						●			
Allergiene™	Cotton, underwear, pillow covers, bed sheets, baby wear		Extra High High★ Medium Low No Spin			●	●		●	●
Sanitary	Heavily soiled underwear, work clothes, diapers, etc.	Extra Hot★	Extra High High★ Medium Low No Spin	Heavy Normal★ Light	●	●	●		●	●
Bright Whites™	White Fabrics	Hot★ Warm Cold Tap Cold	Extra High High★ Medium Low No Spin	Heavy Normal★ Light	●	●	●		●	●
Bulky/Large	Large items such as blankets and comforters	Hot Warm★ Cold Tap Cold	Medium★ Low No Spin	Heavy Normal★ Light	●	●	●	●	●	●
Cotton/Normal	Cotton, linen, towels, shirts, sheets, jeans, mixed loads	Extra Hot Hot Warm★ Cold Tap Cold	Extra High High★ Medium Low No Spin	Heavy Normal★ Light	●	●	●	●	●	●
Heavy Duty	Heavy soiled Cotton Fabrics	Hot Warm★ Cold Tap Cold	Extra High★ High Low No Spin	Heavy★ Normal Light	●	●	●	●	●	●
Perm.Press	Dress shirts/pants, wrinkle-free clothing, poly/cotton blend clothing, tablecloths	Hot Warm★ Cold Tap Cold	High Medium★ Low	Heavy Normal★ Light	●	●		●	●	●
Delicates	Dress shirts/blouses, nylons, sheer or lacy garments	Warm Cold★ Tap Cold	Medium★ Low No Spin	Heavy Normal★ Light	●	●		●		●
Towels	Towels	Hot Warm★ Cold Tap Cold	Extra High★ High Medium Low No Spin	Heavy Normal★ Light	●	●		●	●	●
Speed Wash	Lightly soiled clothing and small loads	Hot★ Warm Cold Tap Cold	Extra High★ High Medium Low No Spin	Heavy Normal Light★		●		●	●	●

-Cycle time depends on type and amount of load and detergent, water pressure and chosen additional options.

-If the Turbo Wash™ option is on, you cannot select "No Spin" as your Spin Speed.
(If the Turbo Wash™ option is off, you can select "No Spin" as your Spin Speed.)

5-3. SPECIAL FUNCTIONS

The option buttons also activate special functions, including CHILD LOCK, LOAD SIZE, TUB CLEAN, and SIGNAL ON/OFF. Press and hold the option button marked with the special function for 3 seconds to activate.

CHILD LOCK



Use this option to prevent unwanted use of the washer or to keep cycle settings from being changed while the washer is operating. Press and hold the PRE WASH button for 3 seconds to activate or deactivate The child lock function The child lock indicator will be shown in the display. And all buttons are disabled except the ON/OFF button

NOTE: CHILD LOCK lasts after the end of cycle. If you want to deactivate this function, Press and hold the PRE WASH button for 3 seconds.

Fresh Care



Use this function when you are not able to take out your clothes as soon as the wash cycle ends. This function provides periodic tumbling for up to about 19 hours to prevent wrinkles. Press the Start/Pause or Power button to unload laundry at any time.

5-4. Explanation of each process

No.	Process	Explanation
1.	Stay	<ul style="list-style-type: none"> • Electrical power is supplied. • Washer is ready to work and the micom is in the active mode.
2.	Water supply	<ul style="list-style-type: none"> • After loading laundry and selecting a course and a cycle, water is supplied and drum rotates. • When a user selects Pre-wash course, water is supplied through pre wash valve.
3.	Soaking and washing laundry	<ul style="list-style-type: none"> • To get laundry wet, drum rotates clockwise and counterclockwise. • If water amount is insufficient at this time, the Inlet valve will supply water again.
4.	Heating and washing	<ul style="list-style-type: none"> • The heater heats the water in drum to the selected water temperature and drum rotates for washing.
5. 6.	Washing and heating / washing	<ul style="list-style-type: none"> • When the water temperature reaches to the selected temperature, the heating stops and only the drum rotates. • If water temperature becomes lower than selected because of re-supplied water, the heating starts again.
7.	Washing	<ul style="list-style-type: none"> • Fuzzy logic decides washing time according to the laundry load, water temperature, and other factors.
8.	Drainage	<ul style="list-style-type: none"> • A pump motor drains the water from the drum. • After sensing drained water amount by water level frequency, spin starts. • When a heating course is selected, stay cooling process is performed to decrease the water temperature gradually to prevent laundry from being damaged and for safety reasons.
9.	Untangling (Sensing eccentricity)	<ul style="list-style-type: none"> • It balances laundry load and senses the eccentricity of the load, to only allow spinning without vibration. • If the eccentricity is worse than the allowed level, it repeats the disentangling process. When the repeated time is more than allowed level, it displays UE. • If the eccentricity is good, the intermittent spin starts. • During this process, the drain pump works for drainage intermittently.

No.	Process	Explanation
10	Intermittent spin	<ul style="list-style-type: none"> To reach the correct set speed, the motor rotates clockwise and counterclockwise directions after spin process starts. If the water level frequency is lower than 23.0 kHz, a washer senses suds and starts suds removal process.
11	Rinse spin	<ul style="list-style-type: none"> In this process, the remaining water during washing process is extracted and the selected speed is kept. Removing suds process is in active mode at this cycle.
12	Remaining spin	<ul style="list-style-type: none"> After spin finishes, the drum rotates by remaining spin power until it stops. Motor power is off. This process is overlapped with next process.
13	Rinse water supply	<ul style="list-style-type: none"> Water supply for rinse process.
14	Rinse	<ul style="list-style-type: none"> Rinsing process.
15	Last drainage	<ul style="list-style-type: none"> After spin finishes and power is not supplied to motor, the drum rotates by remaining spin power. If rinse hold is selected, the drainage is not proceeded after rinse finishes.
16	Disentangling	<ul style="list-style-type: none"> The same as item 9.
17	Intermittent spin	<ul style="list-style-type: none"> The same as item 10.
18	Main spin1	<ul style="list-style-type: none"> The same as item 11.
19	Main spin2	<ul style="list-style-type: none"> At the end of a main spin, the spin speed will reach the selected rpm.
20	Remaining spin	<ul style="list-style-type: none"> The same with item 12.
21	Disentangling	<ul style="list-style-type: none"> After spin finishes, disentangling starts to remove unbalanced laundry.
22	End	<ul style="list-style-type: none"> After 'end' signal is displayed, it stays for 8 seconds and power is automatically turned off. (Auto type door switch) After door switch is off, end signal is displayed in the case of manual type and it takes around 2 minute to turn off door switch.


6. TEST MODE

6-1. SAFETY CAUTION

- There can be live AC and DC voltage on some terminals on the main board, even when the machine is turned off. Be cautious to avoid electric shock when disconnecting parts while troubleshooting. (Wear Static Discharge gloves when working.)
- After cutting off the power when changing the PWB disconnecting, or reassembling.
- Be careful static when handling the PWB assembly, and use Electro Static Discharge plastic pack when shipping or storing it.

6-2. LOAD TEST MODE

The washer must be empty and the controls must be in the off state.

1. Hold the **SPIN SPEED** and **SOIL LEVEL** and then press the POWER button.
2. Then buzzer will sound twice.
3. Press the Start/Pause  button repeatedly to cycle through the test modes.

Number of times the Start/Pause button is pressed	Check Point	Display Status
None	Turns on all lamps and locks the door.	LOAD TEST MODE
1 time	Tumble clockwise.	Rpm (45~50)
2 times	Low speed spin.	Rpm (55~60)
3 times	High speed spin.	Rpm (110~115)
4 times	Inlet valve for prewash turns on.	Water level frequency (0~255)
5 times	Inlet valve for main wash turns on.	Water level frequency (0~255)
6 times	Inlet valve for hot water turns on.	Water level frequency (0~255)
7 times	Inlet valve for bleach turns on.	Water level frequency (0~255)
8 times	Tumble counterclockwise.	rpm (42~50)
9 times	Heater turns on for 3 seconds.	Water temperature
10 times	Drain pump turns on.	Water level frequency (25~65)
11 times	off	-

6-3. HOW TO CHECK THE WATER LEVEL FREQUENCY

Press and hold the **WASH/RINSE** and **DELAY WASH** button simultaneously.



● The digits indicate the water level frequency (x.1 kHz).
 So, for example a display indicating 241: a Water level frequency of 241 x.1 kHz
 = 24.1 kHz









7. TROUBLESHOOTING






7-1. SAFETY CAUTION

- There can be live AC and DC voltage on terminals on the main board, even when the machine is turned off. Be cautious to avoid electric shock when disconnecting parts while troubleshooting. (Wear Electro Static Discharge gloves when working.)
- After cutting off the power when changing the PWB assembly, disconnecting, or reassembling.
- Be careful static when handling the PWB assembly, and use Electro Static Discharge plastic pack when shipping or storing it.

7-2. ERROR MODE SUMMARY


- If you press the START/PAUSE button when an error is displayed, any error except **PE** will disappear and the machine will go into the pause status.
- In case of **PE**, **LE**, **dE1**, **dE2** if the error is not resolved within 20 seconds, or the in case of other errors, if the error is not resolved within 4 minutes, power will be turned off automatically and the error code will blink. But in the case **FE**, power will not be turned off.

	ERROR	SYMPTOM	CAUSE
1	WATER INLET ERROR		<ul style="list-style-type: none"> • Correct water level (24.6kHz) is not reached within 8 minutes after water is supplied or it does not reach the preset water level within 20 minutes.
2	UNBALANCE ERROR		<ul style="list-style-type: none"> • The load is too small. • The appliance is tilted. • Laundry is gathered to one side. • Non-distributable things are put into the drum.
3	DRAIN ERROR		<ul style="list-style-type: none"> • Not fully drained within 10 minutes.
4	OVERFLOW ERROR		<ul style="list-style-type: none"> • Water is overflowing. (water level frequency is over 21.3kHz). ※ If FE is displayed, the drain pump will operate to drain the water automatically.
5	PRESSURE SENSOR ERROR		<ul style="list-style-type: none"> • The PRESSURE SENSOR ASSEMBLY is out of order. • When water level frequency is consistently below 10 kHz or over 30 kHz.
6	DOOR OPEN ERROR	 	<ul style="list-style-type: none"> • Door not all the way closed. • Loose electrical connections at door switch and PWB Assembly. • The DOOR SWITCH ASSEMBLY is out of order.
7	HEATING ERROR		<ul style="list-style-type: none"> • The THERMISTOR is out of order.

	ERROR	SYMPTOM	CAUSE
8	LOCKED MOTOR ERROR		<ul style="list-style-type: none"> ☒The connector (3-pin, male, white) in the MOTOR HARNESS is not connected to the connector (3-pin, female, white) of STATOR ASSEMBLY. ☒The electric contact between the connectors (3-pin, male, white) in the MOTOR HARNESS and 4-pin, female, white connector in the MAIN PWB ASSEMBLY is bad or unstable. ☒The MOTOR HARNESS between the STATOR ASSEMBLY and MAIN PWB ASSEMBLY is cut (open circuited).
9	EEPROM ERROR		<ul style="list-style-type: none"> ☒EEPROM is out of order. ※ Displayed only when the START/PAUSE button is first pressed in the Load Test Mode.
10	POWER FAILURE		machine is working, the power is supplied rapidly.
11	NFC MODULE ERROR		<ul style="list-style-type: none"> ☒The NFC HARNESS between the NFC PCB ASSEMBLY and DISPLAY PCB ASSEMBLY is cut or not connected(open circuited). ☒The NFC PCB ASSEMBLY is bad or out of order(short circuited). ☒The NFC EEPROM is out of order. ※ nL is displayed only in the first screen of the Test Mode.
12	NFC VERSION ERROR		<ul style="list-style-type: none"> ☒NFC version is not matched. → It needs to be exchanged. ※ nU is displayed only in the first screen of the Test Mode.

7-3. TROUBLESHOOTING WITH ERROR

INLET VALVE ERROR

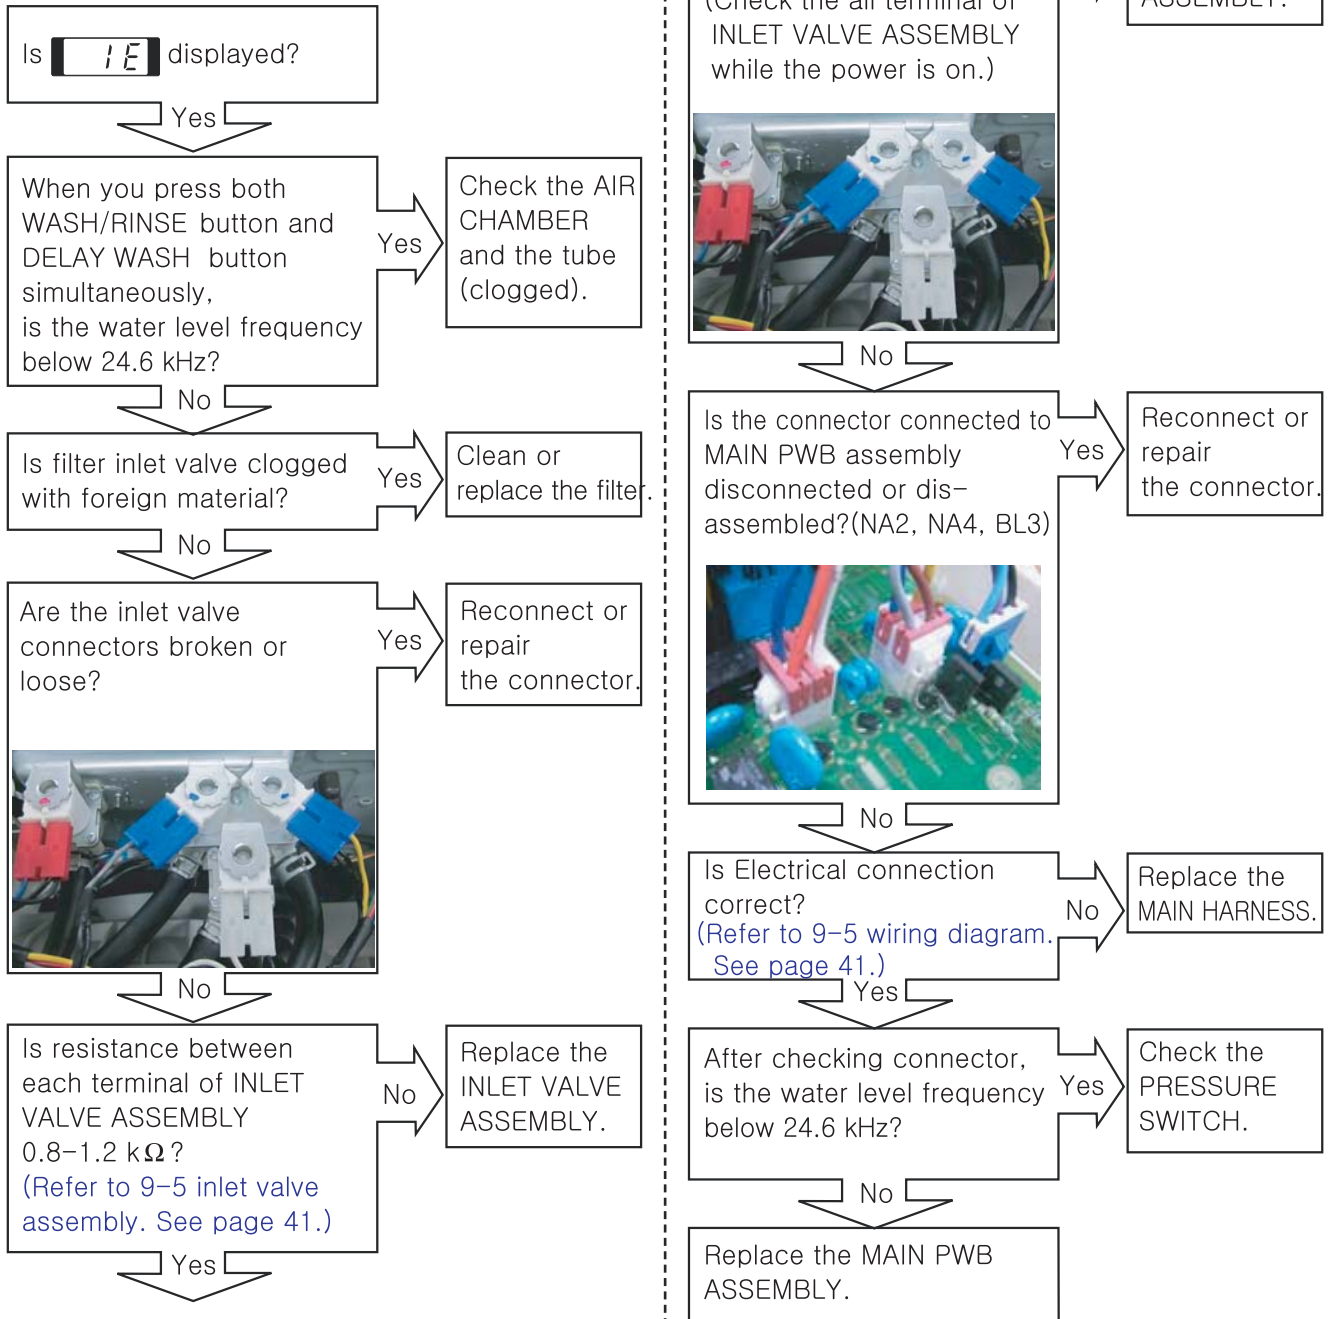

[Note] Installation safety check list

- 1) No water tap leakage
- 2) No water tap freeze
- 3) No entanglement of water supply hose
- 4) No water shortage
- 5) No shrinkage on water supply hose due to a possible misuse of hot and cold water
- 6) No water supply hose leakage

DRAIN ERROR

Is DE displayed?

Yes


Check the connectors at the main PCB and the drain pump. Are the connectors loose or disconnected?

Yes

Reconnect or repair the connector.



Drain pump

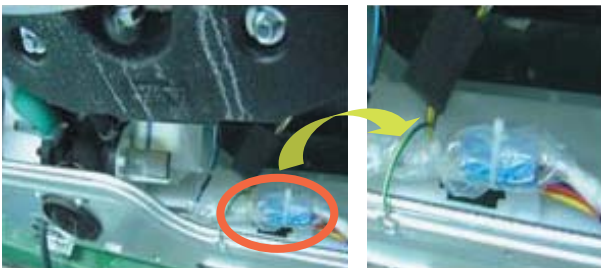

Connection connector

No

When you press both WASH/RINSE button and DELAY START button simultaneously, is the water level <250?

Yes

Proceed to next step at right

No

Check the air dome and pressure hose for clogging. Check the pressure switch. See test #2.

Measure the resistance of the drain pump motor. Is the resistance between 1Ω and 20Ω ?
(Refer to 9-4 Pump motor assembly.)

Yes


Replace the DRAIN PUMP ASSEMBLY.

No

Check the voltage between the main PCB connectors NA4-1 BN and BL3-1 BK. Is the voltage 120 VAC \pm 5%?

No

Replace the MAIN PWB ASSEMBLY.

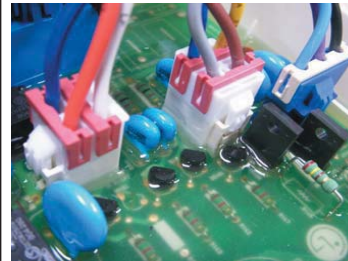

TO TURN ON THE DRAIN PUMP:

1. Turn on the washer
 2. Press the SPIN SPEED button to select LOW speed.
 3. Press the START/PAUSE button.
- The drain pump will be energized for several minutes at the beginning of the spin cycle.

ALWAYS CHECK FOR EXTERNAL CAUSES

- Kinked or clogged drain hose
- Frozen drain hose
- Foreign objects clogging the drain pump filter
- Foreign objects caught in pump impeller

LOCKED MOTOR ERROR

Is **▲ LE ERROR** displayed?

Yes

Check the connectors below.
Is the connector disconnected or disassembled?
(motor drive connector.)

- **part of main PWB assembly (RD4)**



Motor Drive

- **part of wire**



Motor Drive

Yes

Reconnect the connector.
(connector / wire / motor)

- **part of motor**



Motor

Yes

Is rotor magnet cracked?



Magnet

Yes

Replace the ROTOR.

No

Is the resistance values in the range of 5 to 15 Ω ?
(U-V, V-W, W-V)
:U=1, V=2, W=3)
- After pull out the RD4 connector, check the terminal of the connector in wire. (Red 3P, male)

No

Replace the STATOR.




Yes

Check the IPM in the controller.

No

Replace the MAIN PWB ASSEMBLY.


DOOR OPEN ERROR

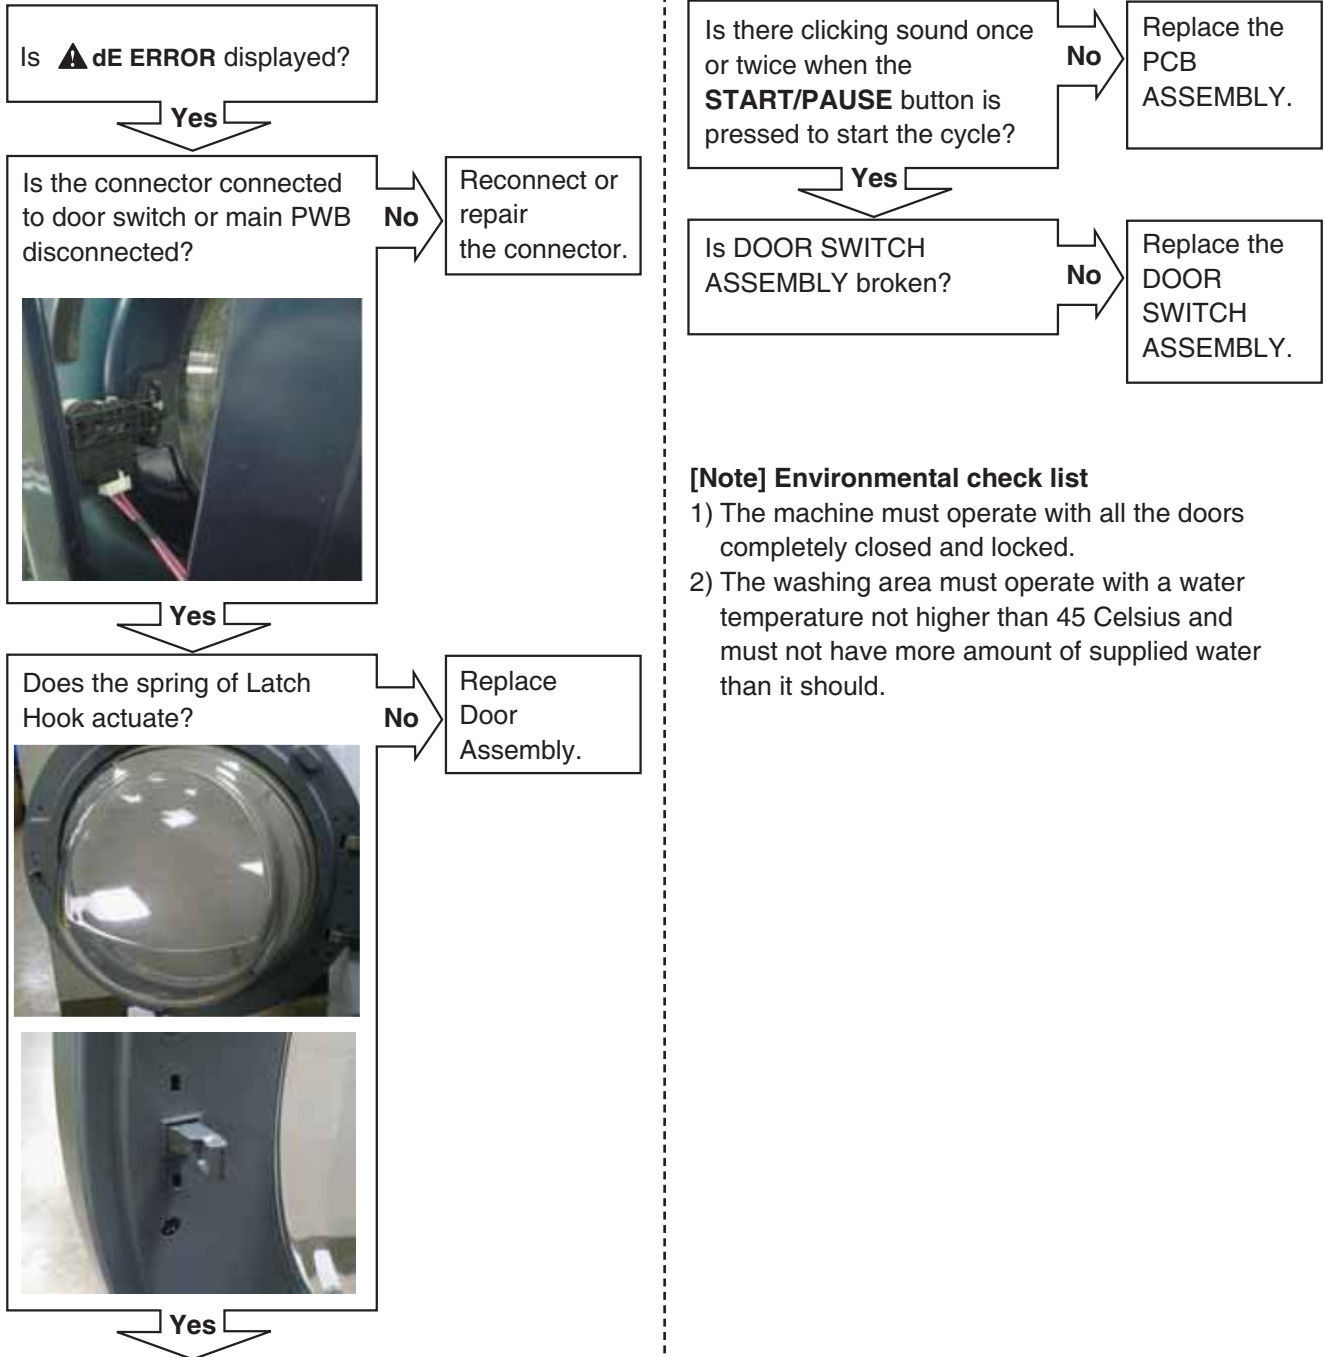

[Note] Environmental check list

- 1) The machine must operate with all the doors completely closed and locked.
- 2) The washing area must operate with a water temperature not higher than 45 Celsius and must not have more amount of supplied water than it should.


UNBALANCE ERROR

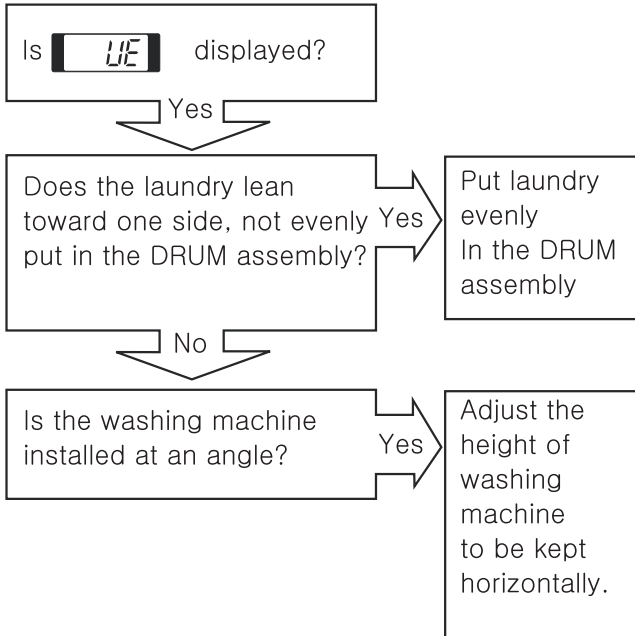


[Note] Installation check list

- 1) Remove the transit bolts. (4)
- 2) Confirmation on the material to see if it is capable of handling two different types of blanket materials.

OVER FLOW ERROR

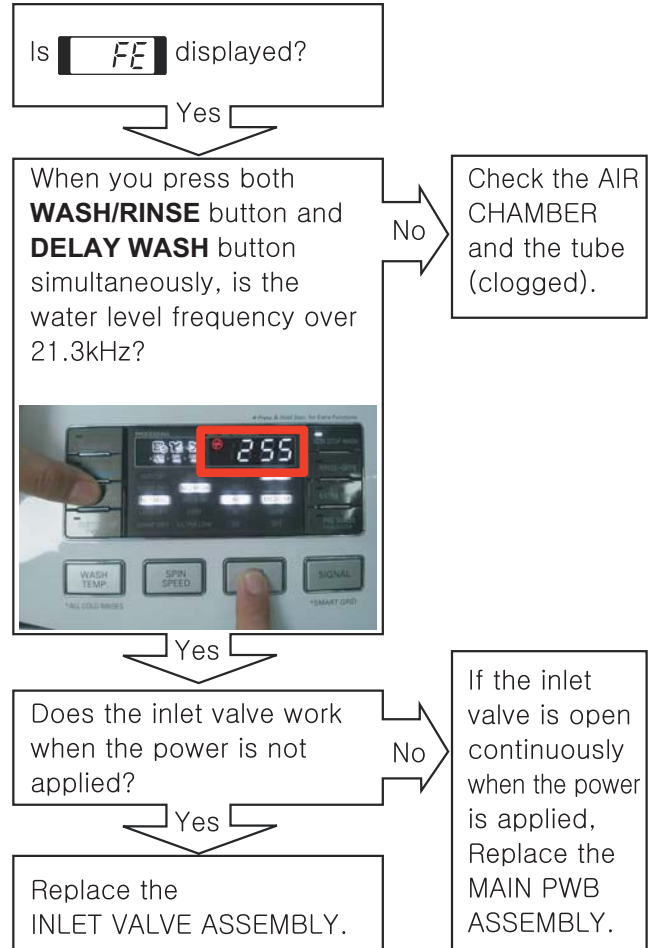


PRESSURE SENSOR ERROR

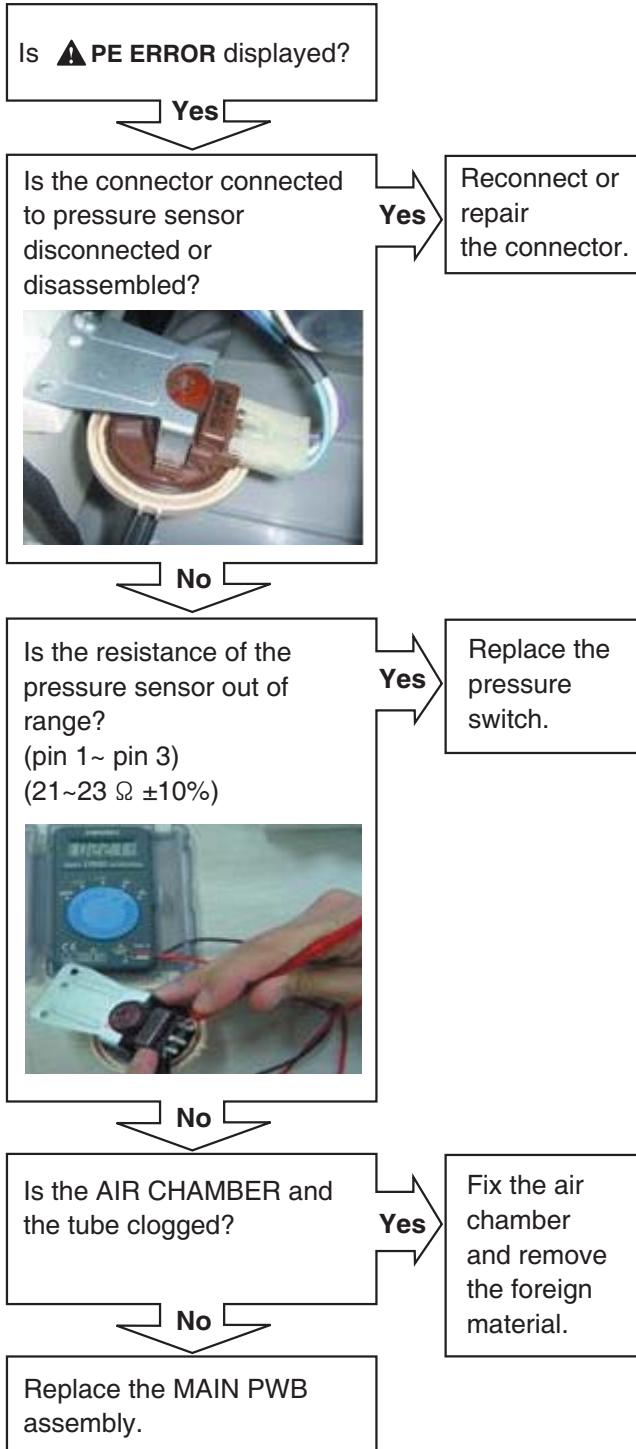

8-5. TROUBLESHOOTING ELSE

⚠ CAUTION

1. Be careful of electric shock if disconnecting parts while troubleshooting.
2. First of all, check the connection of each electrical terminal with the wiring diagram.
3. If you replace the MAIN PWB ASSEMBLY, reinsert the connectors correctly.


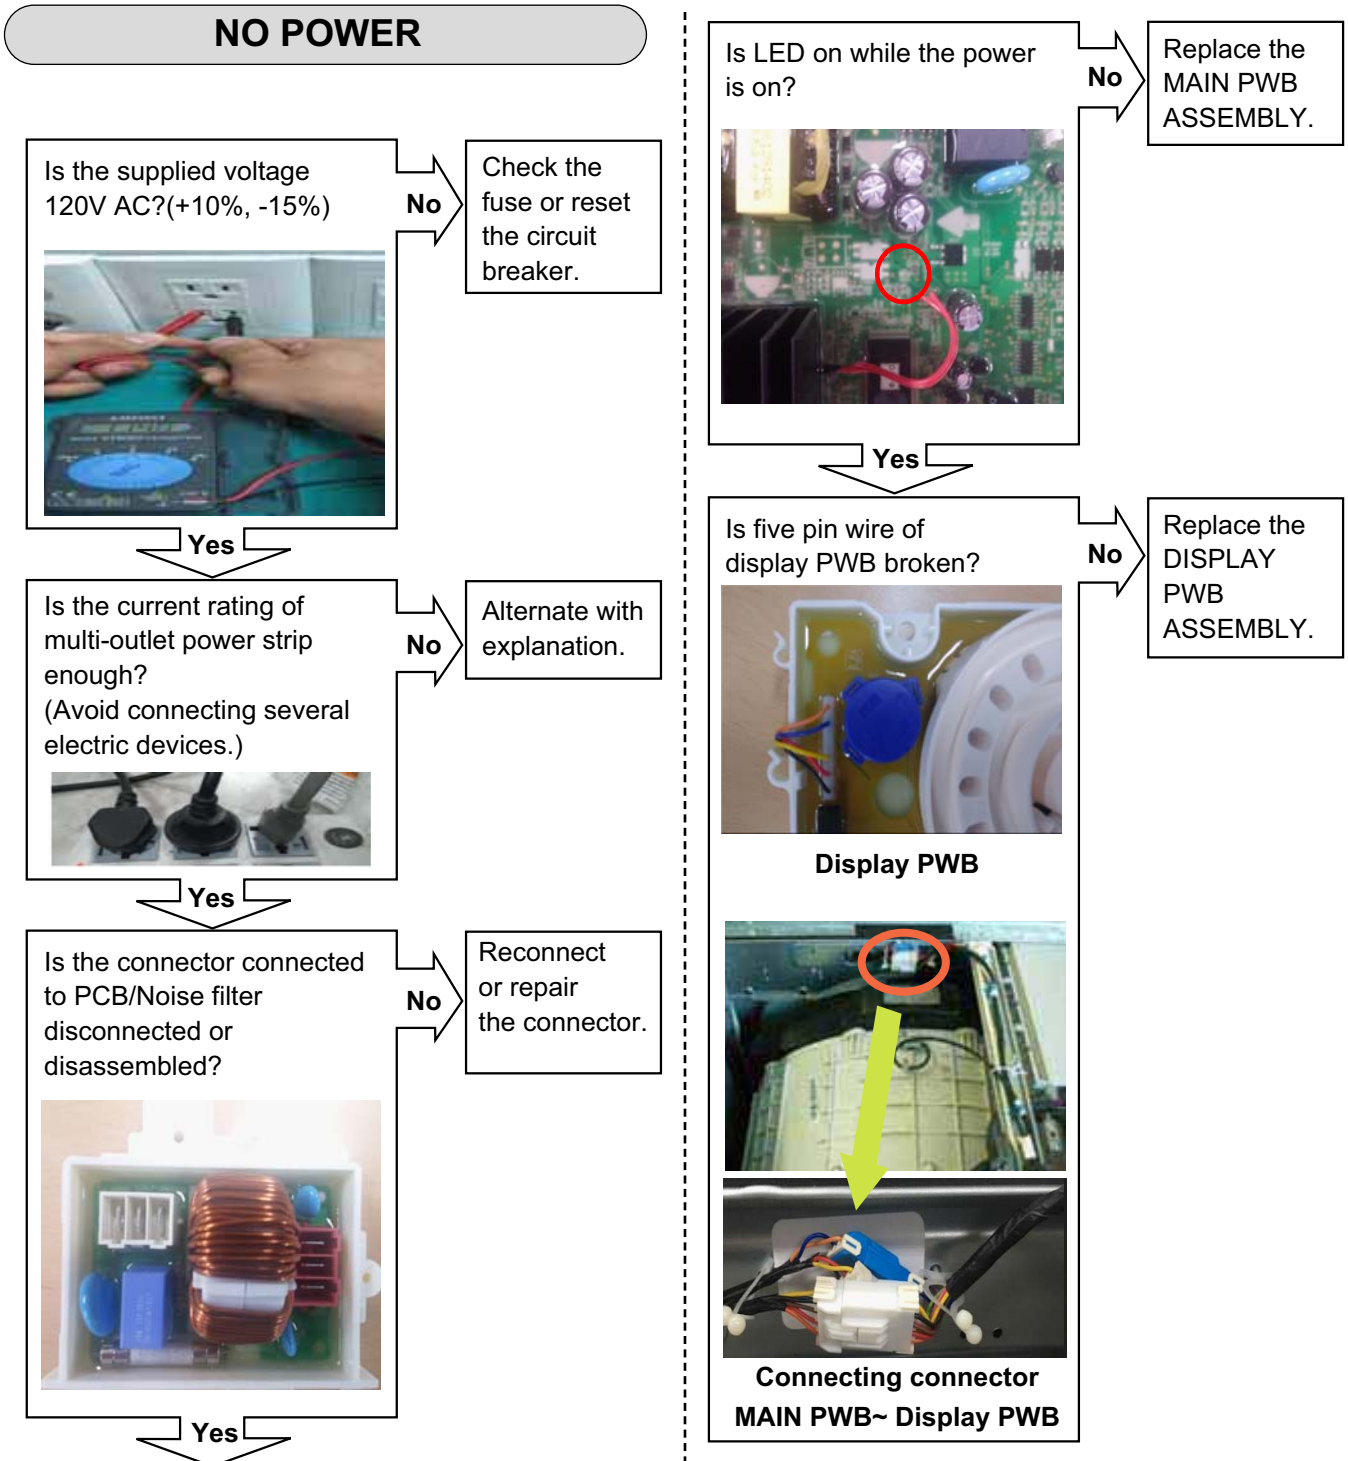


BUTTON DOESN'T WORK

Are the connectors to the MAIN board and DISPLAY board damaged or broken?

Yes

Reconnect or Repair the connector.

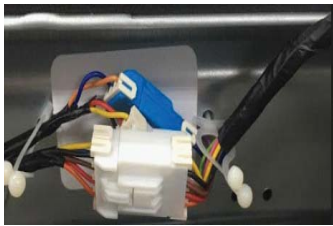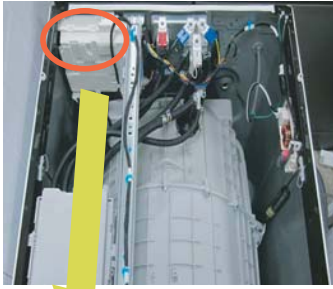

No

Is the button of panel stuck?

Yes

Repair the button.



No

Is the display PCB broken? (check the buzzer sound and LED light while push the button.)


Yes

Replace the DISPLAY PWB ASSEMBLY.



VIBRATION & NOISE IN SPIN

Have all the transit bolts and base packing been removed?

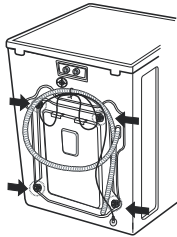

Base Packing

Yes

No

Remove the transit bolts and base packing.

Is the washer installed on a solidly constructed floor?

Yes


No

Move the washer or reinforce the floor.


Check if the washer is perfectly level as follows:

Check the leveling of the washer with a level and check that the washer is stable.

Level

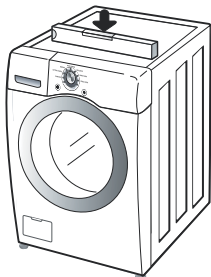

Put an unbalance part (rubber) inside of drum and start QC test mode and run in high spin. (Refer to section 7.2, page 19.) When the machine is spinning in high speed, verify that it is stable.

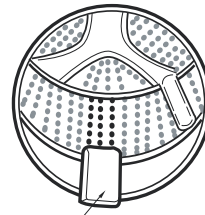


Unbalance Part


If you do not have the unbalance part, put 4.5 to 6.5 lbs (2 to 3 kg) of clothing. Once loaded, press power, Rinse+Spin and the start/pause button in sequence. When the machine is spinning in high speed, verify that it is stable.

Yes


If it is not stable, adjust feet accordingly. After the washer is level, tighten the lock nuts up against of the base of the washer. All lock nuts must be tightened.

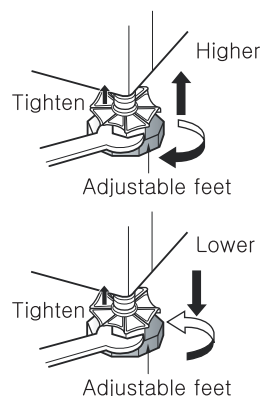


DETERGENT DOES NOT FLOW IN

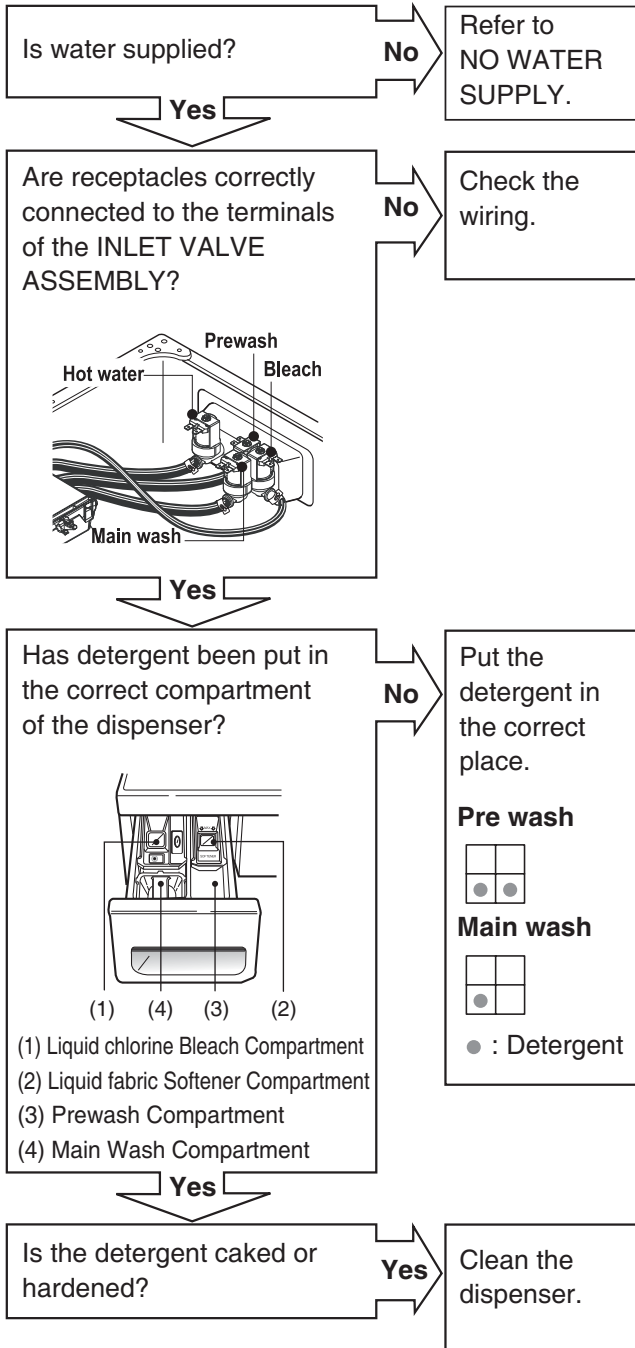

LIQUID DETERGENT/SOFTENER/ BLEACH DOES NOT FLOW IN

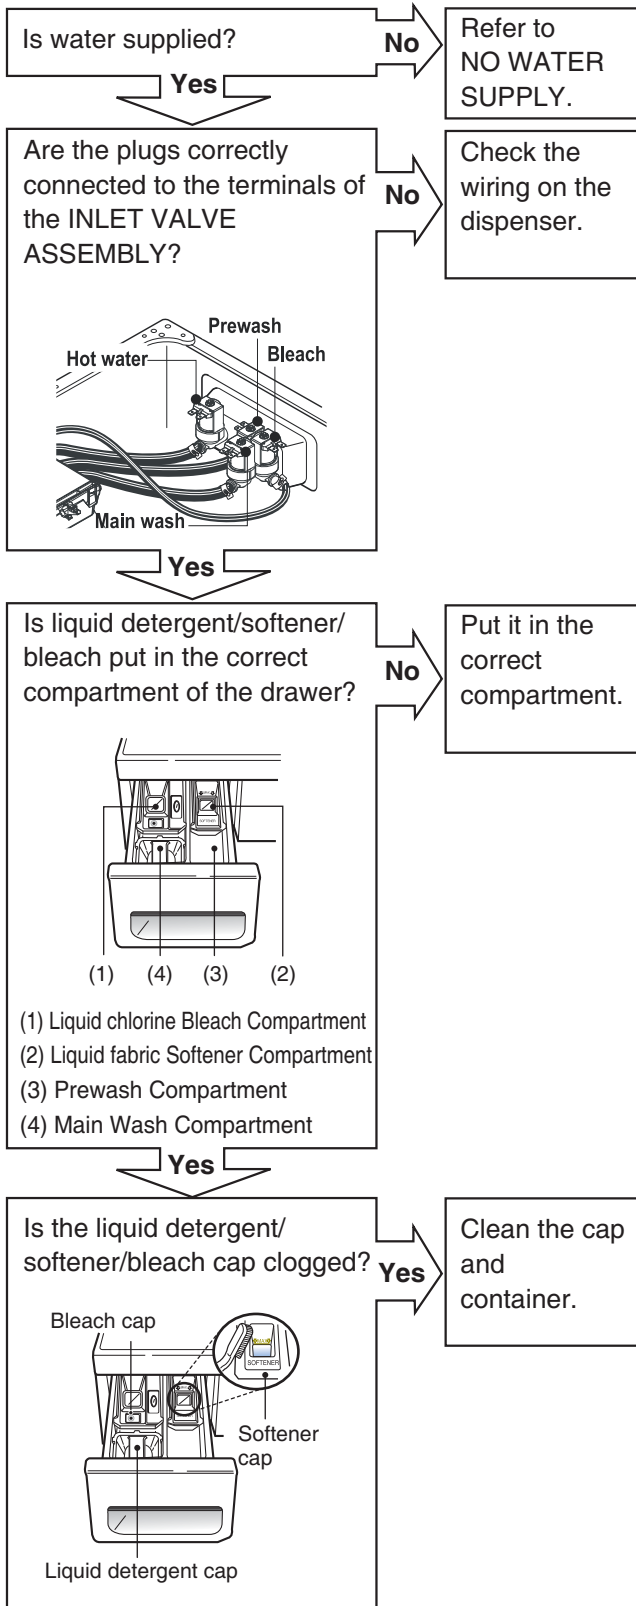

ABNORMAL SOUND

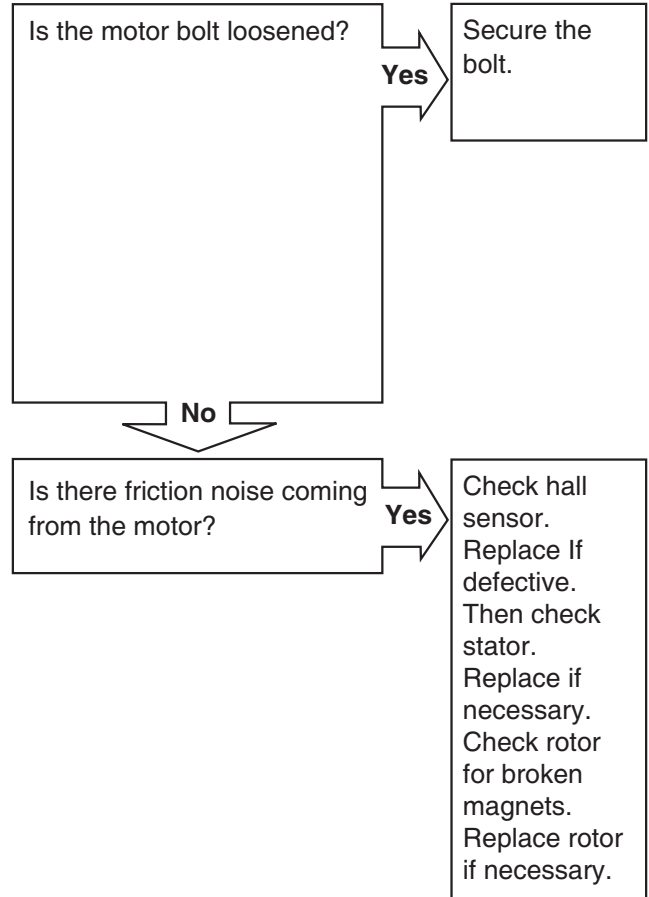

7-5. Before using the Tag On function

The Tag On function allows you to conveniently use the LG Smart Diagnosis™, Cycle Download, and Laundry Stats features to communicate with your appliance right from your own smart phone.

- 1 Download the LG Smart Laundry&DW App to your smart phone.
- 2 Turn on the NFC (Near Field Communication) function in your smart phone.

The Tag On function can only be used with most smart phones equipped with the NFC function and based on the Android operating system (OS).

■ Turning on the NFC function of the smart phone

- 1 Enter the "Settings" menu of the smart phone and select "Share & Connect" under "WIRELESS & NETWORKS".



- 2 Set "NFC" and "Direct Android Beam" to ON and select "NFC".



- 3 Check "Use Read and Write/P2P receive".




! NOTE

- Depending on the smart phone manufacturer and Android OS version, the NFC activation process may differ. Refer to the manual of your smart phone for details.


■ The Tag On guide

- Tag On position

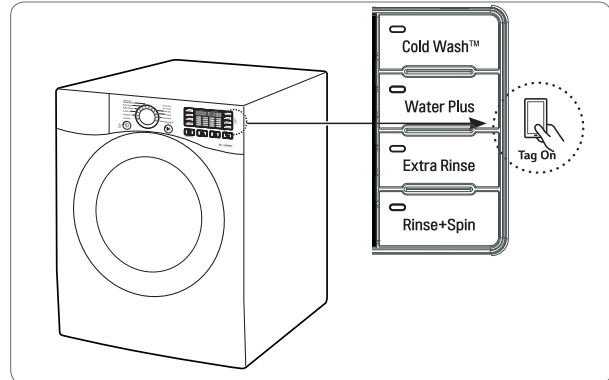

Look for the Tag On icon next to the LED screen on the control panel. This is where you position your smart phone when using the Tag On function with the LG Smart Diagnosis™, Cycle Download, and Laundry Stats features of the LG Smart Laundry&DW application.

When you use the Tag On function, position your smart phone so that the NFC antenna on the back of your smart phone matches the position of the Tag On icon on the appliance. If you do not know the position of your NFC antenna, move your smart phone very slightly in a circular motion until the application verifies the connection.

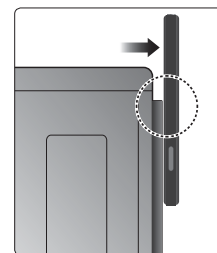



Because of the characteristics of NFC, if the transmission distance is too far, or if there is a metal sticker or a thick case on the phone, transmission will not be good. In some cases, NFC-equipped phones may be unable to transmit successfully.

Press **[?]** in the LG Smart Laundry&DW app for a more detailed guide on how to use the Tag On function.

8. COMPONENT TESTING INFORMATION

⚠ WARNING When Resistance (Ohm) checking the Component, be sure to turn the power off, and do voltage discharge sufficiently.

8-1. FILTER ASSEMBLY (LINE FILTER)
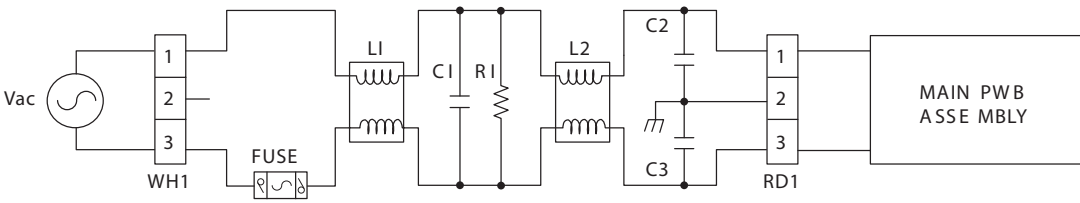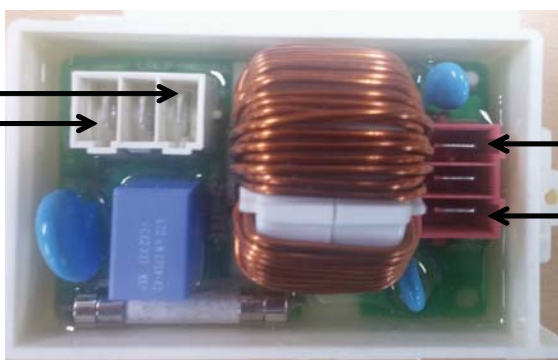
<p>Wiring diagram</p>	<p style="text-align: center;">Circuit in the MAIN PWB / Wiring Diagram</p> 						
<p>Test points and Result</p>	 <table border="1" data-bbox="651 1370 1129 1527"> <thead> <tr> <th>Test Points</th> <th>Result</th> </tr> </thead> <tbody> <tr> <td>WH (1) to RD (3)</td> <td>0 Ω</td> </tr> <tr> <td>WH (3) to RD (1)</td> <td>0 Ω</td> </tr> </tbody> </table>	Test Points	Result	WH (1) to RD (3)	0 Ω	WH (3) to RD (1)	0 Ω
Test Points	Result						
WH (1) to RD (3)	0 Ω						
WH (3) to RD (1)	0 Ω						

8-2. DOOR LOCK SWITCH ASSEMBLY

<p>Wiring diagram</p>	<p style="text-align: center;">Circuit in the MAIN PWB / Wiring Diagram</p> <p>The diagram illustrates the electrical circuit for the door lock switch assembly. On the left, the MAIN PWB contains a MICOM (Microcomputer) connected to two relays. A 12V source is connected to the relays. The relays are connected to terminals YL, BL, RD, BK, and NA4. The Door switch assembly, shown on the right, includes a solenoid, two PTCs (Positive Temperature Coefficient), and an AC common terminal of a valve. The solenoid is connected to terminals 2 and 4, and the PTCs are connected to terminals 3 and 4. The AC common terminal of the valve is connected to terminal 5. The entire assembly is connected to a Vac (Vacuum) source.</p>
<p>Function</p>	<p>The door lock switch assembly consists of a heating PTC, a bimetal, a protection PTC, and a solenoid. It locks the door during the wash cycle.</p> <ol style="list-style-type: none"> 1. Operation for door closing <ul style="list-style-type: none"> - After the system turns on, PTC heating starts up through terminals 2 and 4 authorizing the power on. - After PTC heating starts up and before solenoid operation is driven, force the system to the off position through CAM. ⇒ Door close - Authorizing one impulse through terminal 3~4 (PTC & solenoid) will make the door locked. - Door lock is detected when switches in terminal 4~5 are set closed. ⇒ CAM rotation will forcibly clear off the connection. <li style="padding-left: 20px;">The maximum, allowable number of impulse authorizations is 2. ⇒ Upon the third authorization of the impulse, the position of CAM goes back to the door-open position. - Authorizing the impulse occurs in 4.5 seconds upon input for max performance and two authorization processes are allowed at most. ⇒ Normal operation period of PTC heating: 1.5 – 5 seconds. (Defects from the development process.) 2. Operation for door opening <ul style="list-style-type: none"> - With a temporary stop, door automatically opens by CAM rotations after authorizing the impulse from the terminal, 3 ~ 4 and the power turns off – maximum of 3 times of the authorizing period. - Upon the fourth authorization of the impulse, the position of CAM goes back to the door-close position.

Test points



Result

Test Points	Result	Remarks
(2) to (4)	700-1500 Ω	At 77°F (25°C)
(3) to (4)	60-90 Ω	At 77°F (25°C)
(4) to (5)	Infinity	
(2) to (4)	120 Vac	Voltage Input




8-3. STATOR ASSEMBLY

<p>Wiring diagram</p>	<p style="text-align: center; background-color: #cccccc;">Circuit in the MAIN PWB Wiring Diagram</p>								
<p>Function</p>	<p>The Direct Drive motor can be driven from stopped to maximum speed in infinite steps in either direction.</p> <p>There are 36 poles on the stator; 12 permanent magnets spaced around the rotor. There are no brushes to wear out. Unlike a more traditional brushless motor, the rotor surrounds the stator rather than being attached to it.</p>								
<p>Test points (Windings)</p>									
<p>Result (Windings)</p>	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Test Points</th> <th style="text-align: center;">Result</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">(1) to (2)</td> <td style="text-align: center;">5-15 Ω</td> </tr> <tr> <td style="text-align: center;">(2) to (3)</td> <td style="text-align: center;">5-15 Ω</td> </tr> <tr> <td style="text-align: center;">(3) to (1)</td> <td style="text-align: center;">5-15 Ω</td> </tr> </tbody> </table>	Test Points	Result	(1) to (2)	5-15 Ω	(2) to (3)	5-15 Ω	(3) to (1)	5-15 Ω
Test Points	Result								
(1) to (2)	5-15 Ω								
(2) to (3)	5-15 Ω								
(3) to (1)	5-15 Ω								

8-4. PUMP MOTOR ASSEMBLY

<p>Wiring diagram</p>	<div style="display: flex; justify-content: space-around;"> <div style="border: 1px solid gray; padding: 5px; width: 45%;"> <p style="text-align: center; background-color: #cccccc; margin: -5px -5px 5px -5px;">Circuit in the MAIN PWB</p> <p style="text-align: center;">Pump Driving circuit</p> </div> <div style="border: 1px solid gray; padding: 5px; width: 45%;"> <p style="text-align: center; background-color: #cccccc; margin: -5px -5px 5px -5px;">Wiring Diagram</p> <p style="text-align: center;">DRAIN PUMP</p> </div> </div> <p style="text-align: center; margin-top: 10px;">* Each circuits of loads in wiring diagram are all same.</p>				
<p>Object</p>					
<p>Function</p>	<p>Two pump motors are used to drain the tub</p>				
<p>Test points</p>	<p style="text-align: center;">Drain Pump</p> <div style="display: flex; justify-content: space-around; align-items: center;"> </div>				
<p>Result</p>	<p style="text-align: center;">Drain Pump</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>Test Points</th> <th>Result</th> </tr> </thead> <tbody> <tr> <td>(1) to (2)</td> <td>10-20 Ω</td> </tr> </tbody> </table>	Test Points	Result	(1) to (2)	10-20 Ω
Test Points	Result				
(1) to (2)	10-20 Ω				

8-5. INLET VALVE ASSEMBLY
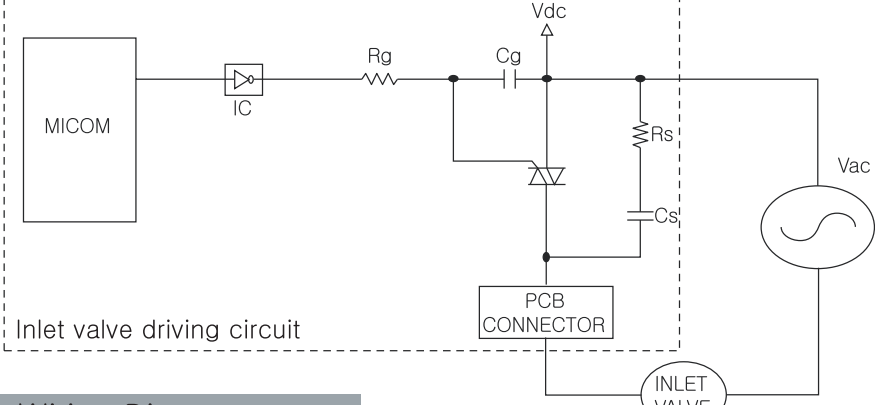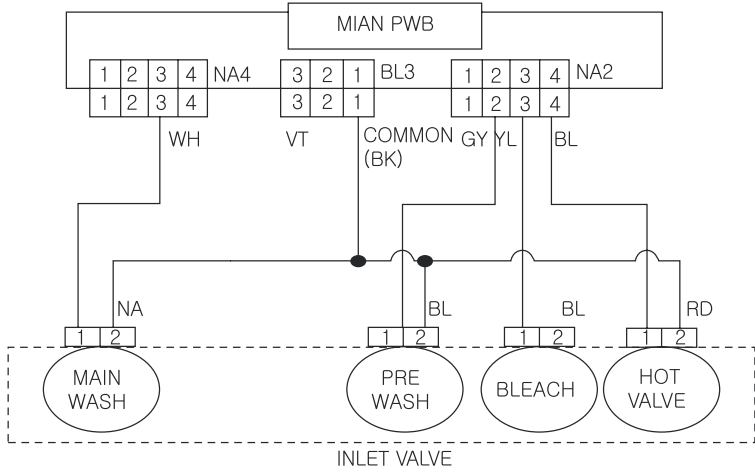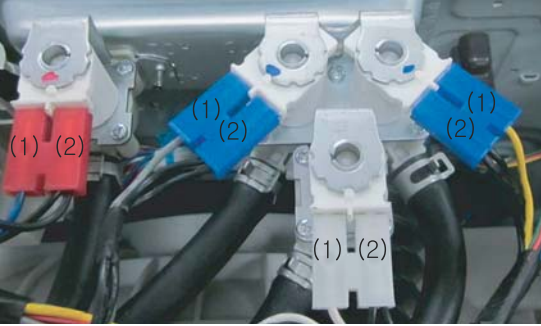
<p>Wiring diagram</p>	<div style="text-align: center; background-color: #cccccc; padding: 5px; margin-bottom: 10px;">Circuit in the MAIN PWB</div>  <div style="text-align: center; background-color: #cccccc; padding: 5px; margin-top: 10px;">Wiring Diagram</div> 				
<p>Function</p>	<p>Depending on the cycle and water temperature, the controller will energize the hot or cold water valve solenoids to regulate the selected water temperature.</p>				
<p>Test points and Result</p>	<p>Remove the connector from the valve and check the resistance.</p>  <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td>Test points</td> <td>(1)-(2)</td> </tr> <tr> <td>Result</td> <td>0.8-1.2k Ω</td> </tr> </table>	Test points	(1)-(2)	Result	0.8-1.2k Ω
Test points	(1)-(2)				
Result	0.8-1.2k Ω				

8-6. THERMISTOR ASSEMBLY

<p>Wiring diagram</p>	<p style="text-align: center;">Circuit in the MAIN PCB / Wiring Diagram</p> <p>The diagram illustrates the electrical connection between a 'WASH THERMISTOR' and the 'MAIN PCB'. On the left, the thermistor is connected to a connector labeled 'WH' with terminals 1 and 2. This connector is linked to the 'WH' terminals (5 and 6) on the 'MAIN PCB'. The 'MAIN PCB' also features a 'NA3' connector with terminals 1 through 6, and a 'BL' connector with terminals 3 and 4. The circuit includes two 5V power sources, each with a series resistor (R) and a parallel capacitor (C). The output of this circuit is connected to a 'MICOM' component. Ground symbols are shown for reference.</p>
<p>Function</p>	<p>The thermistor (temperature sensor) is used to monitor water temperature in the tub or steam generator.</p>
<p>Test points</p>	<p>(1) (2) Wash Thermistor</p> <p>The photograph shows the physical assembly of the wash thermistor. Two test points are indicated by arrows and labeled (1) and (2). The thermistor is mounted on a metal plate with other electrical components.</p>


Result**Wash Thermistor**

Test Points	Result (tolerance $\pm 5\%$)	Remarks
(1) to (2)	39.5 k Ω	At 86°F (30°C)
	26.1 k Ω	At 104°F (40°C)
	12.1 k Ω	At 140°F (60°C)
	8.5 k Ω	At 158°F (70°C)
	3.8 k Ω	At 203°F (95°C)
	2.8 k Ω	At 221°F (105°C)


9. DISASSEMBLY INSTRUCTIONS

* Be sure to unplug the machine before disassembling and repairing the parts.


CONTROL PANEL

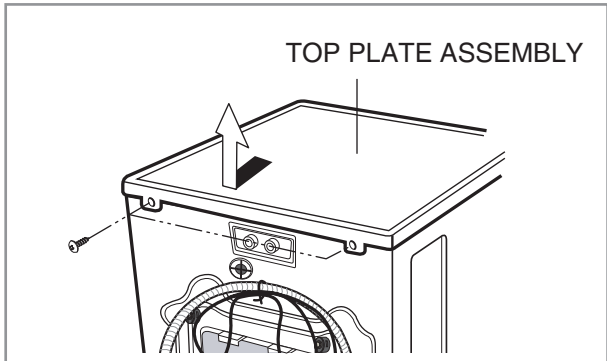


- ① Unscrew 2 screws on the back of the top plate.
- ② Pull the top plate backward and upward as shown.

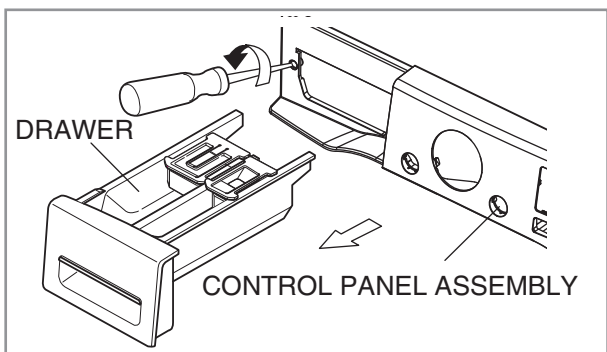


- ③ Disconnect the Display PWB assembly connector from the cabling.
- ④ Pull out the drawer and unscrew 2 screws.

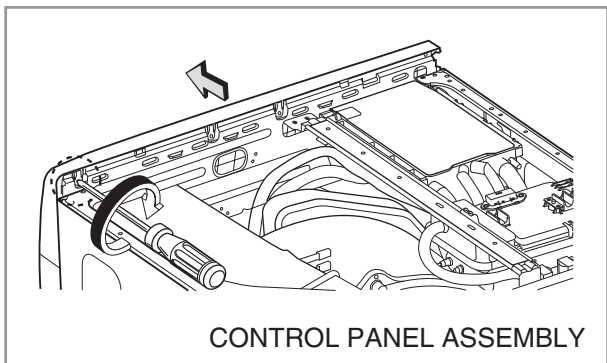

- ⑤ Remove one screw.
- ⑥ Lift the side the control panel assembly and pull it out.

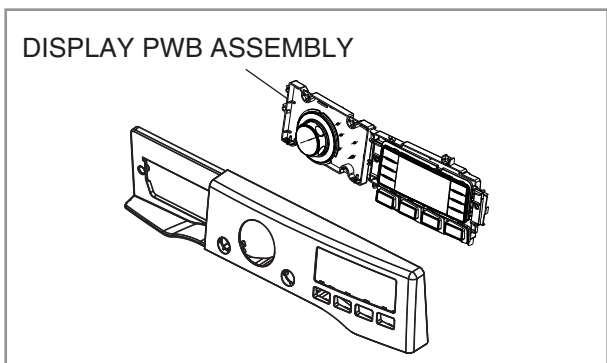


- ⑦ Unscrew the 8 screws from the control panel assembly.
- ⑧ Disassemble the display PWB assembly.

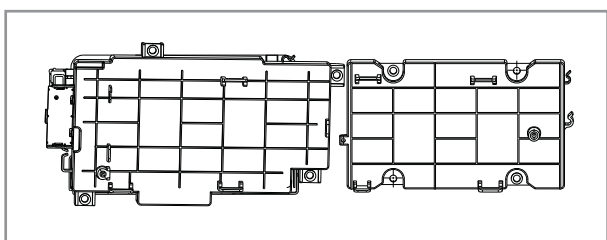


- ⑨ Disconnect the NFC connector.
- ⑩ Disassemble the NFC PCB from the PCB assembly, display


MAIN PWB ASSEMBLY

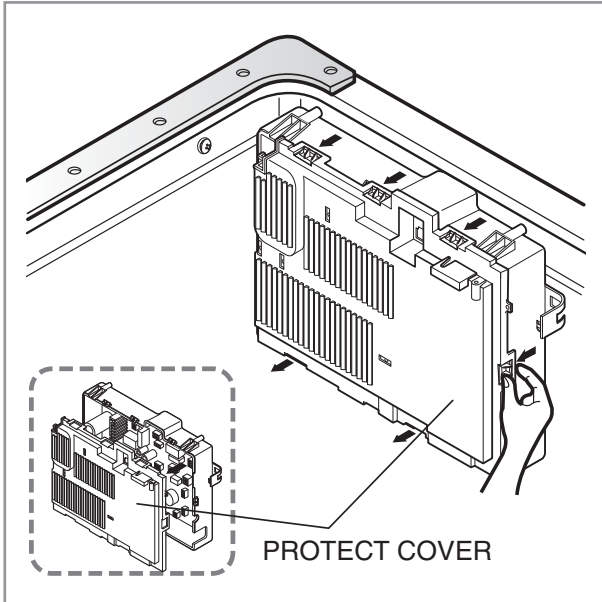

- ① Disconnect the POWER connector and the pressure switch assembly.
- ② Remove the protective cover.



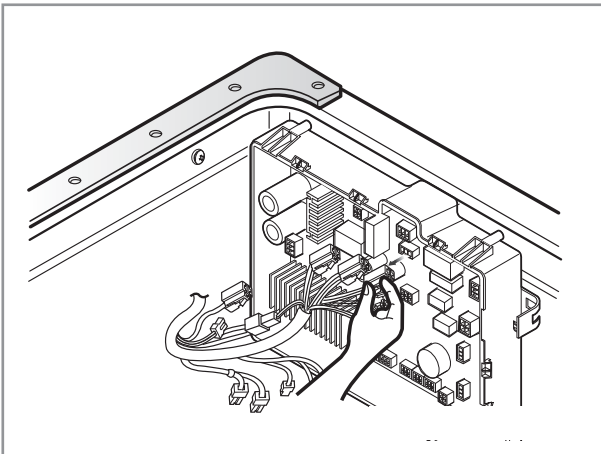


- ③ Disconnect the connectors.

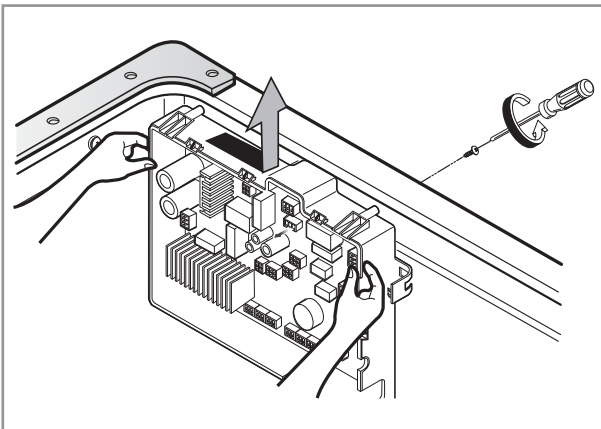


- ④ Unscrew 1 screw on the back.
- ⑤ Remove the main PWB.

DISPENSER ASSEMBLY

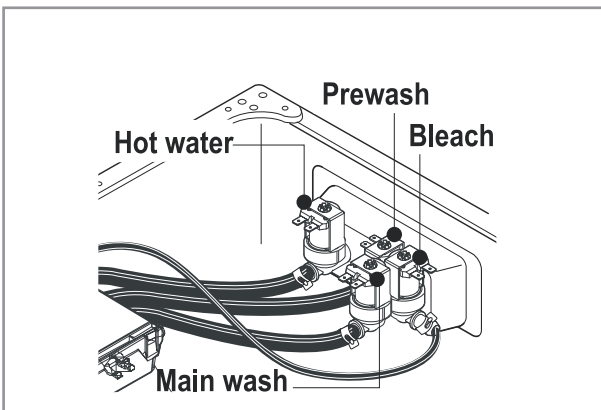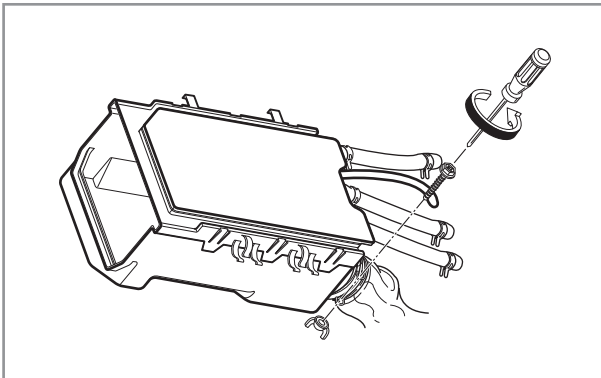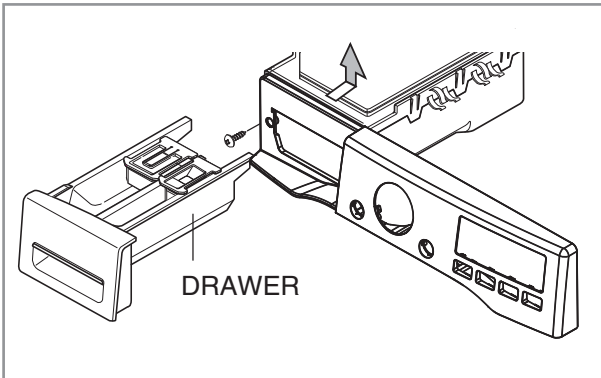

NOISE FILTER

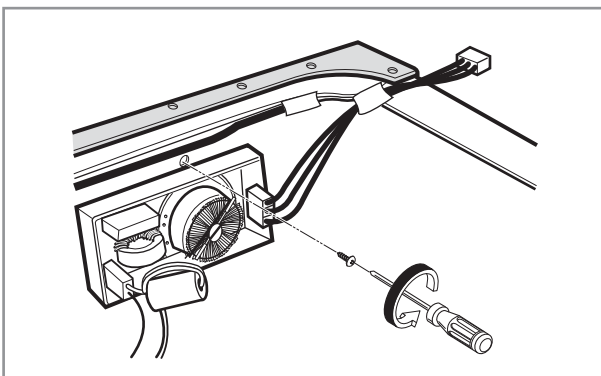

- ① Disassemble the top plate assembly.
- ② Pull out the drawer.
- ③ Push out the dispenser assembly after unscrewing 2 screws.

- ④ Unscrew the clamp nut at the lower part of the dispenser.

- ⑤ Disassemble the 4 connectors from the valves.


※ Wire Color

- ① Blue Housing (YL-BK)
- ② White Housing (WH-BK)
- ③ Blue Housing (GY-BK)
- ④ Red Housing (BL-BK)


- ⑥ Unscrew 2 screws from the back of the cabinet.

- ① Disassemble two (or three) connectors from the noise filter.
- ② Unscrew a screw from the top bracket.


CABINET COVER

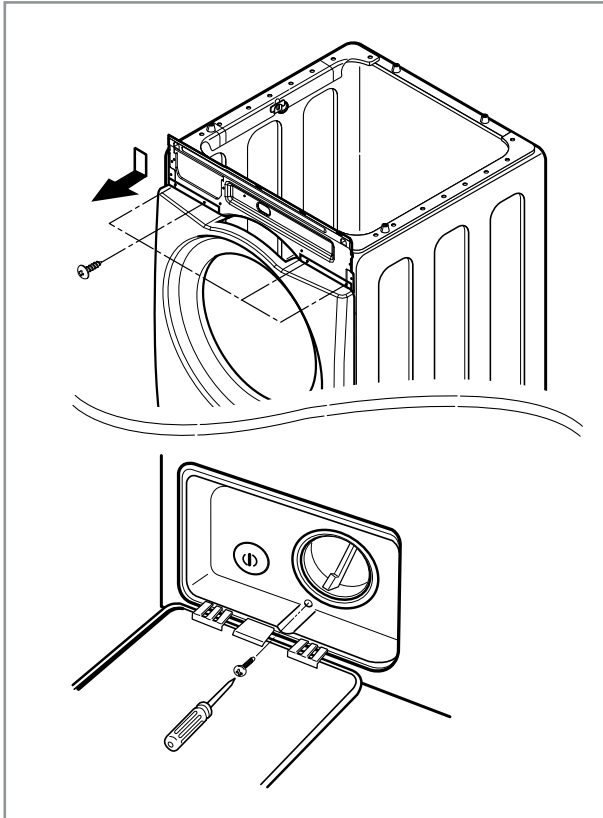


- ① Unscrew the 5 screws from upper of the cabinet cover.
- ② Unscrew the screw from the filter cover.

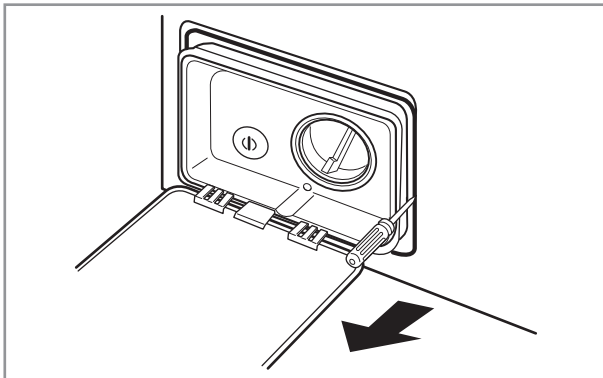


- ③ Put a flat (-) screwdriver or putty knife into the hinge slots at the bottom of the cover and pry it out.

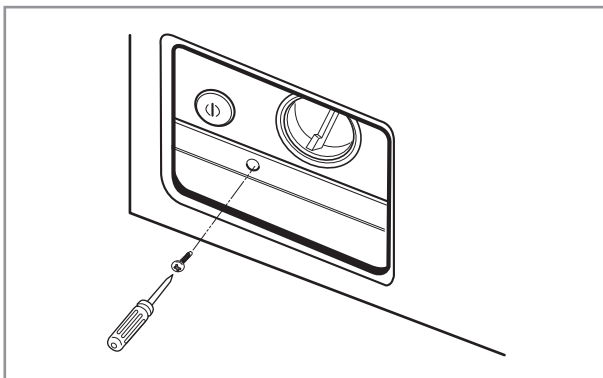

- ④ Unscrew the screw from the lower side of the cabinet cover.

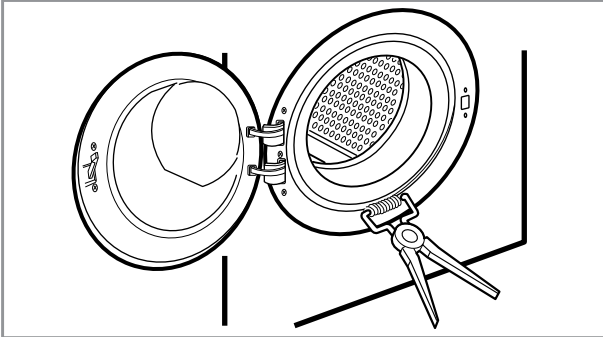


- ⑤ Open the door.
- ⑥ Disassemble the clamp assembly.

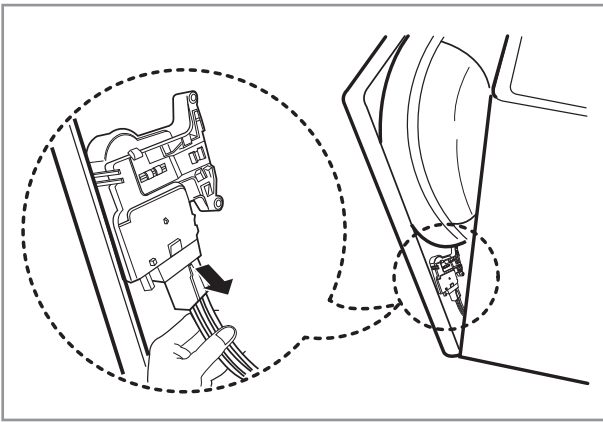


- ⑦ Tilt the cabinet cover.
- ⑧ Disconnect the door switch connector.

※ **NOTE** : When assembling the cabinet cover, connect the door switch connector.


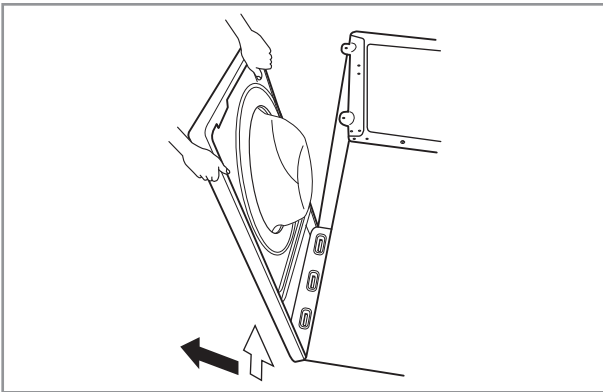


- ⑨ Lift and separate the cabinet cover.

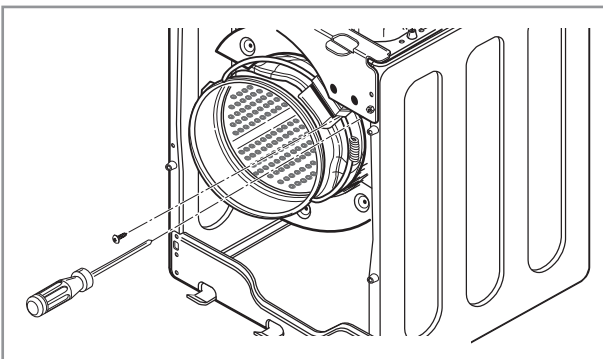

- ⑩ Disassemble the clamp assembly.
- ⑪ Disassemble the gasket.


DOOR

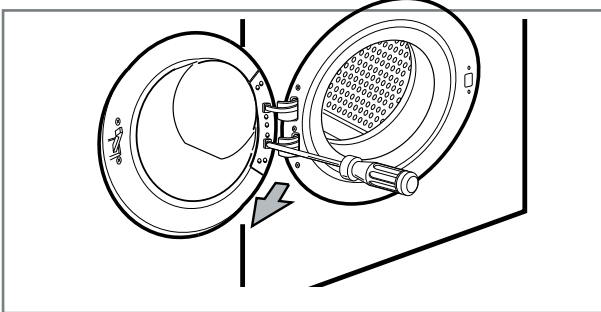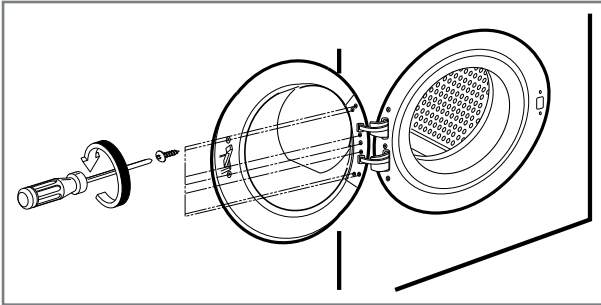

- ① Open the door.
- ② Unscrew the 4 screws from the hinge.
(Use the 8mm tool.)

- ③ Disassemble the door upward.

DOOR LOCK SWITCH ASSEMBLY

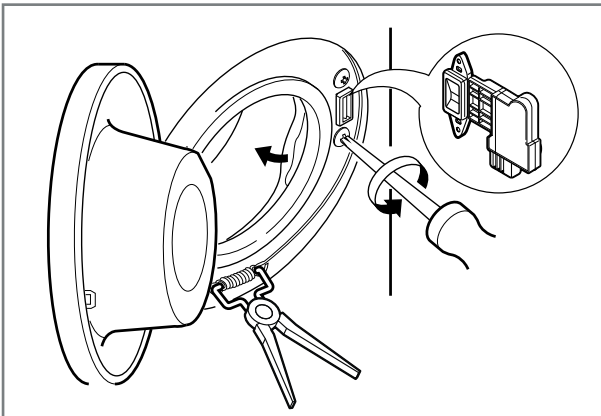


- ① Open the door and remove the gasket using the special gasket pliers.
- ② Unscrew the 2 screws.

※ NOTE


- Reconnect the connector after replacing the door switch assembly.

PUMP

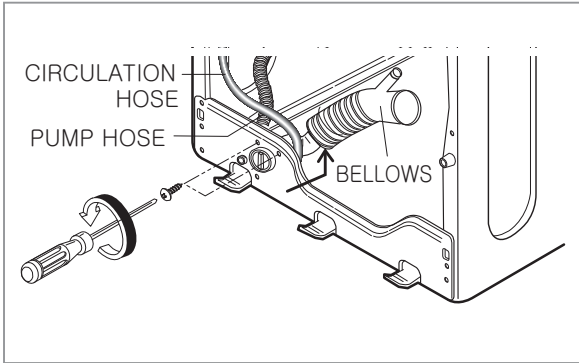


- ① Disassemble the cabinet cover.
- ② Separate the pump hose, the bellows, the circulation hose assembly from the pump assembly.
- ③ Disassemble the pump assembly.

WHEN FOREIGN OBJECT IS STUCK BETWEEN DRUM AND TUB

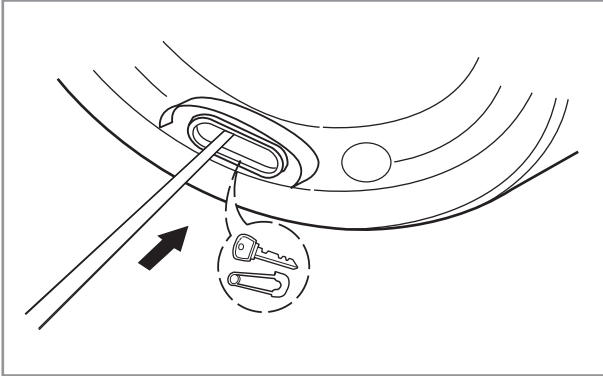


- ① Disassemble the cabinet cover.
- ② Separate the heater from the tub.
- ③ Remove any foreign objects (wire, coin, etc.) by inserting a long bar in the opening.

LAMP ASSEMBLY

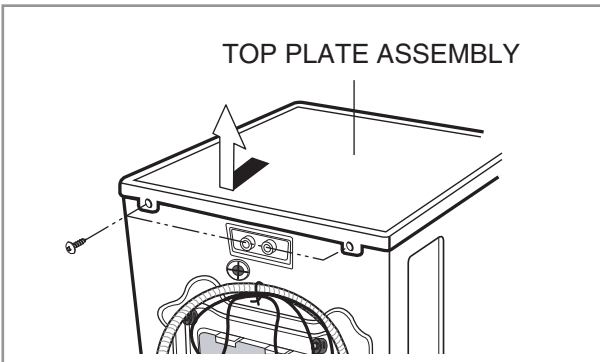


- ① Unscrew 2 screws on the back of the top plate.
- ② Pull the top plate backward and upward as shown.

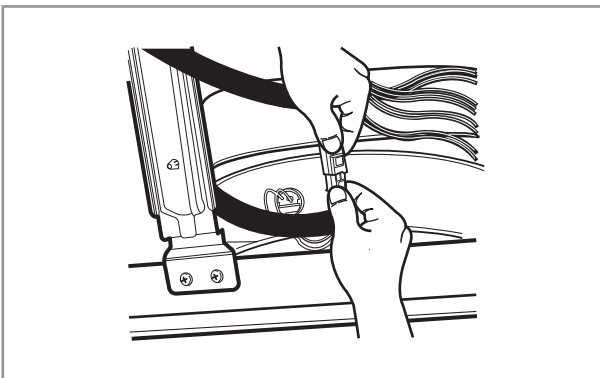


- ③ Disconnect the connector.


MOTOR/DAMPER

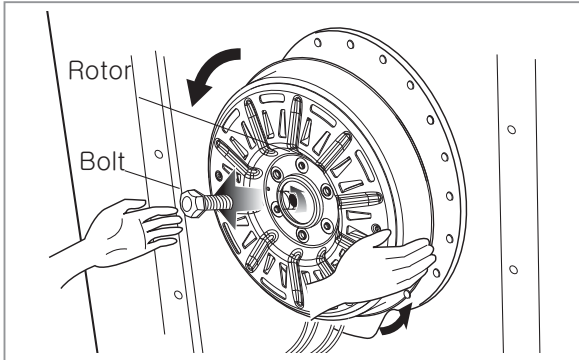

- ① Disassemble the back cover.
- ② Remove the bolt.
- ③ Pull out the rotor.

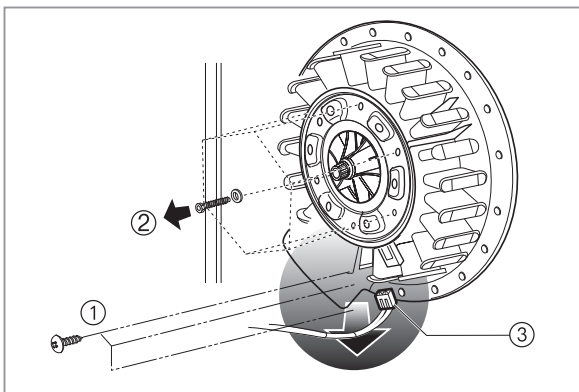

- ① Unscrew the 2 screws from the tub bracket.
- ② Remove the 6 bolts on the stator.
- ③ Unplug the 1 connectors from the stator.

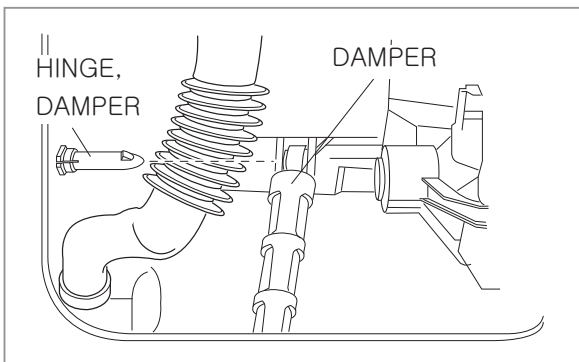


- ① Disassemble the damper hinges from the tub and base.

※ NOTE


- ☒ If you pull the dampers apart, they must be replaced. If you do not separate them, they can be re-used.

10. EXPLODED VIEW

10-1. CABINET & CONTROL PANEL ASSEMBLY

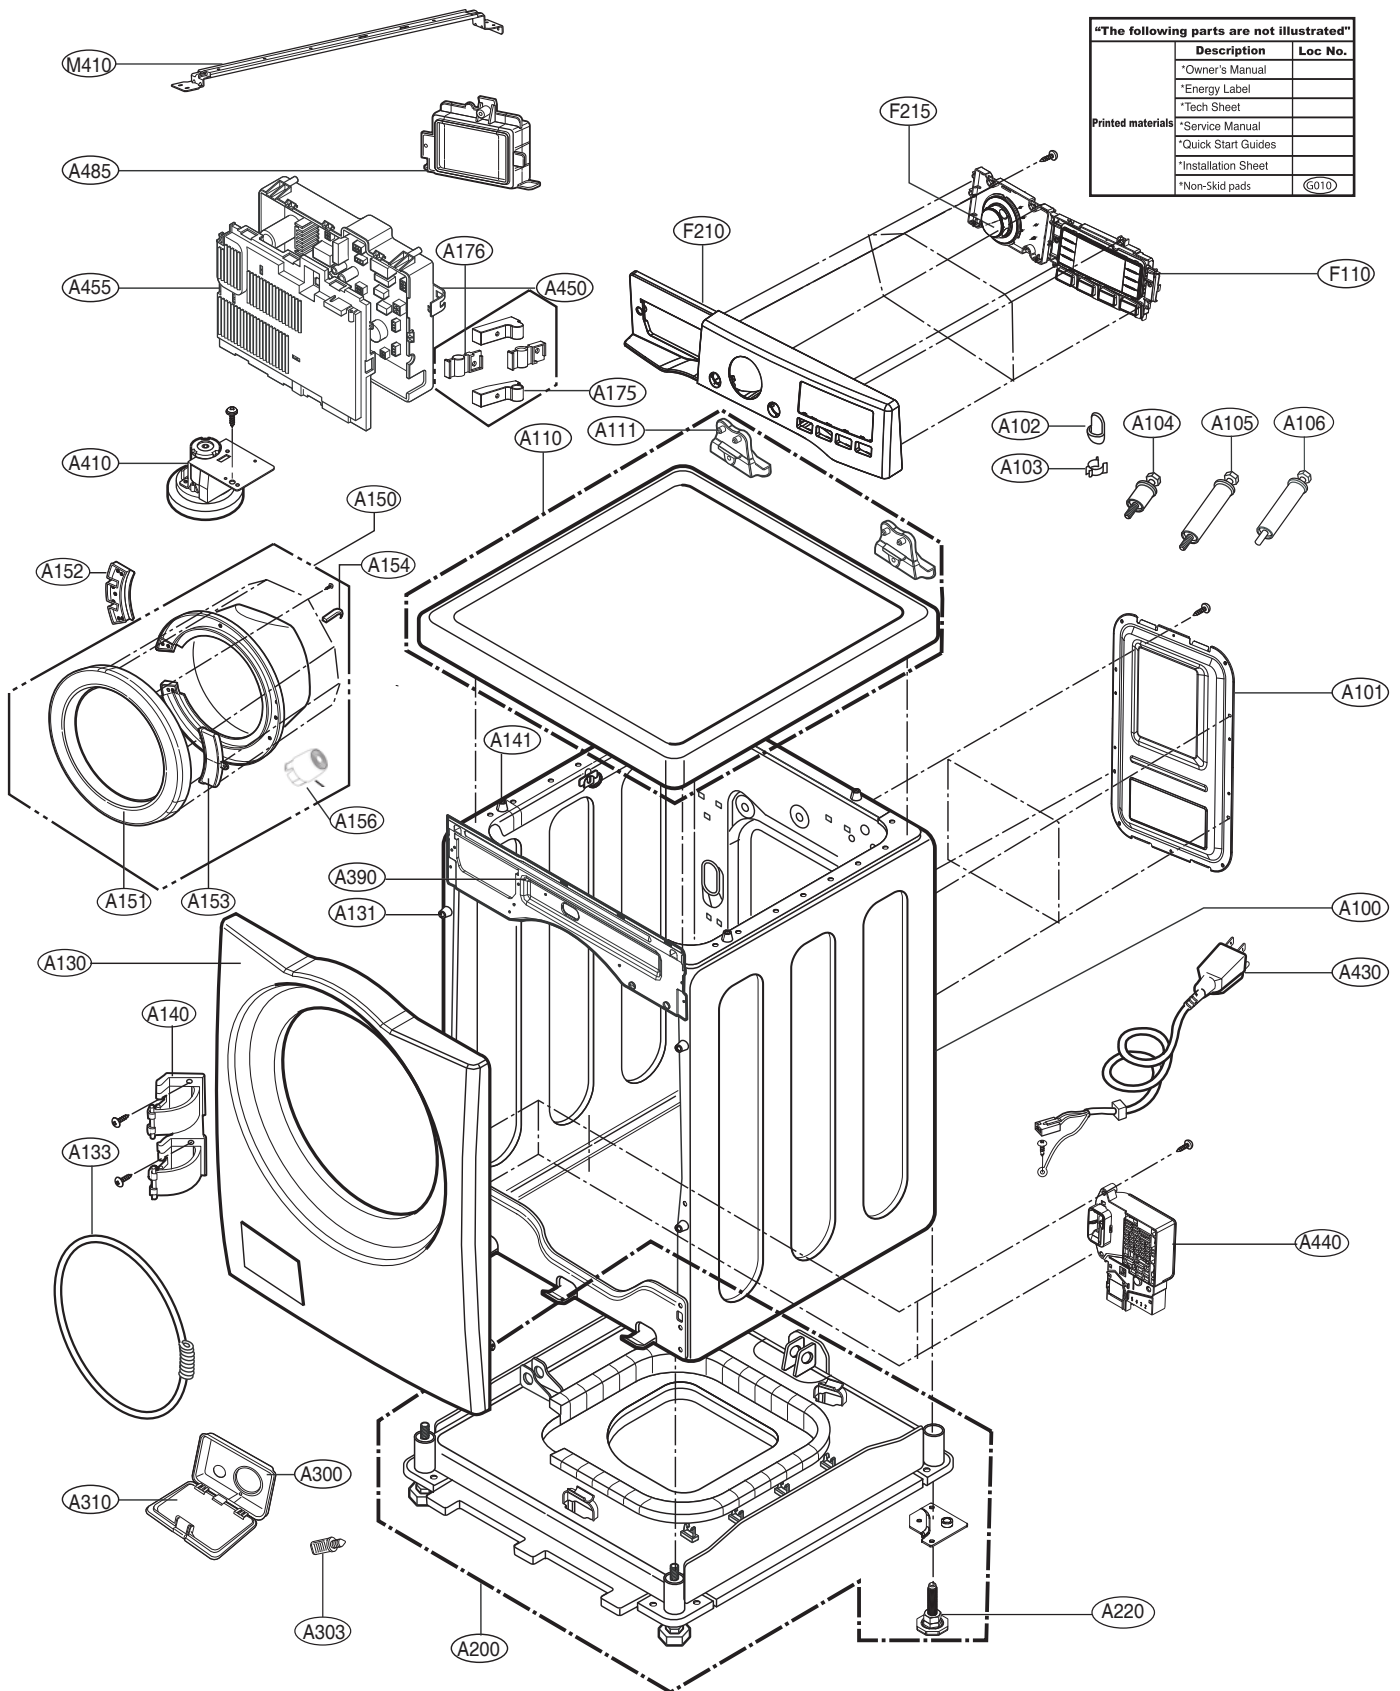

10-2. DRUM & TUB ASSEMBLY

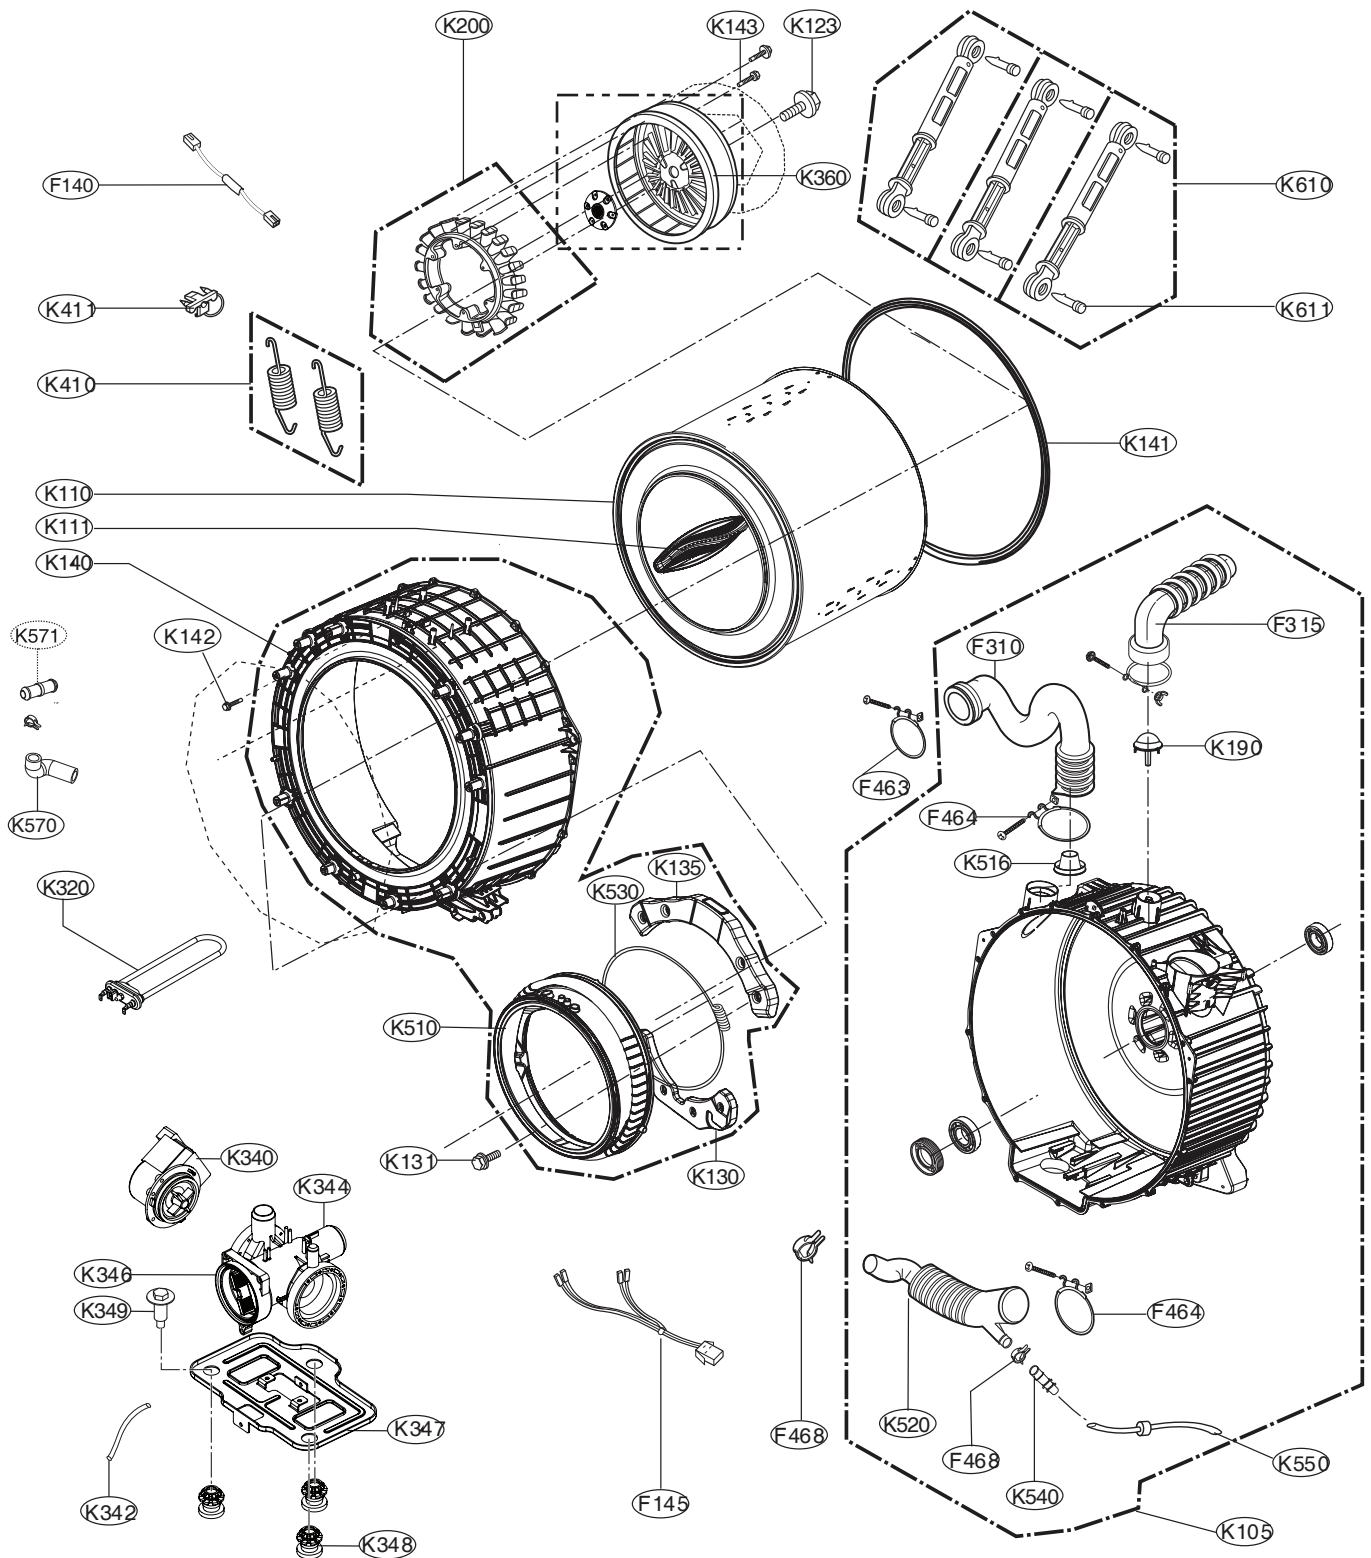


※ In case of replacing THERMISTOR of HEATER ASSEMBLY(K320), replace HEATER ASSEMBLY(K320), HEATER ASSEMBLY(K320) includes THERMISTOR.


※ In case of replacing BEARING,BALL(K121,K122) and GASKET(K125), replace TUB ASSEMBLY, OUTER(K105), TUB ASSEMBLY, OUTER(K105) includes BEARING,BALL(K121,K122) and GASKET(K125).

※ Part Assembly(K142) includes 10 screws.

10-3. DISPENSER ASSEMBLY

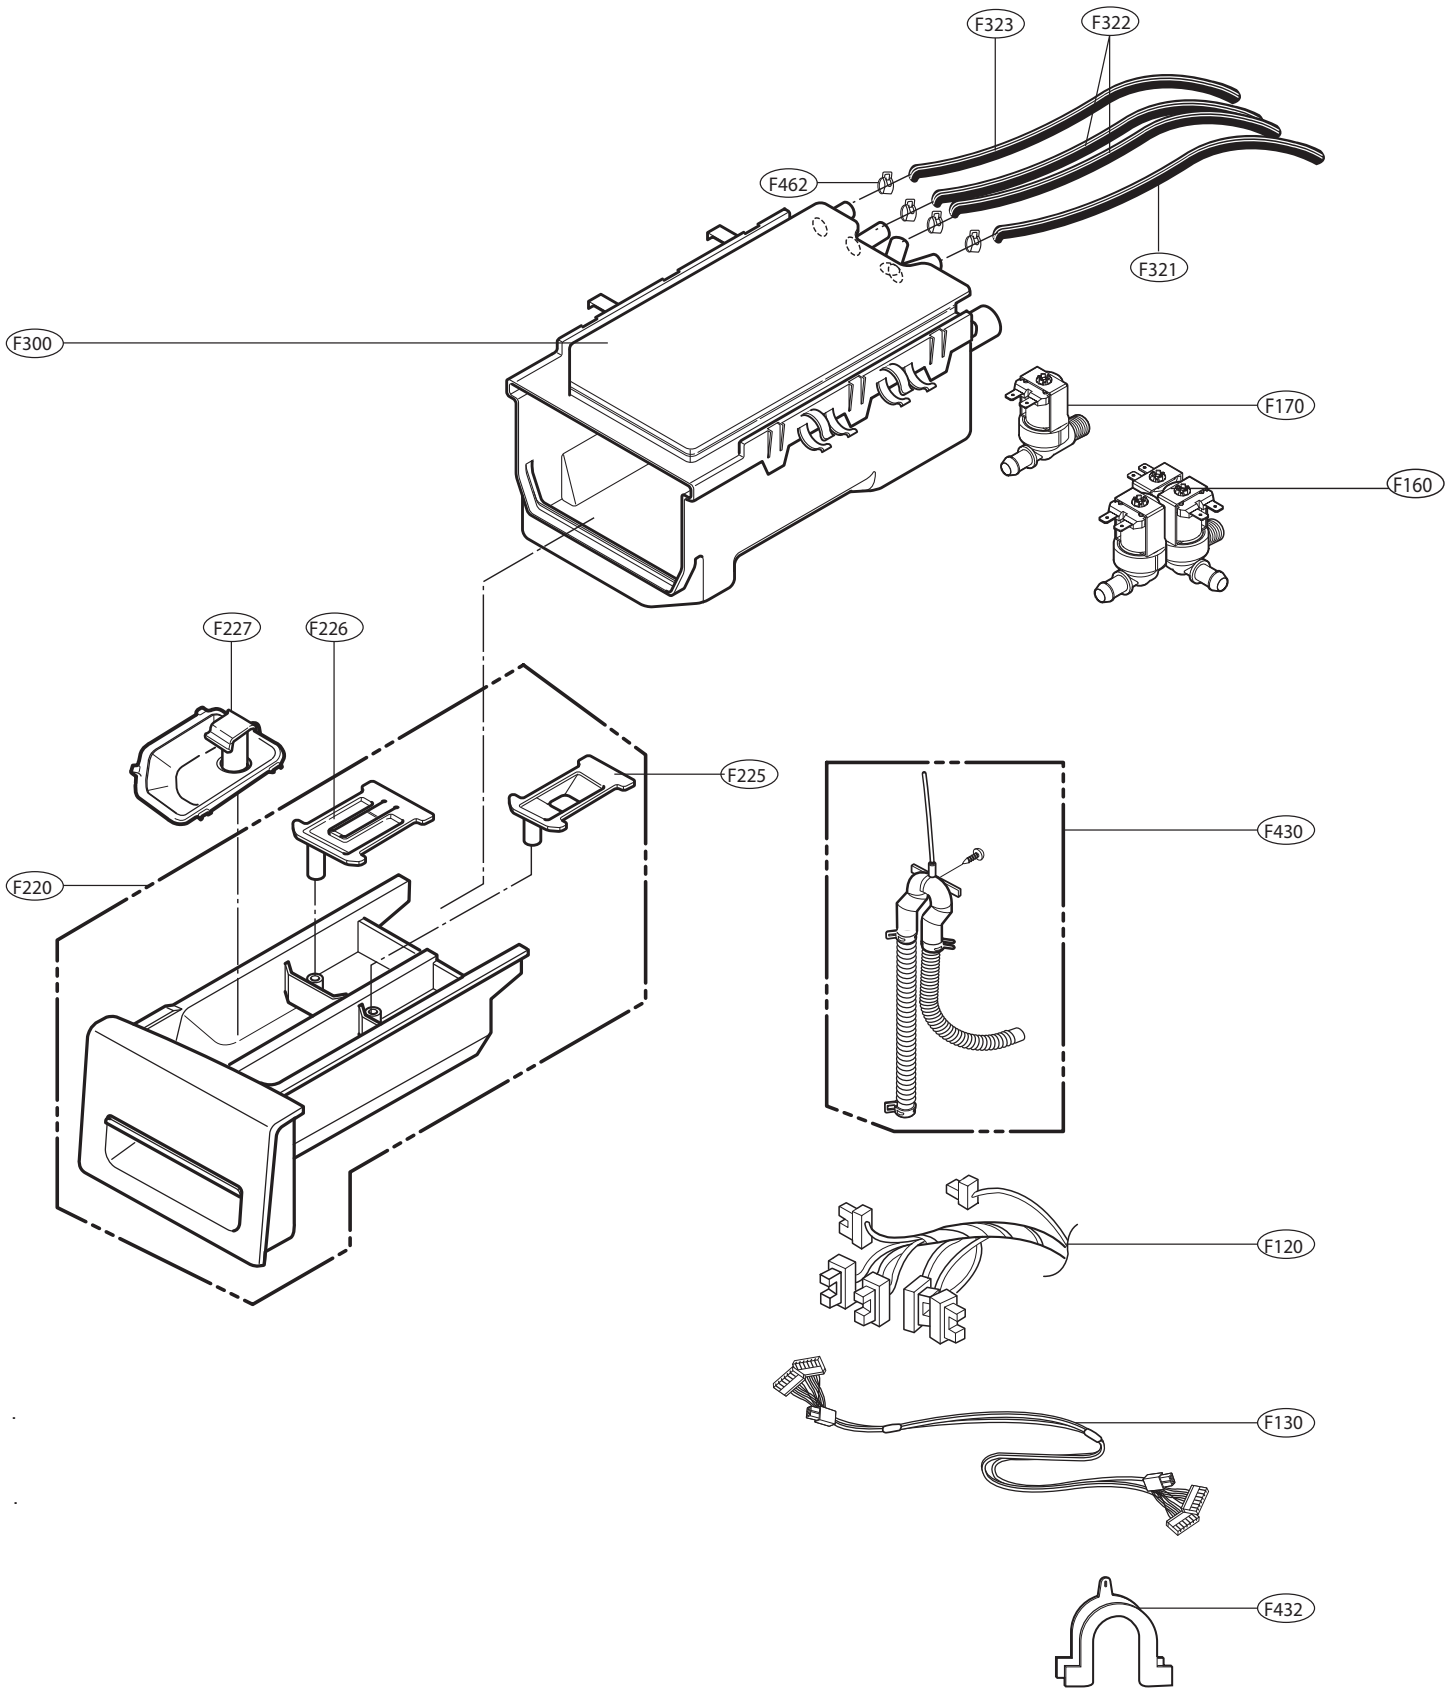

11. Wiring Diagram

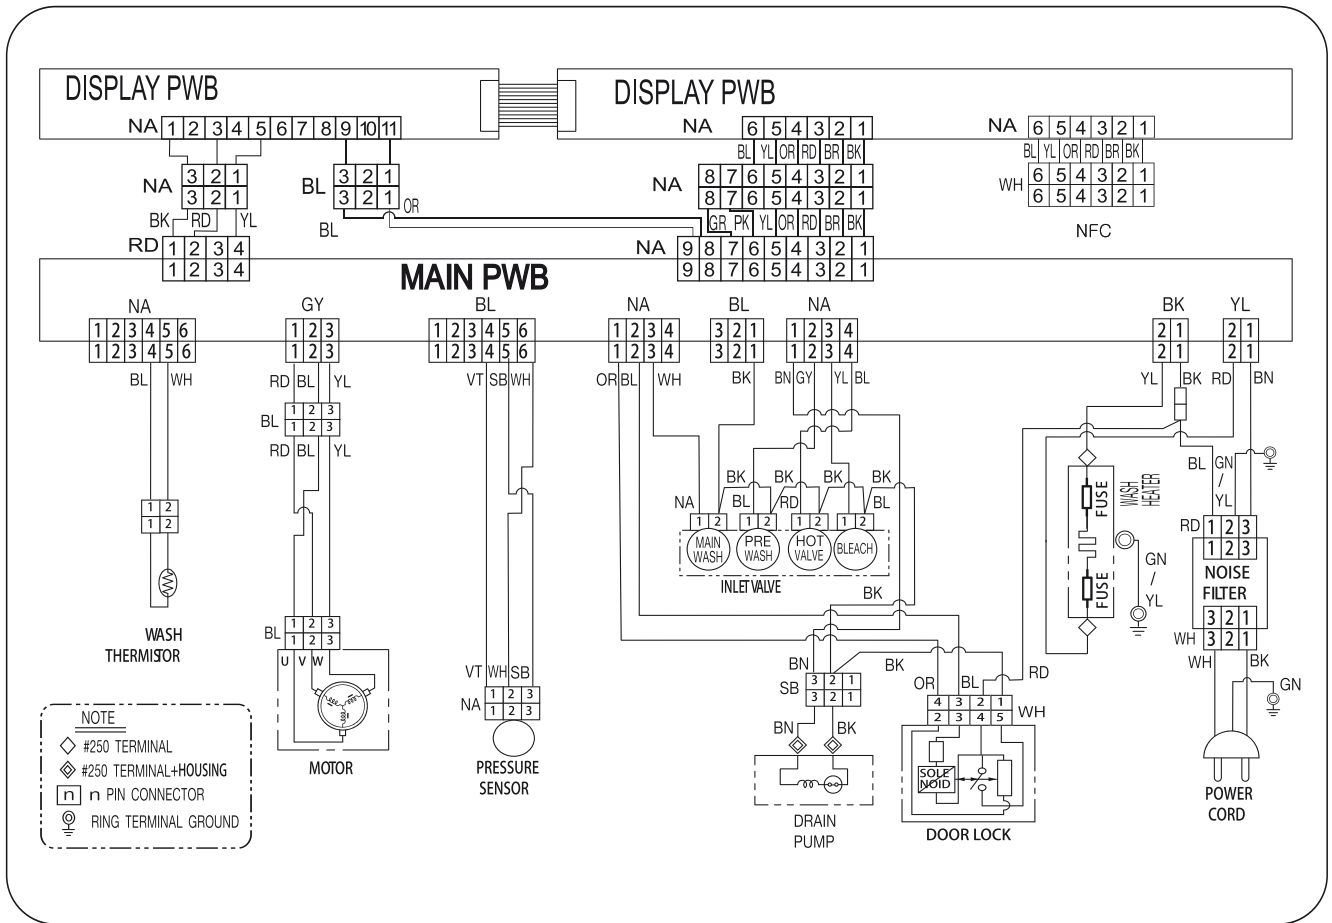

결선도수정 필요



P/No. MFL68588909